


READY • SET • MOUNT®

Thank you for purchasing a Ready•Set•Mount® product. This Ready•Set•Mount® entertainment unit allows you to quickly, safely and easily display your LCD/Plasma television along with supporting components. Please read these instructions carefully to ensure proper use.

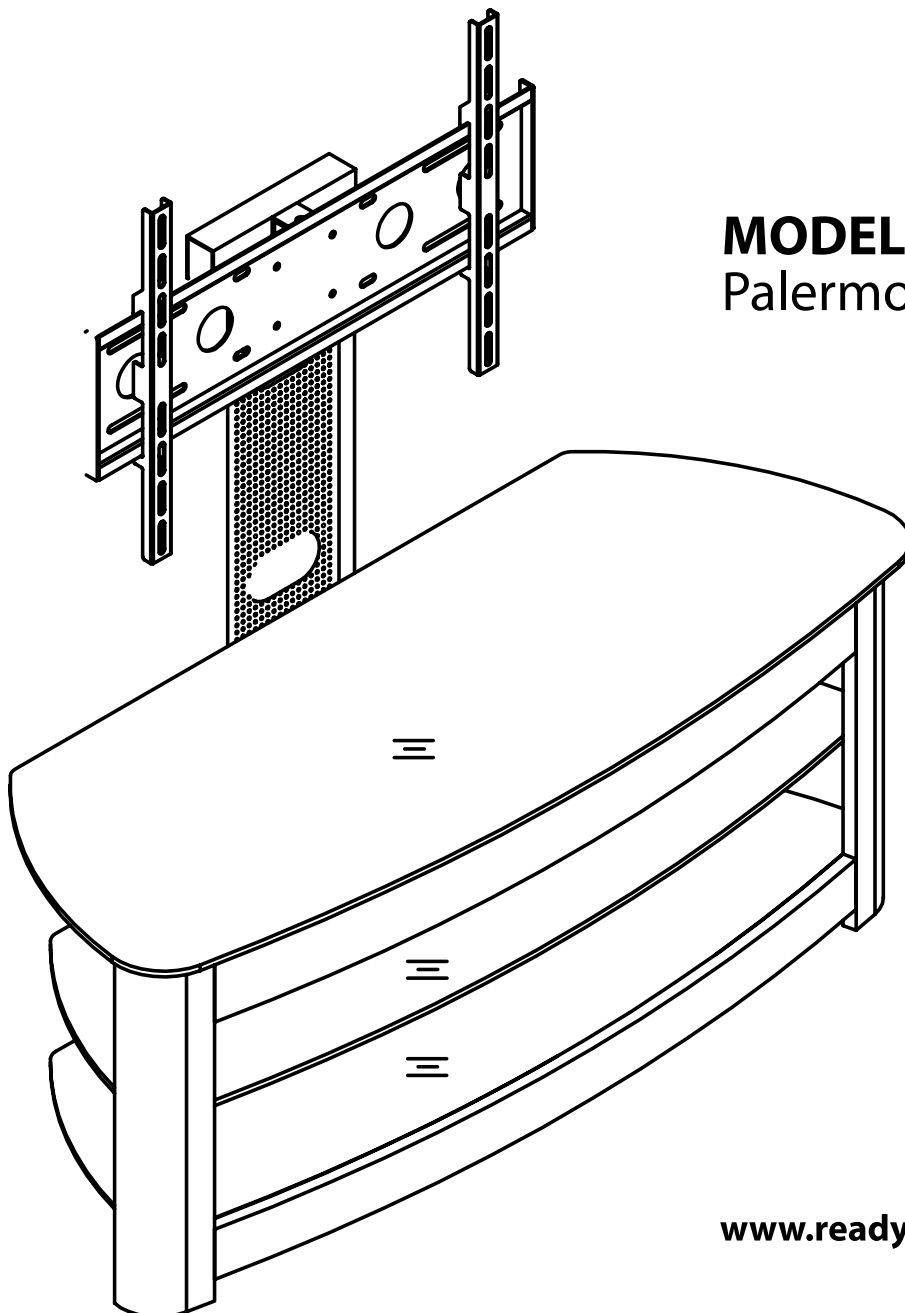



 





 






Check the VESA compatibility of your product to certify proper installation. For further detailed installations, please refer to our website at www.readysetmount.com.




 
 




 
 













 
 

MODEL: CC-P52
Palermo




www.readysetmount.com

Parts List:

NO.	DESCRIPTION	QTY
A	M6 	8
B	15mm 	8
C	6 	2
D	15-M6 	6
E	M6x12mm 	8
F	M6x15mm 	4
G	M6x25mm 	4
H	M6x35mm 	2
I	M6x54mm 	4
J	M6x25mm 	2
K	50xM8 	2
L	19 	4
M	12.5xT3.5mm 	9
N	M6 	4
O	M6 	6
P	M4 	2
Q	M10 	1

NO.	DESCRIPTION	QTY
1		1
2		1
3		1
4		1
5		1
6		1
7		1
8		2
9		1
10		1
11		1
12		2
13		1

NO.	DESCRIPTION	QTY
S1	M4x12mm 	4
S2	M5x12mm 	4
S3	M6x12mm 	4
S4	M8x15mm 	4
S5	M4x32mm 	4
S6	M5x32mm 	4
S7	M6x32mm 	4
S8	M8x32mm 	4
S9	19x6.2mm 	4
S10	22x6.2mm 	4
S11	14x14mm 	4
S12	25x13mm 	4

NO.	DESCRIPTION	QTY
AA	8mm 	4
BB	8x45mm 	4
CC	22mm 	4




There are three different configurations with which you may use your TV on the stand/mount:

Option 1: TV on stand


Option 2: TV mounted on stand

Option 3: TV mounted on wall


Option 1: You can use the TV stand as a free-standing unit on which to place your TV, as well as, additional audio/video components.

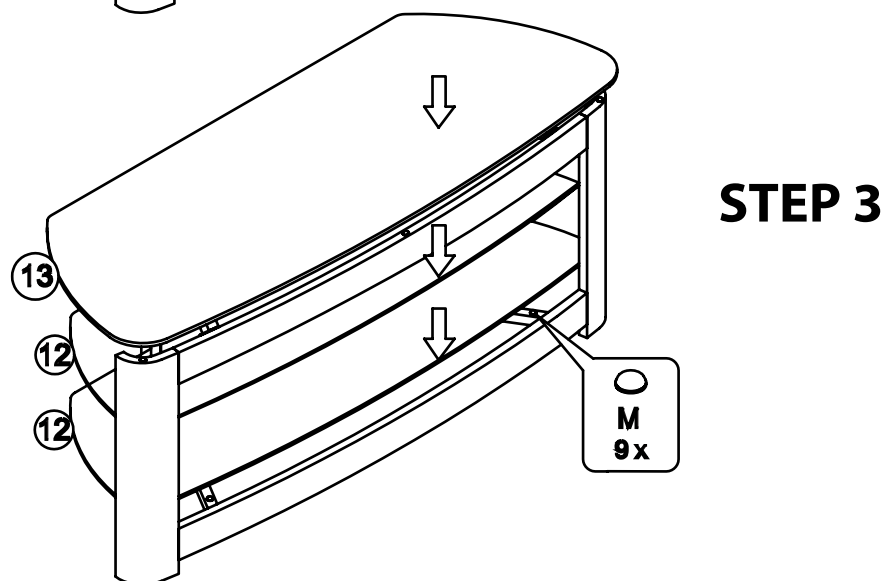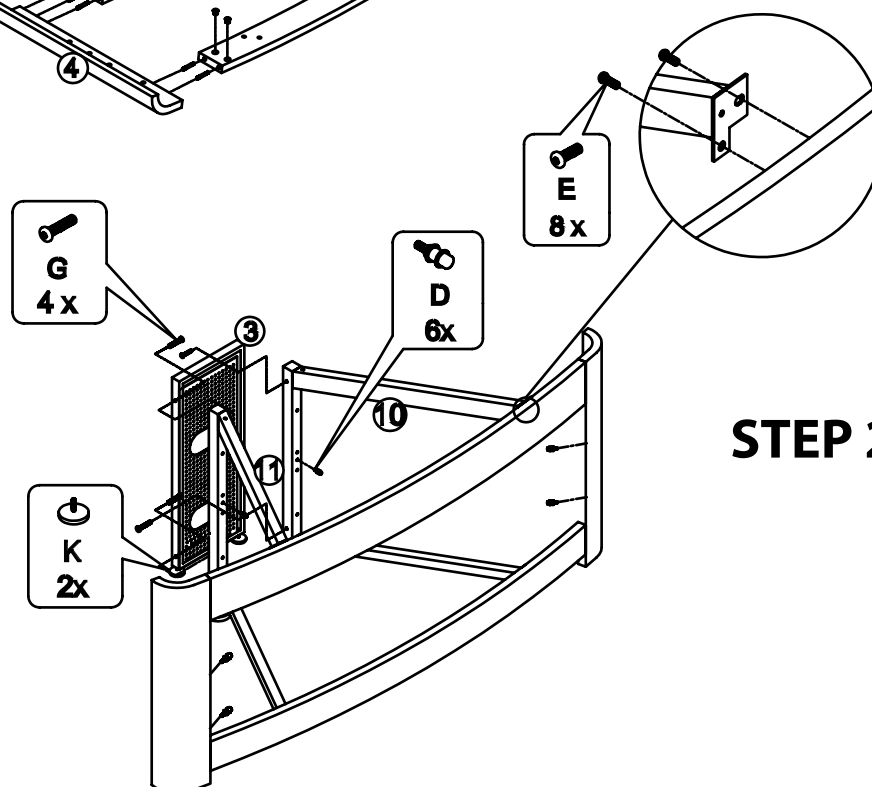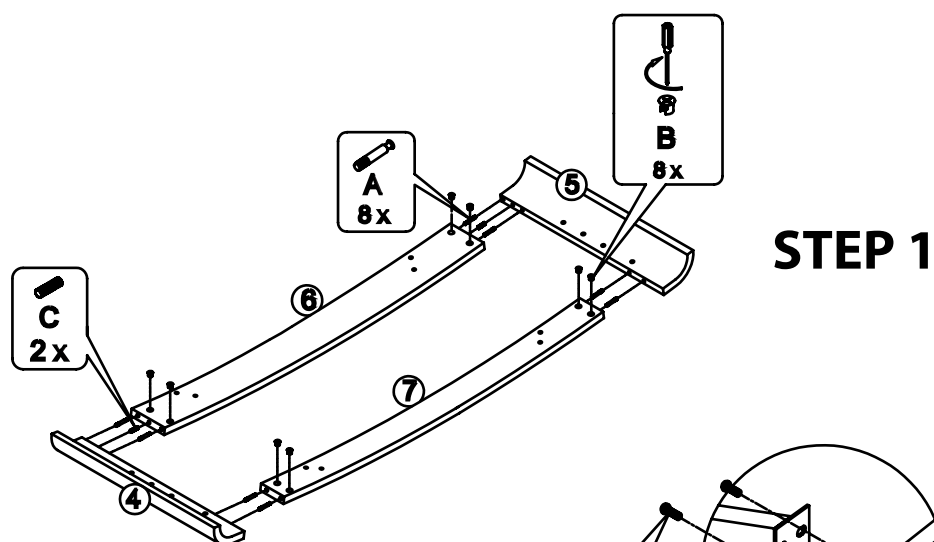

Option 2: TV stand with LCD/plasma TV floating mount; you can affix the LCD/Plasma TV floating mount to the TV stand for an all-in-one unit.

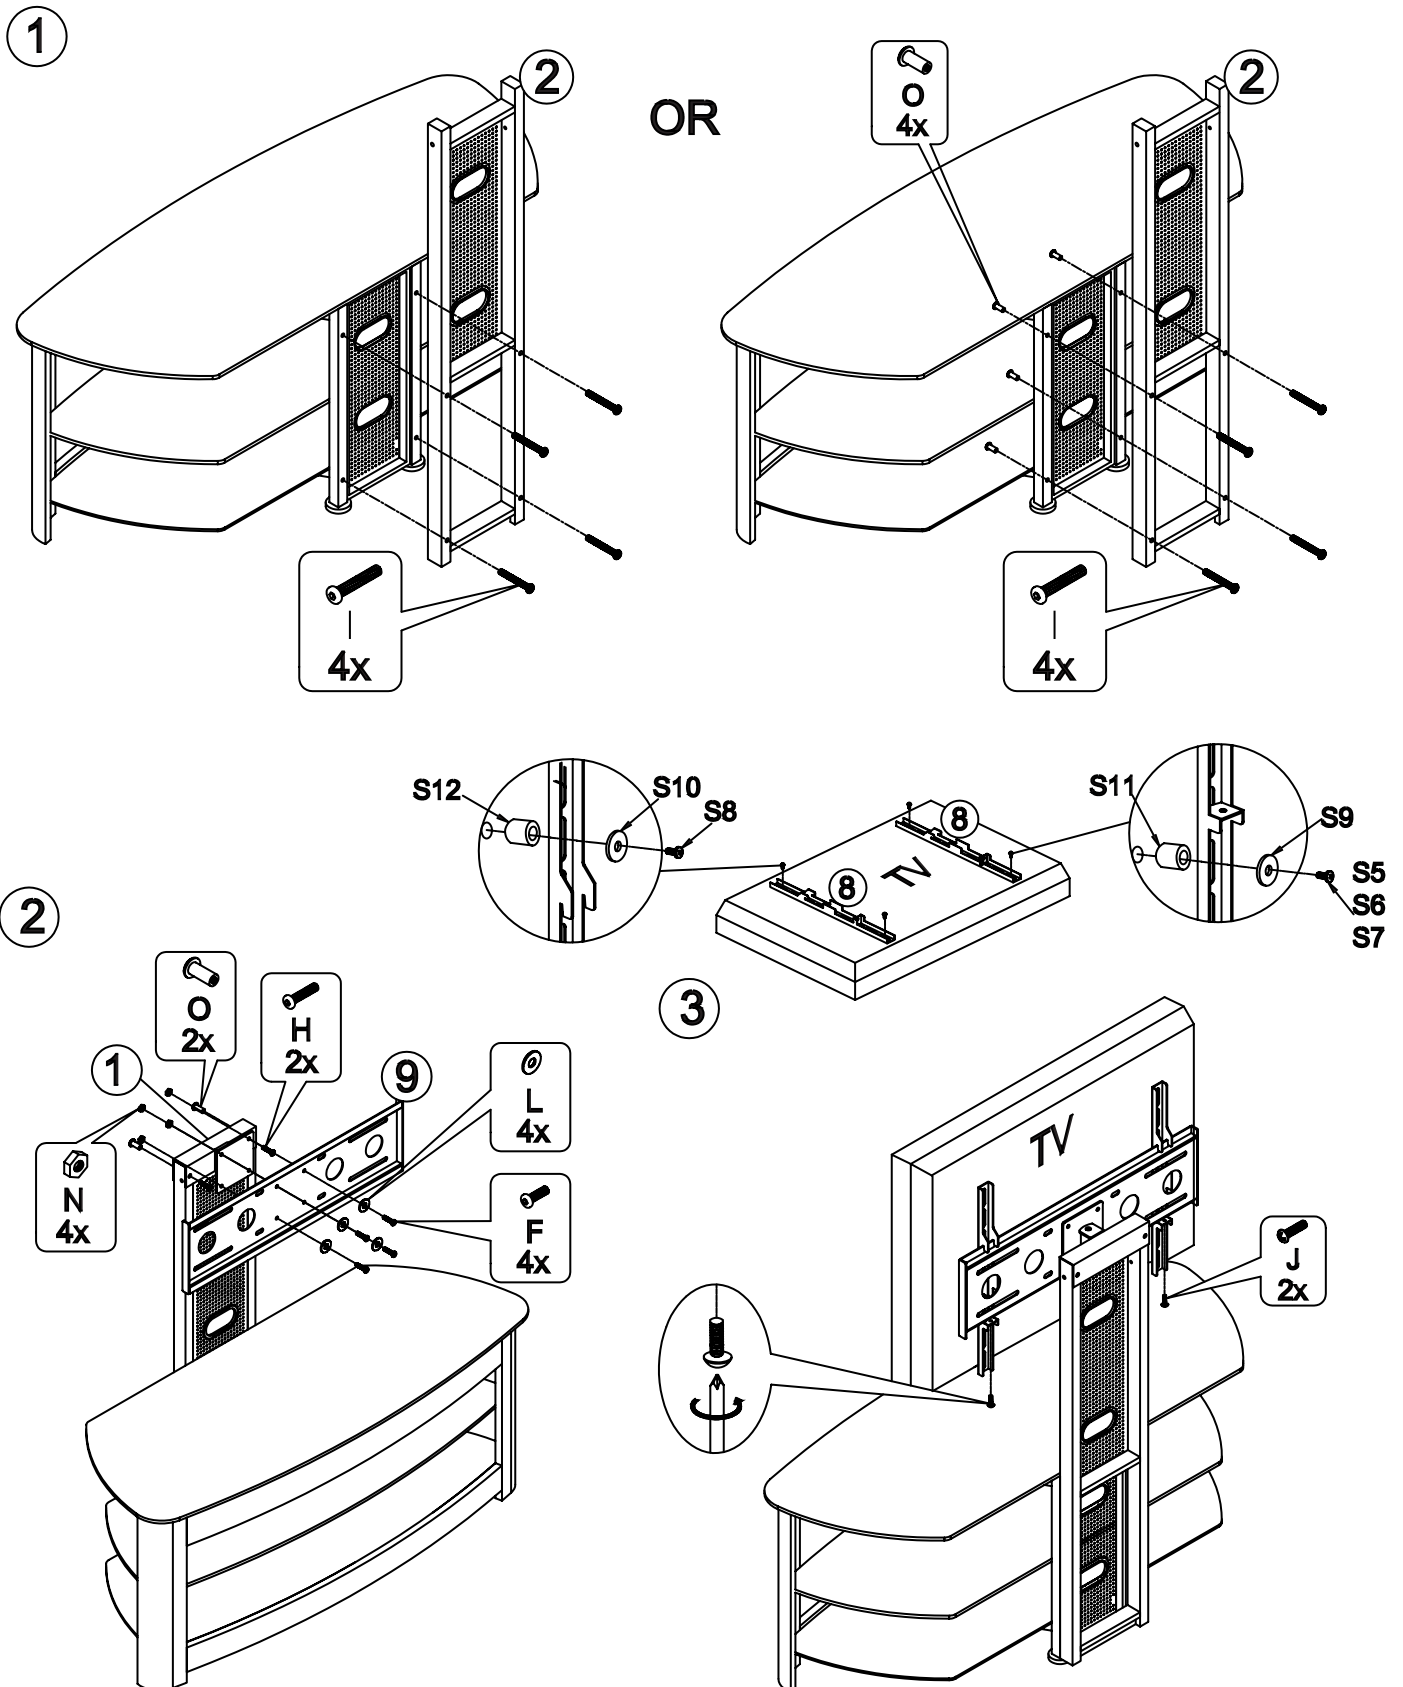

Option 3: You may mount your LCD/Plasma TV directly to the wall and use the stand for additional audio/video components.

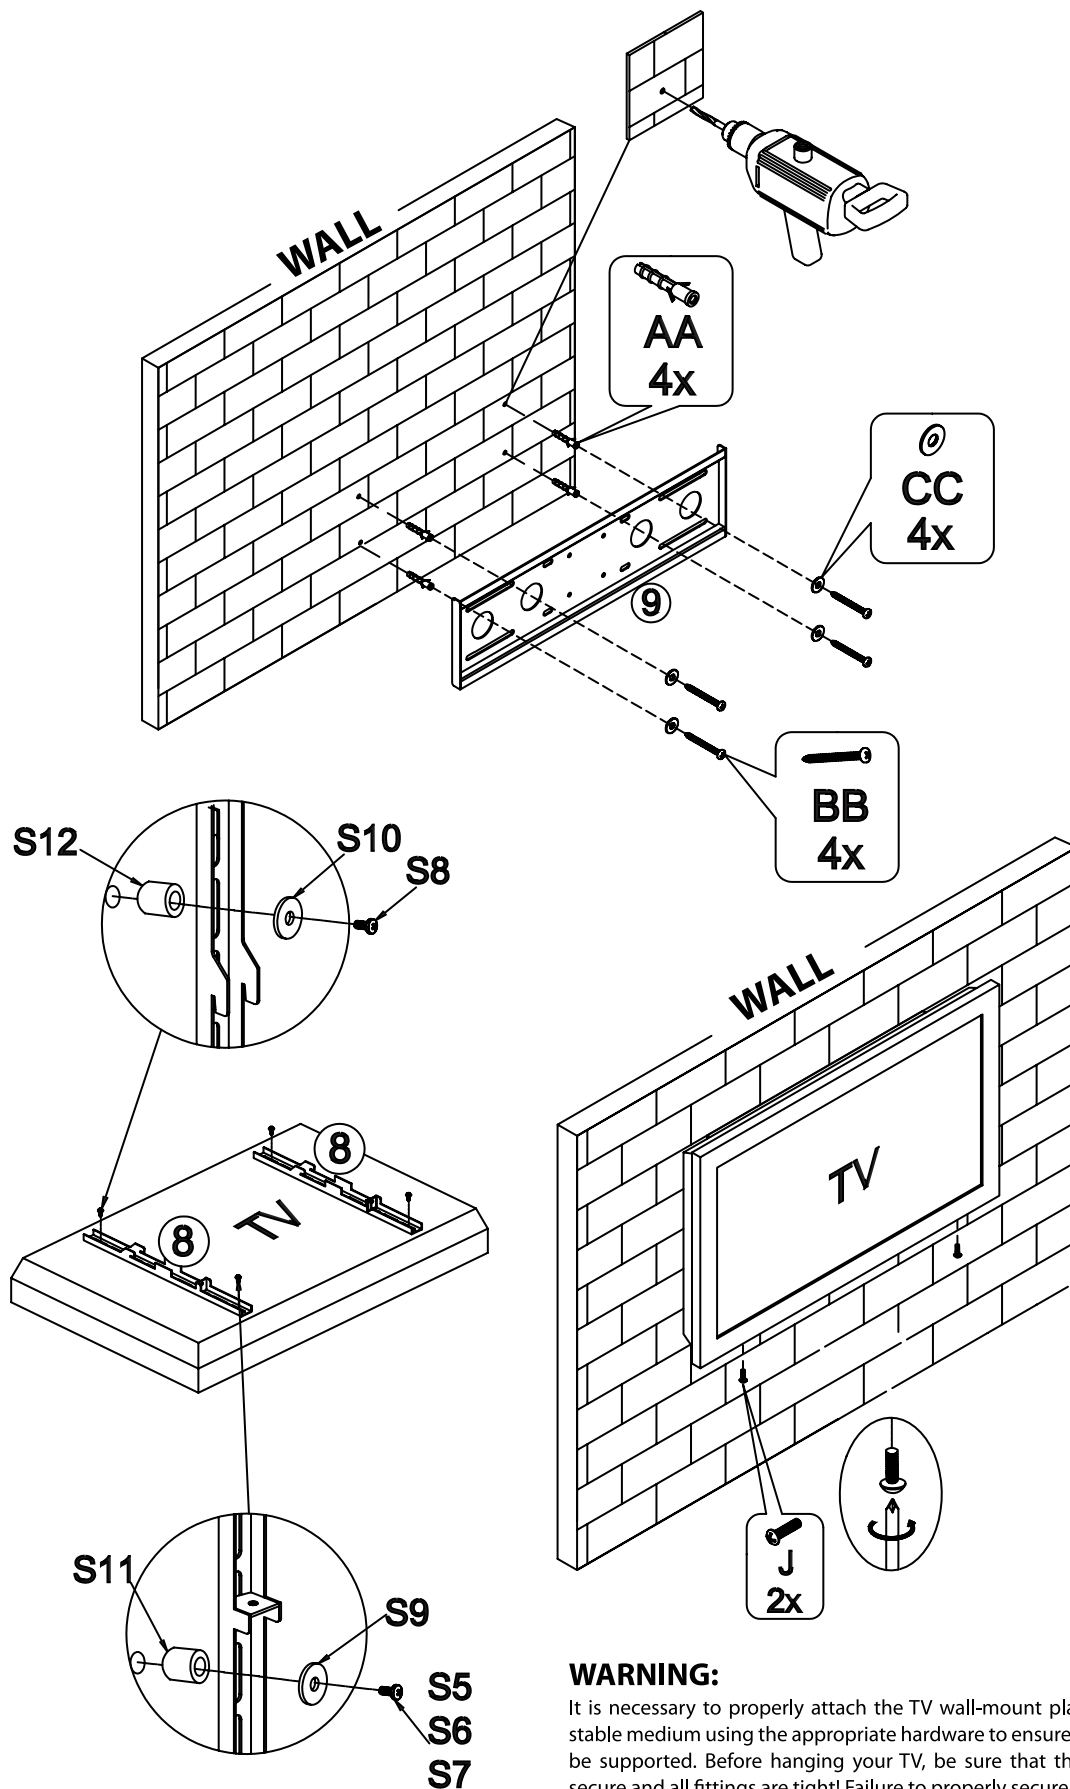

WARNING:

It is necessary to properly attach the TV wall-mount plate to wall studs or other stable medium using the appropriate hardware to ensure the weight of your TV will be supported. Before hanging your TV, be sure that the TV wall-mount plate is secure and all fittings are tight! Failure to properly secure the wall-mount hardware may result in damage to or breakage of your TV, or may cause bodily harm.

CC-P52 Palermo

PRE-ASSEMBLY INSTRUCTIONS

- 1.)** Find a suitable location for assembly with no rough surfaces that could scratch or damage the TV Stand's glass or finish. A drop cloth or other suitable floor covering is suggested. Assemble as close as possible to where the unit is intended to be used.
- 2.)** Unpack and check the contents of the box to make sure that all parts match those in the Parts List. Most tools required for assembly are packed inside. A level is recommended.
- 3.)** 2 persons are advised for assembly.

SUPPORT ASSEMBLY

- 1.)** Take the Wood Frame Support Screws (PART A) and insert and thread into the Vertical Wooden Supports (PARTS J and K) tighten with Screw Driver until firm.
- 2.)** Insert two (2) Wood Dowels (PART B) into the two remaining holes of the Wooden Vertical Supports (PARTS J and K).
- 3.)** Next, take the Cam Screws (PART C) and insert into the corresponding holes of the Horizontal Wooden Supports (PARTS L and M).
- 4.)** Align the Upper Horizontal Support (PART M) and the Vertical Support (PART J) so that the finished sides are facing the same way and that the Three Holes are lined up with the Screws/Wood Dowel. The Upper Edge of both pieces should be level. If not, check to make sure you have the right parts. Push the two pieces together as far as possible. Take your screw driver and firmly tighten the Cam Screws (PART C) so that the pieces are secured together.
- 5.)** Then take the Lower Horizontal Support (PART L) and securely attached to the Vertical Support (PART J) using the same method as Step 4.
- 6.)** Find the remaining Vertical Support (PART K) and attach securely to the Upper and Lower Horizontal Support (PARTS L and M) using the same method as Step 4.
- 7.)** Take two (2) Glass Support Rests (PART F) and insert and tighten firmly one each in the desired holes along the unfinished sides of the Vertical Supports (PARTS J and K). Make sure they are correctly aligned as later the Middle Glass Shelf (PART P) will be placed on top of them.
- 8.)** Take the Right Metal Support Frame (PART R) and attach to the rear of the Assembled Wooden Frame using the screws provided (PART E). Make sure that the piece is aligned correctly so that the feet at the rear are facing down and that the top of the Frame is level with the top of the completed Wooden Frame Assembly.
- 9.)** Taking the Left Metal Support Frame (PART S) repeat Step 8.
- 10.)** Next take the Rear Feet (PART H) and insert and thread into the bottom of the Wire Management Backing (PART N).
- 11.)** Then align the Backing (PART N) so that the flush side is facing towards the front of the unit and so that it is between both Metal Support Frames (PARTS R and S). Make sure that the four (4) screws holes at the sides of the Backing (PART N) are correctly aligned with the corresponding holes of the Metal Support Frames (PARTS R and S).
- 12.)** Using the four (4) screws provided (PART D) securely attach the Wire Management Backing (Part N) to both Support Frams (PARTS R and S).
- 13.)** Take two (2) Glass Support Rests (PART F) and insert and tighten firmly into the desired holes of the Metal Support Frames (PARTS R and S). Make sure they are correctly aligned with the same Glass Support Rests assembled in Step 7 as later the Middle Glass Shelf (PART P) will be placed on top of them. They should be level.
- 14.)** Find the Rubber Nibs (PART G) and attach five (5) along the top of the Wood and Metal Support Frames (PARTS J,K,M,R, and S) so that once placed on top, the Upper Glass Shelf (PART O) will be able to rest even and secure.
- 15.)** Attach the remaining Rubber Nibs (PART G) along the top of the Metal Support Frames (PARTS R and S) so that once placed on top, the Lower Glass Shelf (PART Q) will be able to rest even and secure.

TV MOUNT ASSSEMBLY

- 1.)** Find the Wire Management Frame (PART M) and arrange so that the flush side is facing forward.
- 2.)** Take the TV Mount Support (PART J) and place over the top of the Wire Management Frame (PART M). Make sure that the Mount Support Attachment Plate with 4 screw holes is extending forwards from the Wire Management Backing. Check to see that all the holes on the front and back of the Frame (PART M) line up with the corresponding holes on the Support (PART J).
- 3.)** Attach by inserting two (2) Screw Receptacles (PART E) from the rear and threading in two (2) M6 x 35 mm Screws (PART B) from the front of the unit. Tighten until secure.
- 4.)** Take four (4) M6 x 15 mm Screws (PART A) and insert into the four (4) M6 Washers (PART E) provided. Next, with the Screws inserted through the corresponding holes in the Mount Plate (PART L) attach to the front of the TV Mount Support (PART J). Secure by threading four (4) M6 Nuts (PART G) by hand on the Screws (PART A) then use a Wrench and a Screwdriver to tighten until secure.
- 5.)** Next take the completed Wire Management Frame/TV Mount Support (PARTS J,L, and M) and place at the rear of the completed TV Stand Frame so that the Screw Holes line up. Then insert four (4) Screw Receptacles (PART E) from the front of the unit so that four (4) M6 x 54 mm Screws can be threaded in from the rear. Tighten Firmly.
- 6.)** The entire TV Stand Support and TV Mount should now be complete.

FINAL PLACEMENT OF GLASS SHELVES

- 1.)** Insert the Glass Shelves (PARTS O,P,Q) bottom shelf first, middle second, and top shelf last. Make sure the glossy side of each Shelf is facing up.
- 2.)** Slide the Bottoms Shelf (PART Q) into place by inserting it from the side of the TV Stand and tilting it on an angle so that the rear part of the shelf is higher. Direct the front side of the glass until it fits snugly up against the Frame towards the front of the unit. Then gently lower into place.
- 3.)** Repeat the same step with the Middle Glass Shelf (PART P) making sure that the Glass is able to rest level and secure on the Glass Support Rests previously assembled.
- 4.)** Lastly place the Top Glass Shelf (PART O) on top of the Frame so that the front edge is flush with the front edge of the Frame and so that there is no gap between the rear of the glass and Wire Management Frame at the back.

MOUNTING THE TV

- 1.)** Take the two (2) TV Mount Arms (PART K) and place over the back of your TV so that their holes line up with those of the TV underneath.
- 2.)** Next, select the hardware needed for attaching the arms to your TV. Your mount comes with a selection of bolt diameters and lengths to accommodate a wide variety of display models. Not all of the hardware in the kit will be used. Determine the correct length of bolt to use with your display by examining the back of your display. If your display has a flat back, you will use shorter screws. If your display has a curved or recessed back, you will use longer screws. Determine the correct diameter of bolt to use by carefully trying one bolt each from the hardware kit. Do not force any of the screws – if you feel resistance stop immediately
- 3.)** Once you have selected your Screws (PARTS S1 thru S8) and Washers (S9 or S10) insert through the appropriate mounting holes on the TV Mount Arms and thread into the TV. If Spacers (S11 or S12) are needed put between the TV and the TV Mount Arms before inserting the selected Screws and Washers. CAUTION: DO NOT OVER-TIGHTEN. If screws selected are too long and/or over-tightened damage to the electronics within the TV might occur.
- 4.)** Once the TV Mount Arms are securely fastened to the back of the TV pick up the TV and place on the TV Mount (PART L) so that the grooves behind the arms are securely attached to the TV Mount's upper and lower sections. IMPORTANT: This step should be done by more than one person as lifting too much weight could cause injury or damage.
- 5.)** Secure the TV Mount Arms to the TV Mount with the Security Screws (PART D) provided. Tighten until you are satisfied that the TV cannot be accidentally knocked or pulled off of the TV Stand.

WARRANTY PERIOD: 1 YEAR. Ready Set Mount is a registered trademark of Creative Concepts International. Supplier Warranty: Creative Concepts International LLC will replace this product if, due to defective parts or workmanship, it does not perform as specified by Creative Concepts International LLC. This limited warranty extends to the original purchaser for 1 year from the date of purchase. Creative Concepts International LLC shall warrant any replacement product for the remainder of the Warranty Period of the product which it replaces. In no event does this warranty extend to instances where the product is opened or damaged through abnormal use, misuse, installation, mishandling, neglect, accident tampering or detrimental exposure, including without limitation: (i) abnormal wear and tear or damage caused by use or handling which is contrary to the instructions published by Creative Concepts International LLC, (ii) any cause beyond the control of Creative Concepts International LLC, including without limitation conditions caused by movement, settlement or structural defects of the environment in which the product is installed, fire, wind, hail, flood, lightning or other acts of God, any conditions related to, or caused by, intentional acts, accidents, negligence or foreign matter or energy, or (iii) any damage to the finish of a product after it leaves Creative Concepts International LLC, manufacturing facility. EXCEPT FOR THE FOREGOING, THE PRODUCT IS PROVIDED AS IS% AND CREATIVE CONCEPTS INTERNATIONAL LLC MAKES NO REPRESENTATION OR WARRANTY (WHETHER STATUTORY, EXPRESS OR IMPLIED), INCLUDING WITHOUT LIMITATION ANY REPRESENTATION OR WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OR NONINFRINGEMENT, WITH RESPECT TO THE PRODUCT OR OTHERWISE. TO THE EXTENT AN IMPLIED WARRANTY CANNOT BE EXCLUDED, SUCH WARRANTY IS LIMITED IN DURATION TO THE WARRANTY PERIOD. THIS DISCLAIMER AND EXCLUSION SHALL APPLY EVEN IF THE EXPRESS WARRANTY SET FORTH ABOVE FAILS OF ITS ESSENTIAL PURPOSE. In no event will Creative Concepts International LLC be liable for (i) incidental, special or consequential damages arising out of the use or inability to use the product, or (ii) any OTHER damages in excess of the purchase price arising out of the use or inability to use the product.



**Questions? Visit our website at www.readysetmount.com
or call 1-888-530-7904.**