7-Piece Dining Set **Swivel Chair Assembly Instructions**

WARNING: ADULT ASSEMBLY REQUIRED. CONTAINS SMALL PARTS, SHARP POINTS AND EDGES. DO NOT CLIMB, LEAN, SIT, STAND OR PULL ON UNIT FOR SUPPORT.

Hardware Included

















B. BOLT (4) C. WASHER (8) D. SPRING WASHER (4) E. NUT (4) F. PLASTIC CAP (4) G. BOX END WRENCH (2)

IMPORTANT NOTE: During assembly, turn chair upside down on carpet or padded surface to protect the finish.

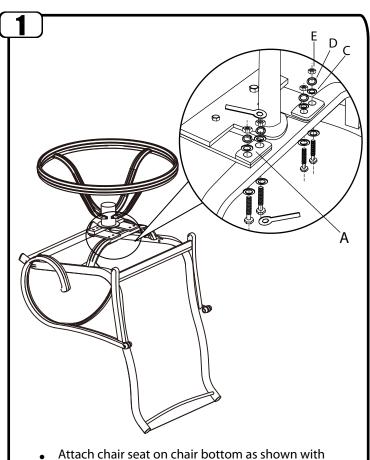

Attach chair seat on chair bottom as shown with Bolts(B), Washers(C), Backup Plates(A), Spring Washers(D) and Nuts(E).

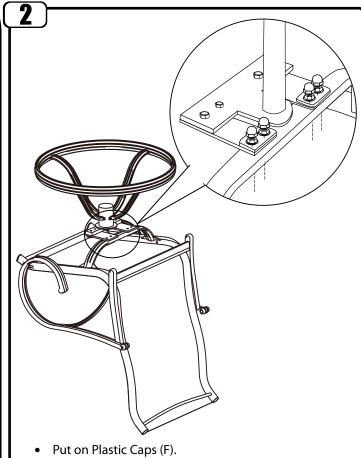



Turn over the chair. Your chair is now ready to use.

IMPORTANT: Periodically check all connections to make sure they are tight and secure.

Retain these instructions for future reference.

Care Instructions:

Mesh Fabric Cleaning/Care:

Brush off loose dirt from chairs. Use a mild soap and water to clean. Apply this solution directly to heavily soiled areas. Do NOT use detergent. Wipe entire chair with a damp rag or sponge. Rinse thoroughly with clean water. Air dry thoroughly before reattaching the pillows.