



Assembly Instructions & User's Manual

for


Member's Mark

Solid Wood Painted 4' Glider Bench

Model Number: TM130837

Customer Assistance (spare/replacement parts): 1-888-287-4275 (From 9:00 am to 5:00 pm CST, Monday to Friday)

or Email: info@cambridgecasual.com

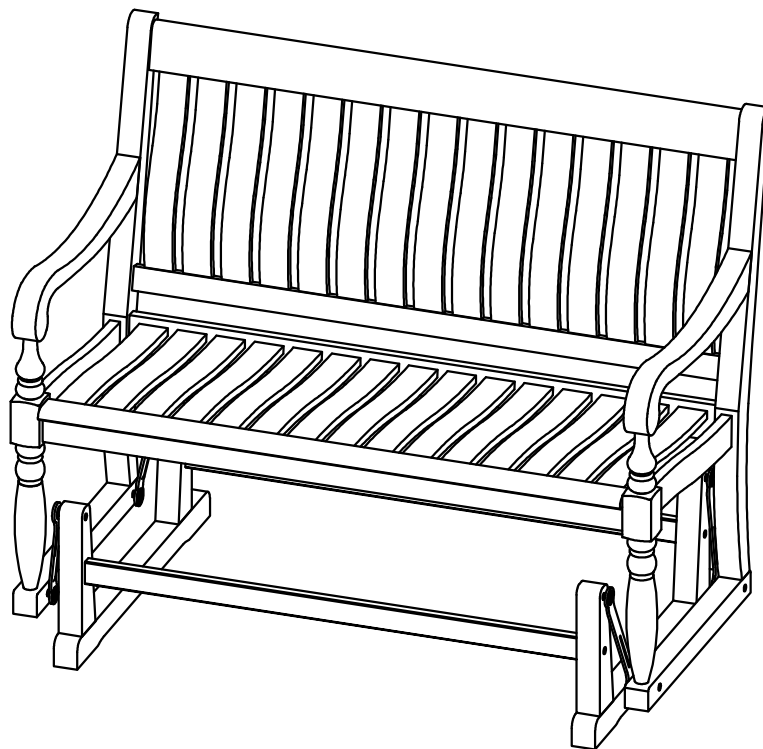

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Quality Statement	3
Important Safety Information	3
Before Assembly	3
Care & Use	3
Package Contents (Arm Chair)	4
Product Information	5
Components	5
Hardware	5
Tools	6
Step 1 - Step 7	7
Troubleshooting	9
Care & Use Instruction	9
Warranty Information	10

Quality Statement

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at: samsclub.com/membersmarkhelp

Important Safety Information

- *Please read all instructions carefully before assembling this product.*
- *Where applicable, and for your safety, assembly by an adult is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*


Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box can provide an ideal work surface if none is available.*
- *Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.*
- *To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- **DO NOT USE** power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.
- *Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly*

Care & Use

- *Use a soft, clean cloth that will not scratch the surface when cleaning.*

Package Contents

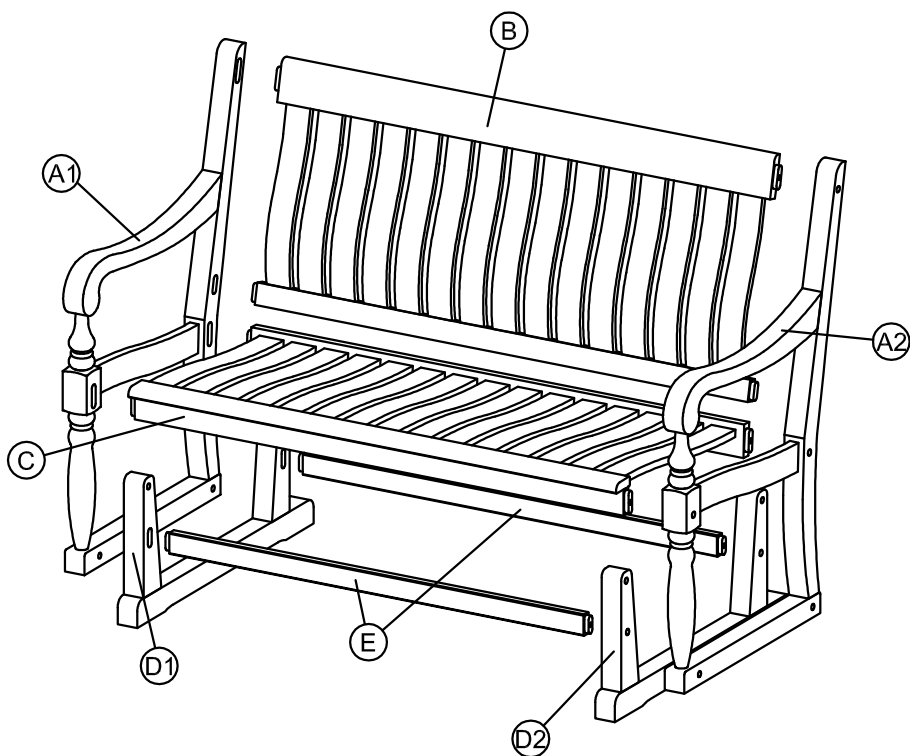

Component	Description	Qty
A1	Right Side Frame	1
A2	Left Side Frame	1
B	Back Support	1
C	Seat	1





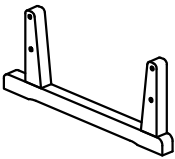
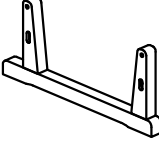

Component	Description	Qty
D1	Right Base Side Frame	1
D2	Left Base Side Frame	1
E	Base Cross Bar	2

Product Information

 
 





Dimensions : 48 1/4" W X 27 1/2" D X 37 3/4" H (123cm X 70cm X 96cm)

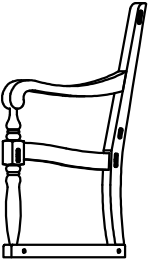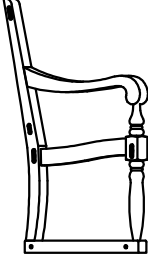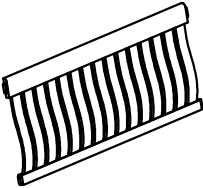Weight Capacity : Supports up to 600 lbs (272 kg)




Components

A1. Right Side Frame	A2. Left Side Frame	B. Back Support	C. Seat
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc
D1. Right Base Side Frame	D2. Left Base Side Frame	E. Base Cross Bar	
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 2 Pcs	

Hardware


F. 1 3/4" Bolt	G. 2" Bolt	H. 2 3/4" Bolt	I. Nut
			
Qty : 8 Pcs + 1	Qty : 2 Pcs + 1	Qty : 8 Pcs	Qty : 8 Pcs + 1
J. Washer	K. Gliding stretch	L. Wooden Cap	
			
Qty : 8 Pcs + 1	Qty : 4 Pcs	Qty : 10 Pcs+2	

 Tools

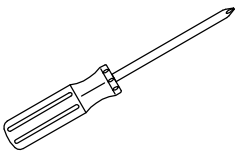8" Philips screwdriver (Not Included)	Wrench (Included)	Rubber mallet (not included).
		

Step 1 - Step 7


Step 1

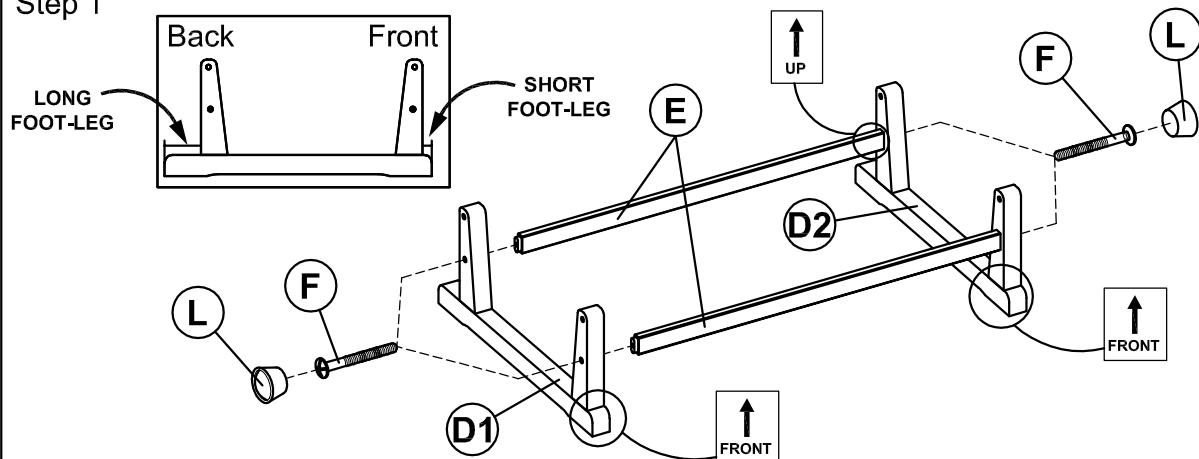

Attach base cross bars (E) into right and left base side frame (D1&D2) and secure using 1 3/4" bolts (F).

Tighten all bolts completely using screwdriver before tapping in the wooden caps (L).


Step 2

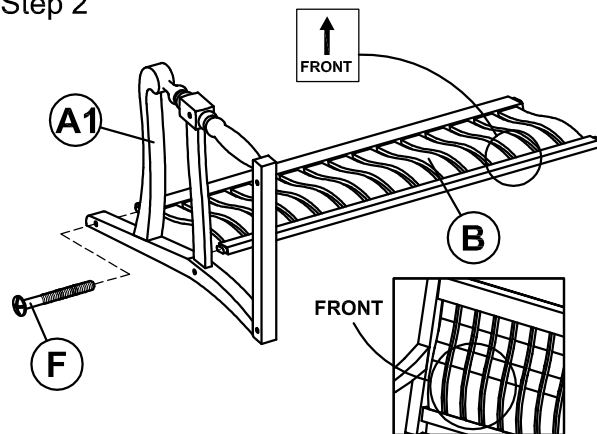

Attach the right side frame (A1) into backrest (B). Secure with 1 3/4" bolt (F).

** Do not tighten the bolts yet.


Step 3

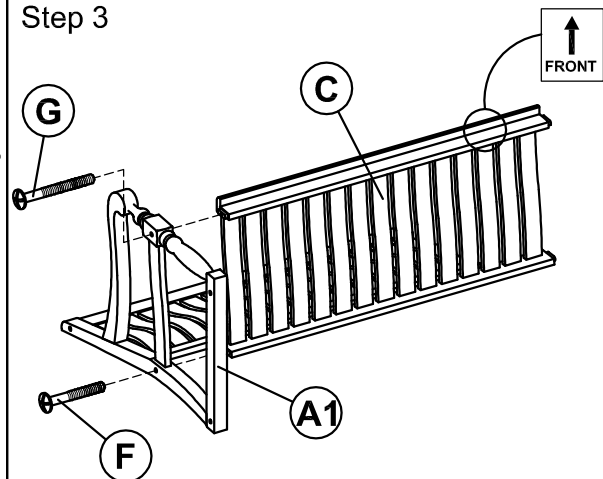

Next, attach the seat (C) into predilled holes of right side frame (A1).


Secure with 1 3/4" bolt (F) and 2" bolt (G), position as shown.

Step 4

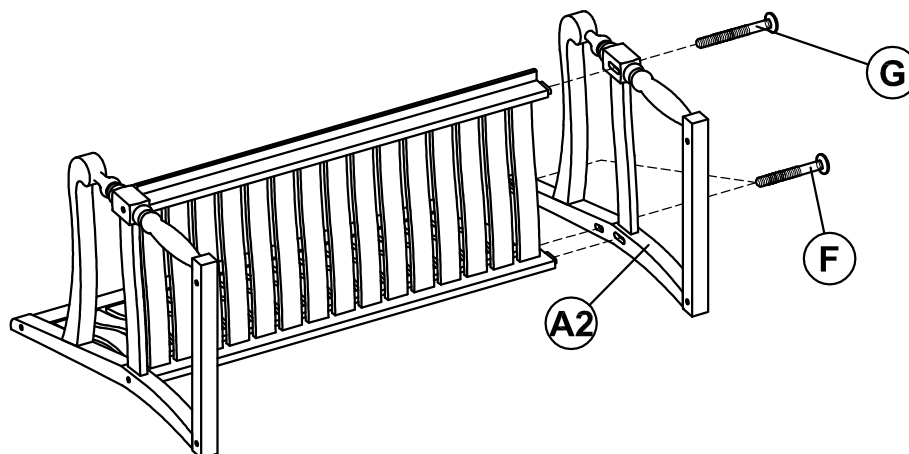


Attach the left side frame (A2) into the assembly from step 3. Secure with 1 3/4" bolts (F) and 2" bolt (G), using screwdriver.

Step 5

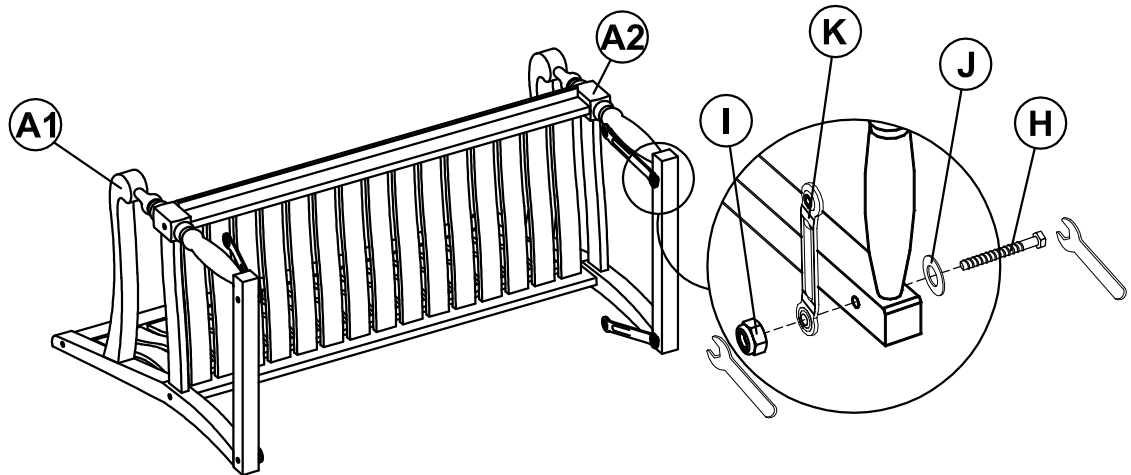


Assemble gliding stretches (K) into leg frames (A1&A2) and secure using 2 3/4" bolts (H), washer (J) and nuts (I) as diagram shown.
Tighten the nuts and bolts using wrench (included).

Step 6

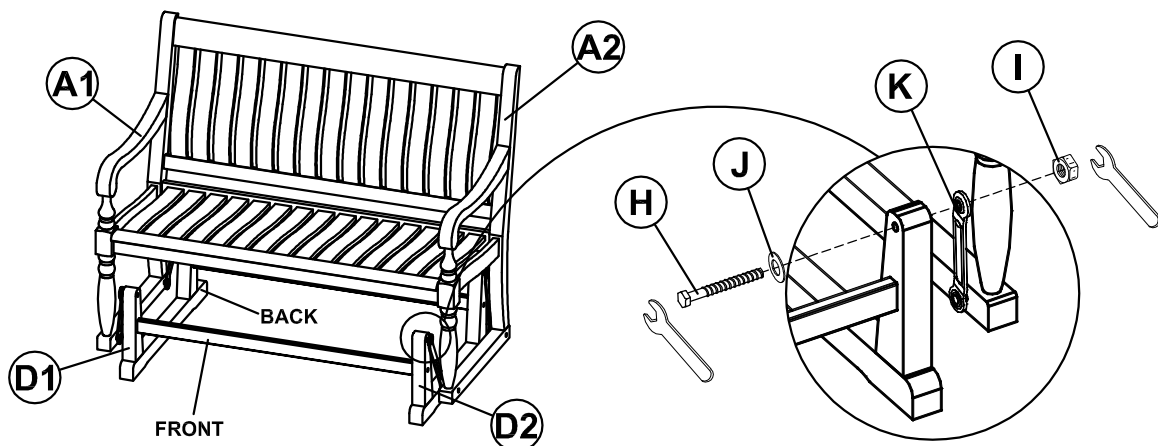

Attach the previously assembled base side frames (D1&D2) to the leg frames (A1&A2).
Connect using gliding stretches (K) to the leg frames (A1&A2) and secure using 2 3/4" bolts (H), washers (J), nut (I) as diagram shown. Tighten the nuts and bolts using wrench.

Step 7

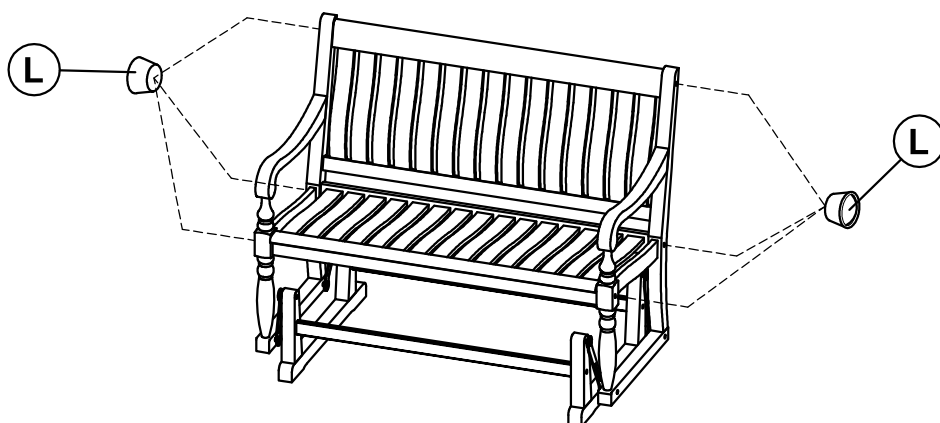

- Make sure all parts are correctly connected and tighten all bolts and nuts using screwdriver and wrench.
Tipping in the wooden caps (L) to cover bolts head using rubber mallet.
** Apply a drop oil (not supplied) on gliding stretch for smoother operation if needed.

Troubleshooting

Problem	Possible Cause	Prevention / Solution
Tilting / Leaning	Surface not level	Place it on a level floor
Rickety	Bolt not tight enough	Tighten all bolts / screw

Care & Use Instruction

Wood is a living material that continues to respond to climate condition even after being made into a piece of furniture.

After assembly rub the furniture with soft rag to remove any residual dust. Wood is a natural material whose appearance will change when left outdoors. This product has been treated prior to leaving the factory. To clean, use mild soap and warm water. Do not use abrasive material, cleansers or bleach products, Dry thoroughly with soft cloth,

Even though this piece of furniture is extremely durable and long lasting, to prolong life we recommend bringing it indoors during freezing temperatures. Place it at a shaded area and do not leave it in standing water or on wet ground.

Do not put hot items directly on furniture surface.

Do not store furniture in areas that have central heating or cooling vents to prevent excessive drying of the wood. This will decrease the furniture's longevity.

Do not write on furniture without a padded barrier to protect the surface .

Warranty Information

This product component has a 1 year frames guarantee against defects in material and/or workmanship. If you have any questions regarding the warranty or spare / replacement parts, please call our toll-free number 1-888-287-4275 (From 9:00 am to 5:00 pm CST, Monday to Friday) or email us at info@cambridgecasual.com

NOTE: Please consider recycling all applicable packaging material.

Distributed by Sam's West Inc.
2101 SE Simple Savings Dr.
Bentonville, Arkansas 72716-0745

Made in INDONESIA

