 




Assembly Instructions

Teak Porch Swing

Model Number: TM130905

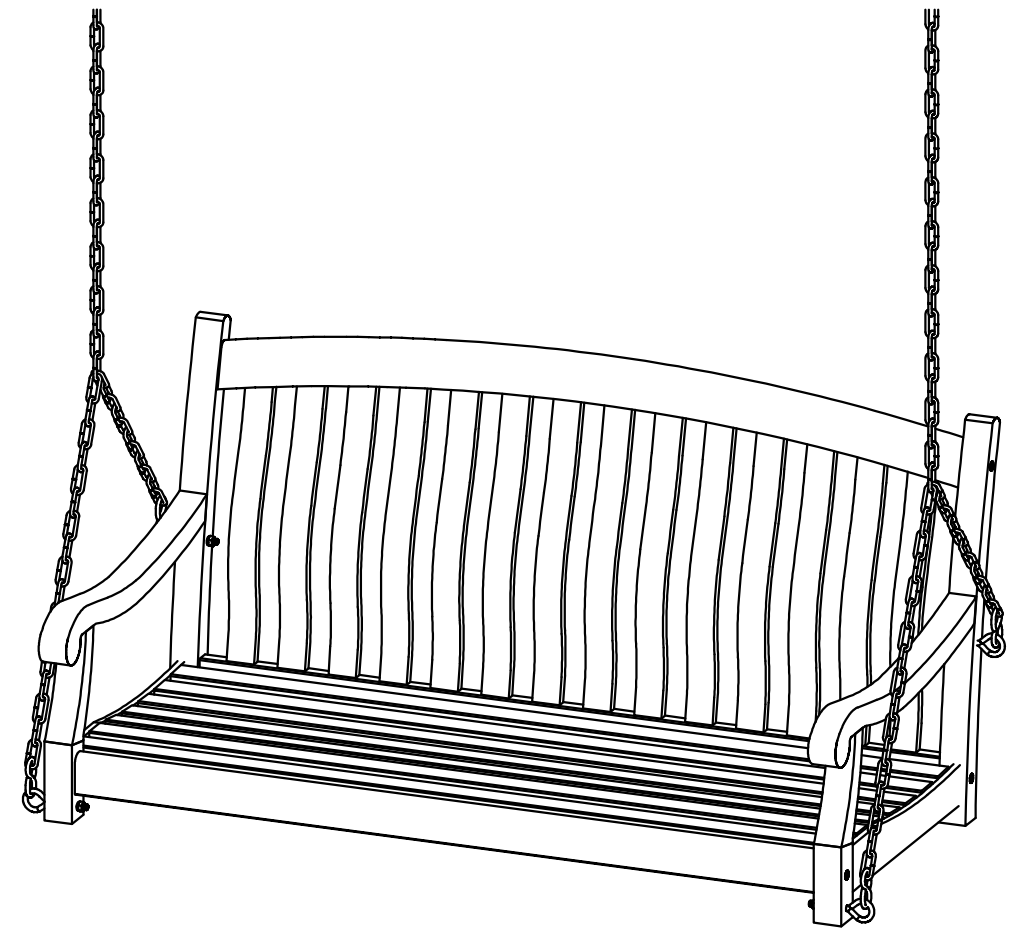

**THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.**



We are so confident you will be delighted with your Member's Mark purchase that we promise to refund or replace any item you find unsatisfactory. We aim to delight all our members and would love to hear about your discoveries! Call us at : **1-888-301-0332** (toll-free), 8am - 5 pm CST Monday - Friday. Call center for missing parts : 1-888-287-4275 from 9.00 am to 5.00 pm CST (Monday to Friday)

Important Safety Information

- *Please read all instructions carefully before assembling this furniture.*
- *For your safety, assembly by two or more adults is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*

Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box provides an ideal work surface.*
- *To avoid accidentally discarding small parts or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- *Use the parts and hardware lists below to identify and separate each of the pieces included.*
- *The use of power tools for assembly is not recommended. Power tools can damage the hardware and/or split the wood.*
- **Note:** *Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolts to misalign during assembly.*

WARNING-TO AVOID RISK OF FALLING

- **WEIGHT LIMIT 500 LBS MAXIMUM.**
- *Swing is intended to be used by two persons at a time.*
- *Swing must be used with all provided parts. Ensure that all parts are installed according to instructions and inspected for damage before use.*
- *Ensure that all bolts and hardware are securely tightened and installed before use.*
- *Never place infants or pets in the chair.*
- *Never allow young children to use chair without adult supervision.*
- *Do not jump, stand, or twist in chair.*
- *Swing are designed for minimal swing motion. Use care when getting in and out of swing.*

MAINTENANCE

Due to teak wood’s natural characteristics, wood color and grain variations may be present. This is a symbol of the originality of each unit and gives each finished piece a distinctive look and inherent charm.

Care Instruction :

Teak wood, when left bare and unsanded, will naturally fade to a silver-gray color. This silver-gray color transformation does not in any way affect the durability of the furniture.

To maintain the smooth finish and golden brown color of your teak furniture, you will need to sand the furniture regularly. To prolong the period of time needed between sanding, teak oil may also be applied.

If you choose to apply teak oil, apply every 6 months, or follow the teak oil container directions. Again, if you choose to maintain the smooth brown finish of your teak furniture, this method requires some regular maintenance, such as sanding and reapplication of teak oil. Teak oil, along with sanding, will help maintain the golden brown color.

Staining :

Please note, once you stain your teak, it will not return to the natural golden brown or weathered silver-gray color without sanding off the stain. Staining is intended to be permanent. If you choose to stain your furniture after it has turned silver-gray, you must first sand it before applying the stain.

Do not leave your teak wood furniture in puddles of water or on wet ground.


Cover your teak wood furniture during winter months or move into covered storage, if in wet climates.

The manufacturer supports protection of the world’s forest resources and is diligent in sourcing legally harvested wood.

 

 





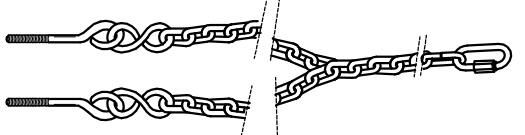
Thank you
The manufacturer

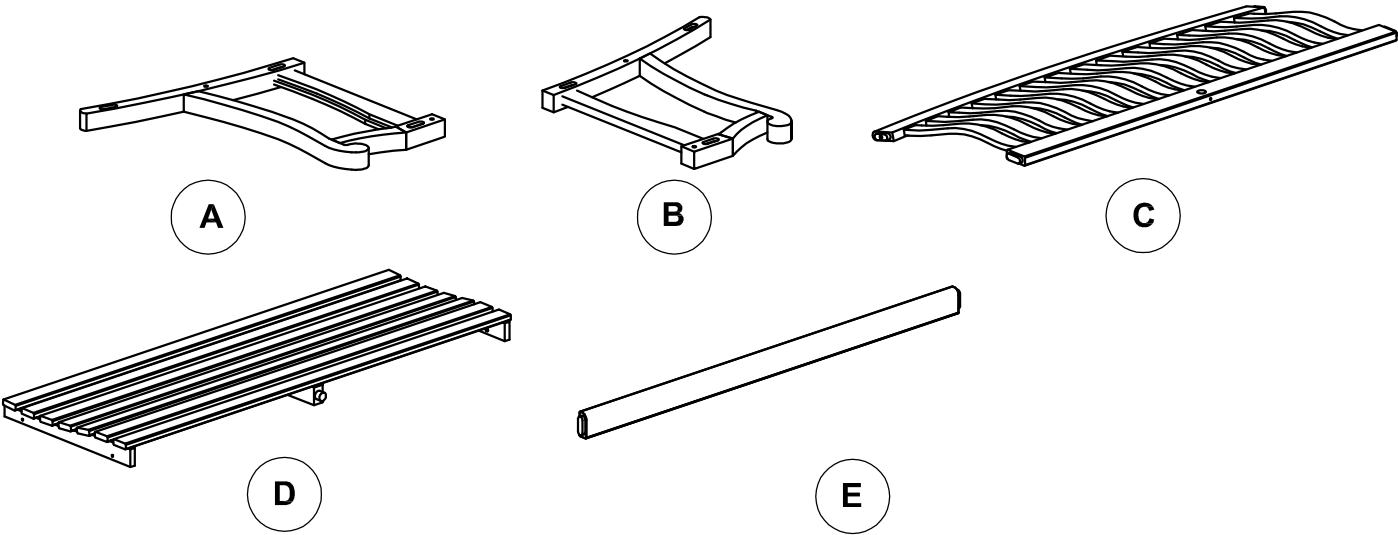Component


- A Right armrest 1 pc
- B Left armrest 1 pc
- C Back rest 1 pc
- D Seat 1 pc
- E Apron 1 pc




Hardware

(F) 1" Screw Qty: 4 Pcs + 1 	(I) Wooden cap Qty: 6 Pcs + 2 	(L) Hanger bolt Qty: 2 Pcs 	(N) Head nut Qty: 4 Pcs 
(G) 1 1/2" Screw Qty: 2 Pcs + 1 	(J) Washer Qty: 12 Pcs + 1 	(M) Nut Qty: 6 Pcs + 1 	
(H) 1 1/2" Bolt Qty: 6 Pcs + 1 	(K) Hanger bolt with chain & chain lock Qty: 2 Pcs 		

 Tools Needed for Assembly




Phillips Screwdriver (not included).

 


Wrench (included).




Rubber mallet (not included).

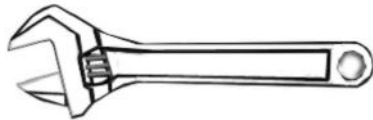


Adjustable wrench (not included).

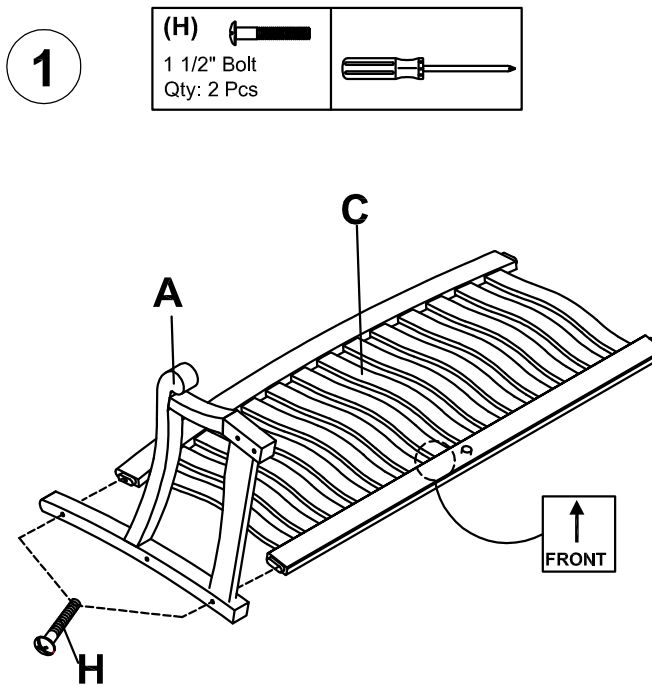


1
Install on level ground.
Attach the right armrest (A) to the back rest (C),
secure using 1 1/2" bolt (H).

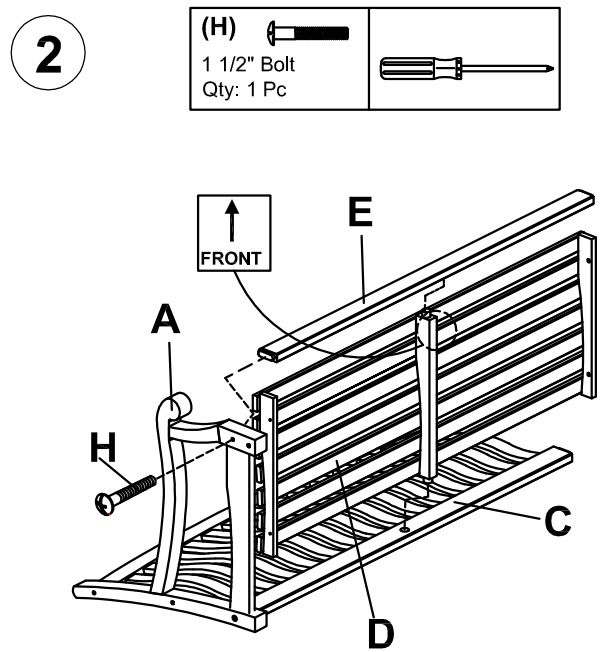


2
Attach the apron (E) onto the seat (D). And then
attach the seat (D) onto the back rest (C) and to
right armrest (A) secure using 1 1/2" bolts (H),
position as shown.

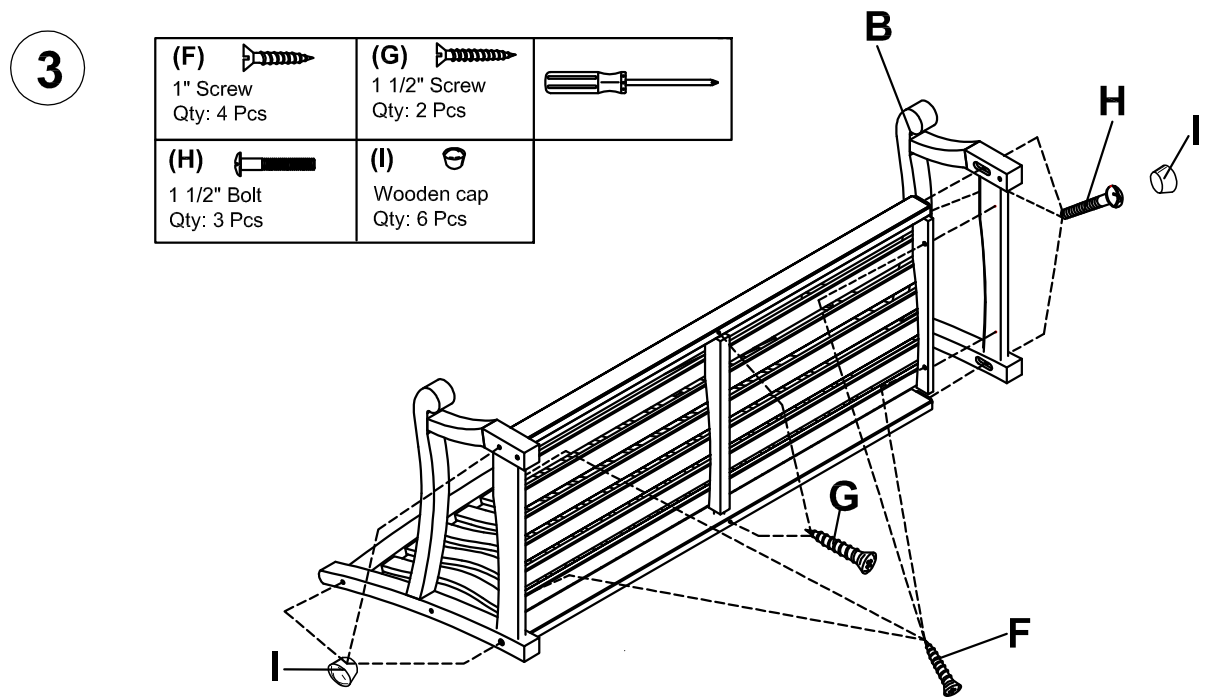

3
Attach the left armrest (B) to the assembly from step 2, secure using 1 1/2" bolts (H), 1" screws (F) and
1 1/2" screws (G) from underneath, position as shown, tighten using screwdriver. Tap in wooden caps (I)
to cover bolt heads using rubber mallet.

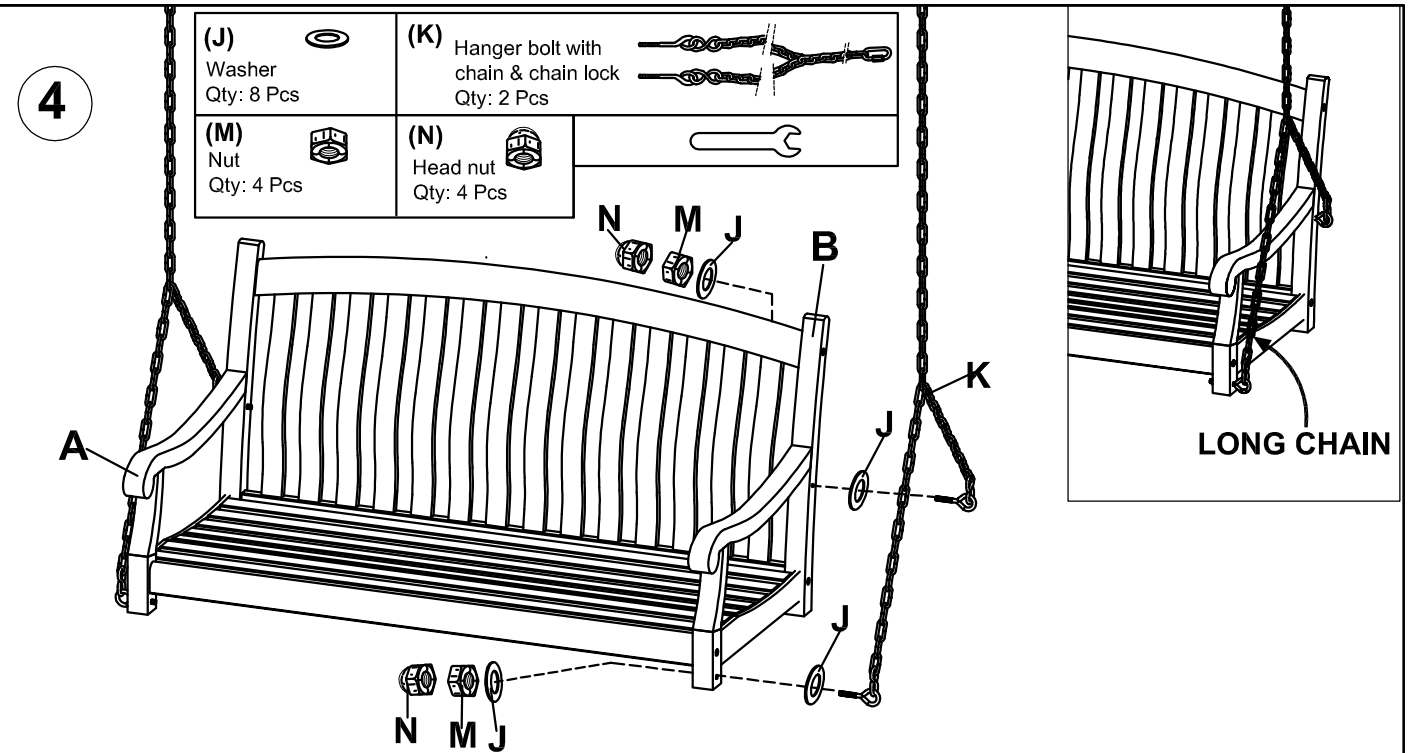

4
Secure the hanger bolts with chain (K) into predilled holes of left armrest (B) using washers (J), nuts (M)
and head nut (N), as shown. (The hanger bolt with long chain must be installed in front, short chain must
be installed at the back).
Repeat the same procedure to install the hanger bolts (K) into right armrest (A).
Make sure all parts are correctly connected and tighten all nuts completely using wrench.

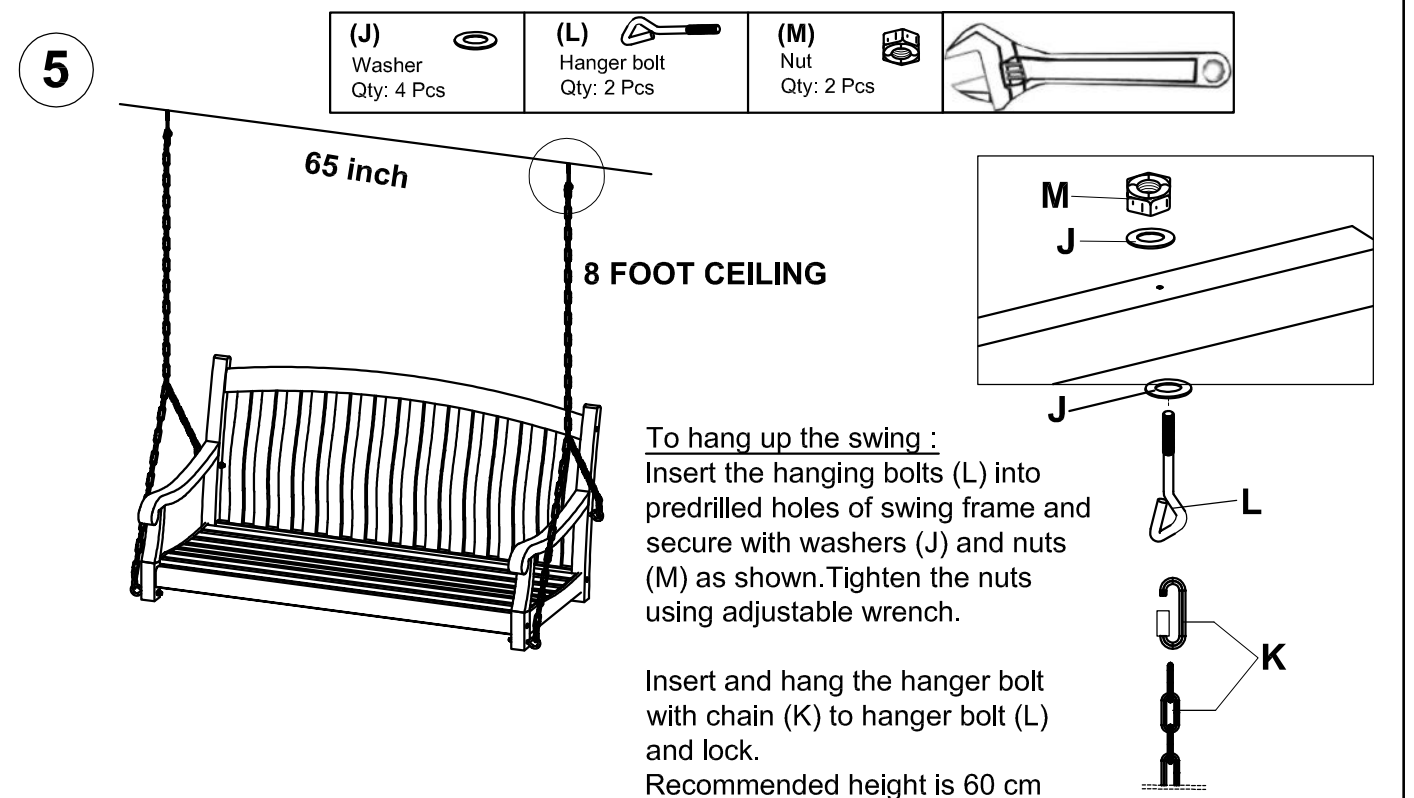

To hang up the swing :
Insert the hanging bolts (L) into
predilled holes of swing frame and
secure with washers (J) and nuts
(M) as shown. Tighten the nuts
using adjustable wrench.

Insert and hang the hanger bolt
with chain (K) to hanger bolt (L)
and lock.
Recommended height is 60 cm
from the bottom of the seat to the
ground.

NOTICE :
Install not less than 6.5 feet from any obstruction such as fence, garage, house, overhanging branch
laundry lines or electrical wires.