



# Assembly Instructions & User's Manual

for


## ***Member's Mark Easton Leather Recliner - Gray***

**Item Number:** 980381853

**Model Number:** D-M201U1P2-312


**Customer Assistance** (spare/replacement parts): 1-844-707-0195 or

**Email:** [info@mci-home.com](mailto:info@mci-home.com)

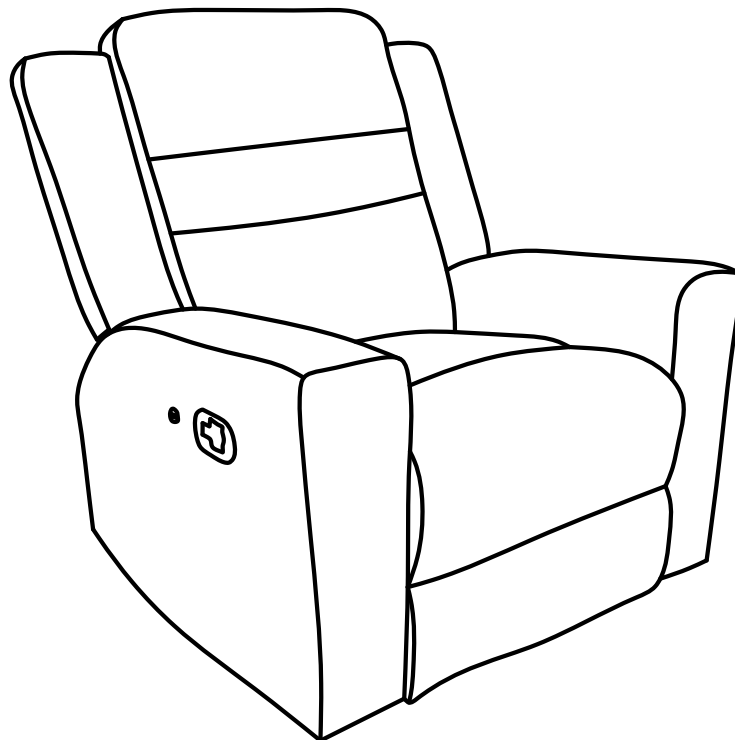

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY  
INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

# Table of Contents

Quality Statement.....	3
Important Safety Information .....	3
Before Assembly .....	3
Care & Use .....	3
Package Contents .....	4
Product Information .....	4
Tools .....	4
Step 1 – Step 6 .....	5
 Warning.....	11
Troubleshooting .....	12
Warranty Information .....	12

# Quality Statement

## Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at:  
[samsclub.com/membersmarkhelp](https://samsclub.com/membersmarkhelp)

## Important Safety Information

- *Please read all instructions carefully before assembling this product.*
- *Where applicable, and for your safety, assembly by an adult is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*


## Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box can provide an ideal work surface if none is available.*
- *Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.*
- *To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- **DO NOT USE** power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.
- *Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly.*

## Care & Use

- *Use a soft, clean cloth that will not scratch the surface when cleaning.*
- *Dry solvent cleaner recommended.*
- *Do not wet the filling.*
- *Do not spot clean.*
- *Do not rub.*
- *Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.*

## Package Contents

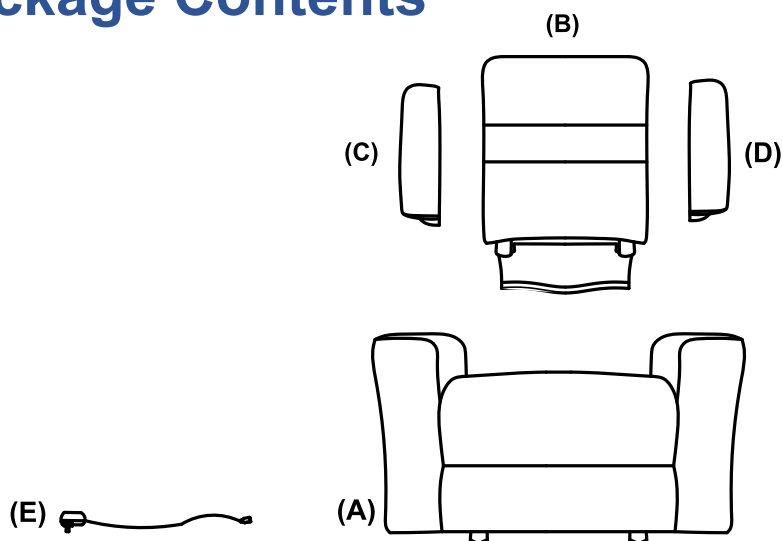

Component	Description	Quantity	Component	Description	Quantity
A	Seat	1	D	Right side facing wing	1
B	Backrest	1	E	Power cord	1
C	Left side facing wing	1			1


*Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://samsclub.com/membersmarkhelp)*

## Product Information

Overall Dimensions: 38.5" x 39.0" x 41.0" (97.79 cm x 99.06 cm x 104.14 cm)


Net weight: 103.62 lbs (47.1 kg)

## Tools

Flat Head Screwdriver (Not Included)	
--	---


*Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](https://www.mci-home.com)*

## Step 1

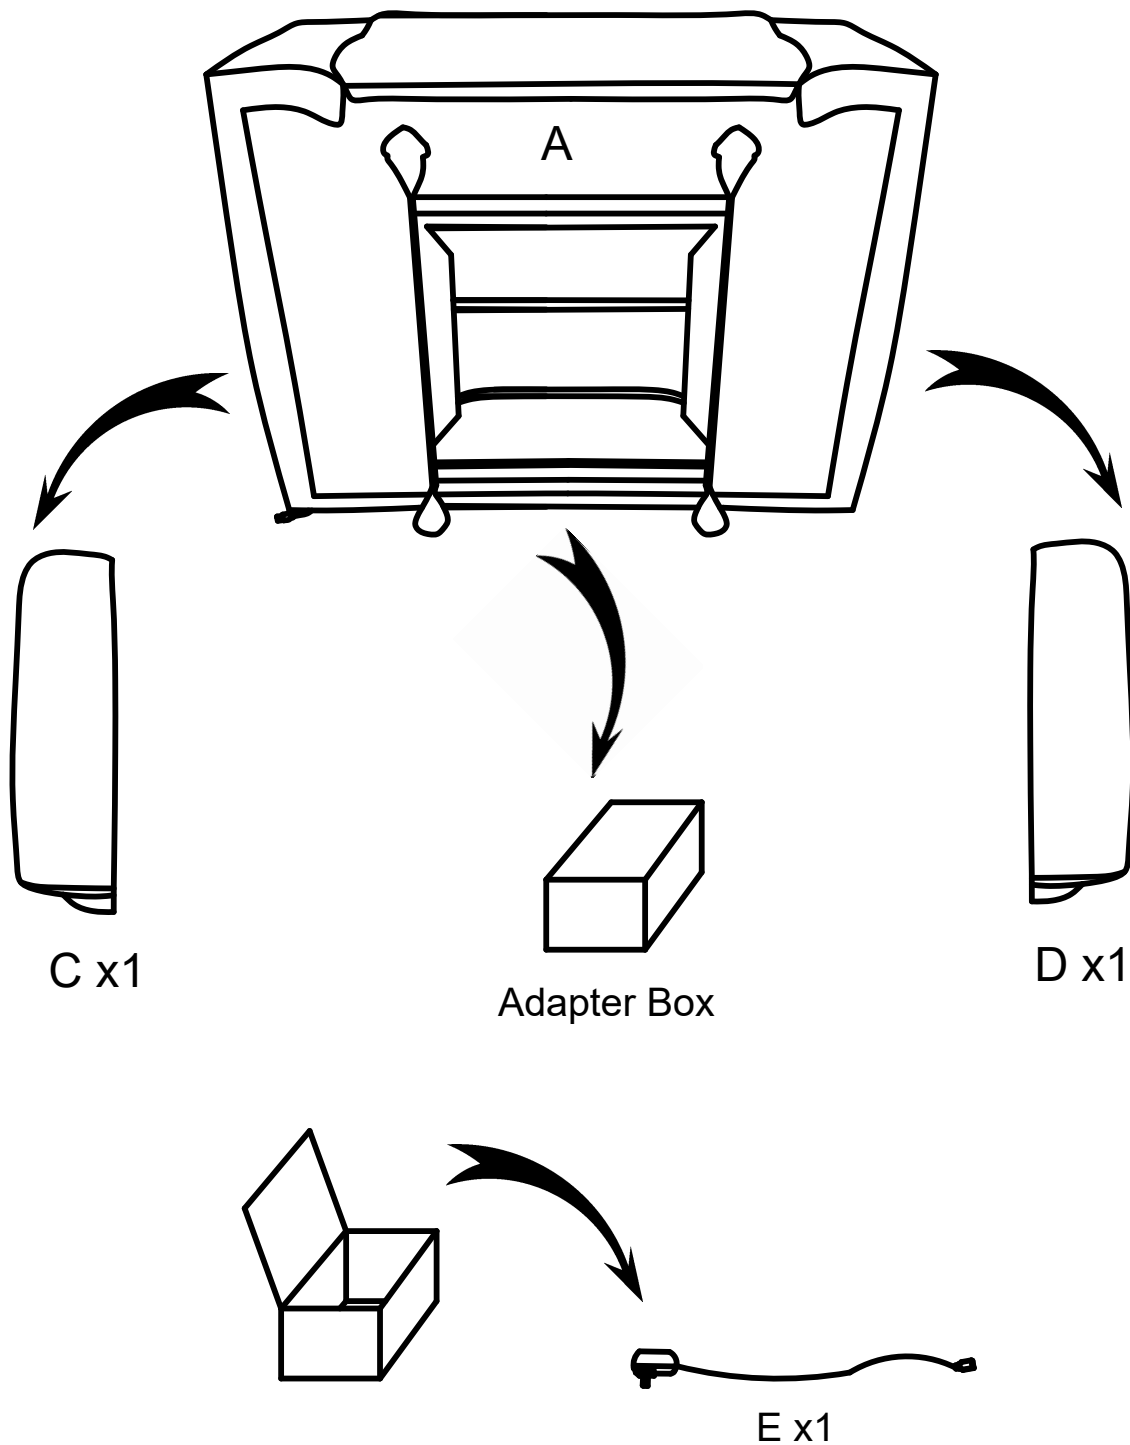


Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](http://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](http://www.mci-home.com)


## Step 2

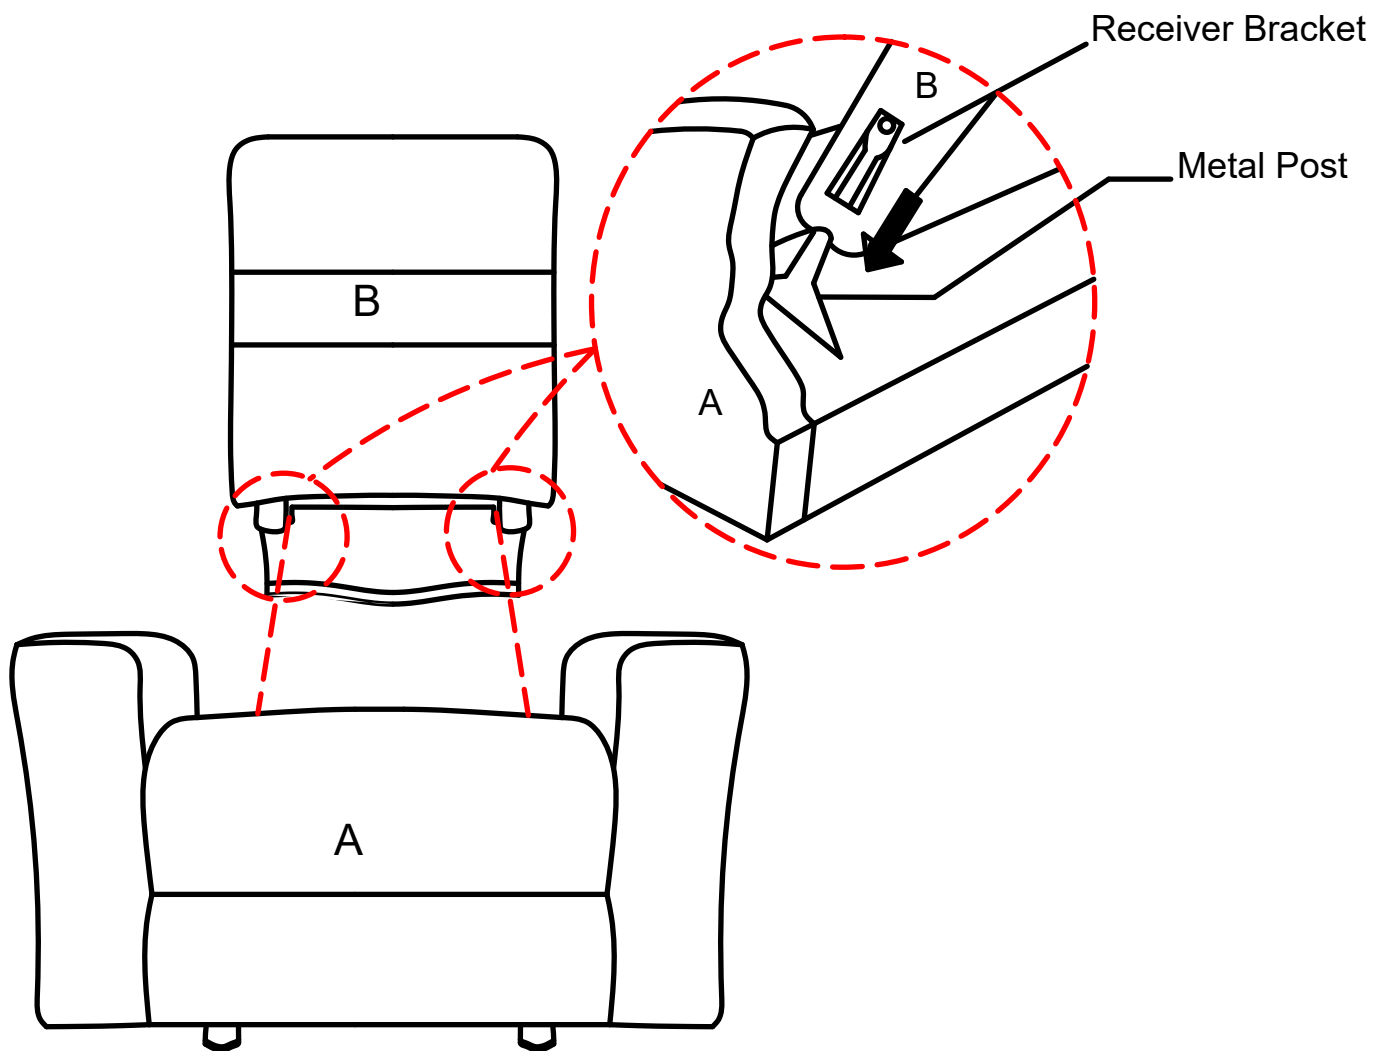

## Step 3

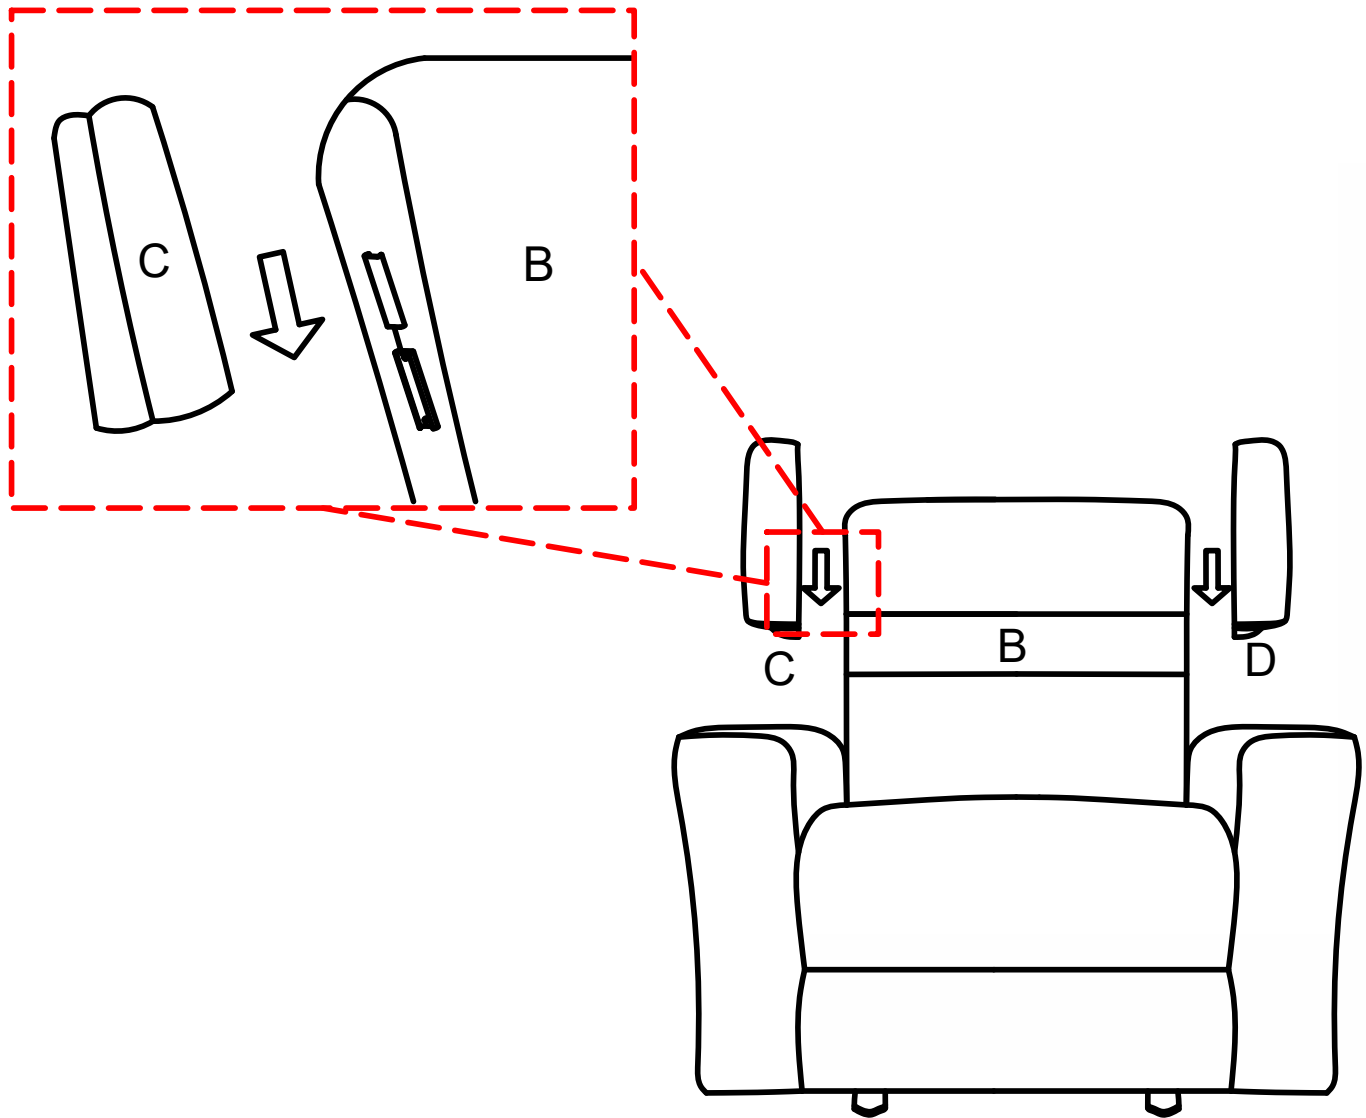



## Step 4

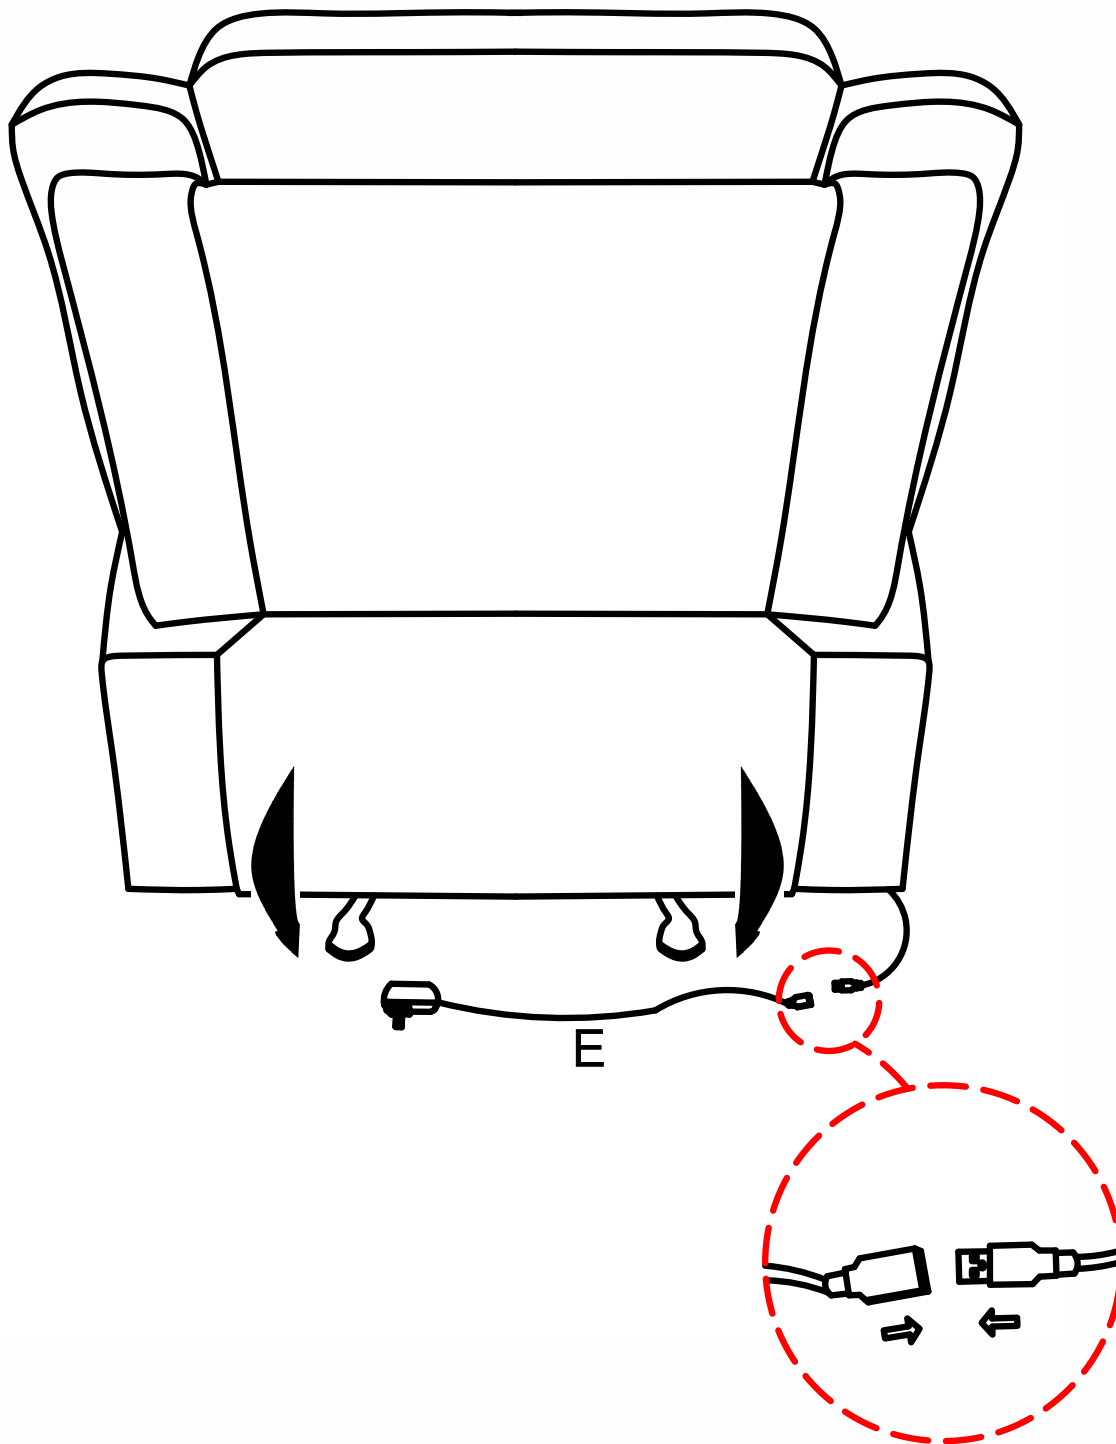

Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](http://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](http://www.mci-home.com)




## Step 5

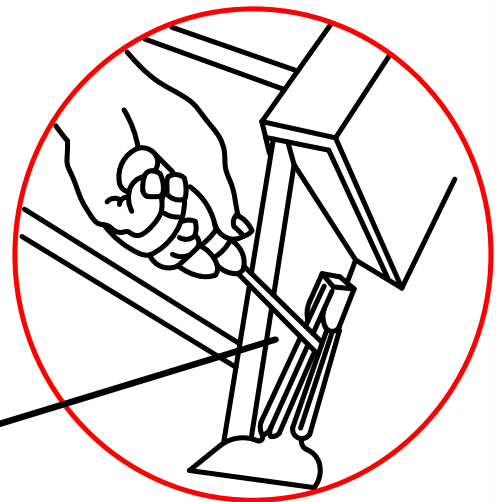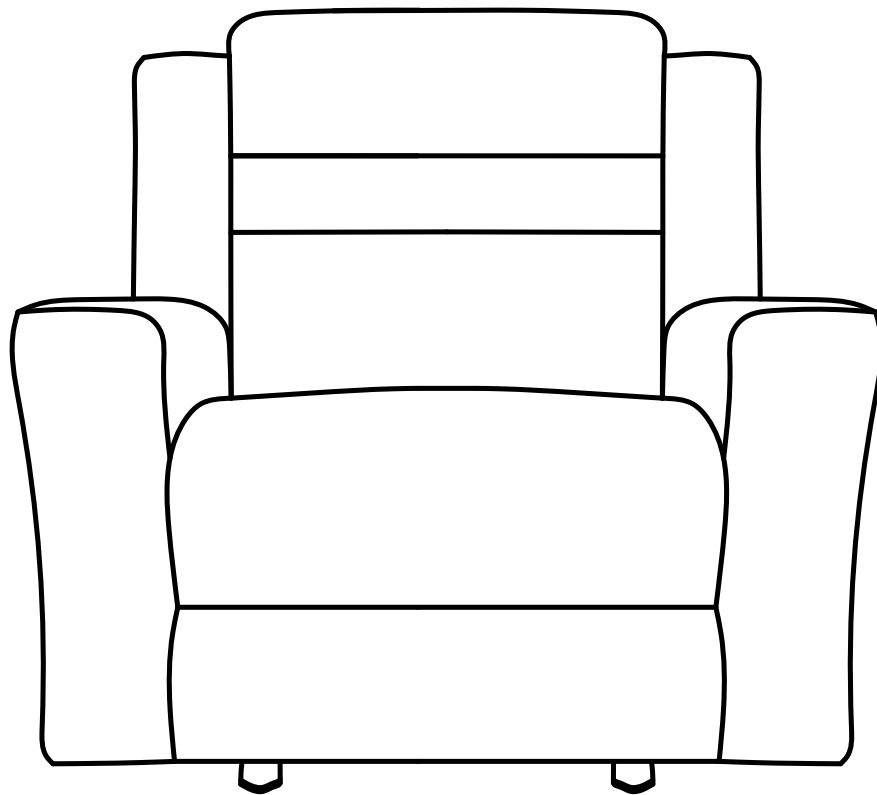

To remove the back, use a screwdriver pressing outward on the back tab in the receiver on both sides and lift the back from the base

*Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](http://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](http://www.mci-home.com)*

## Step 6

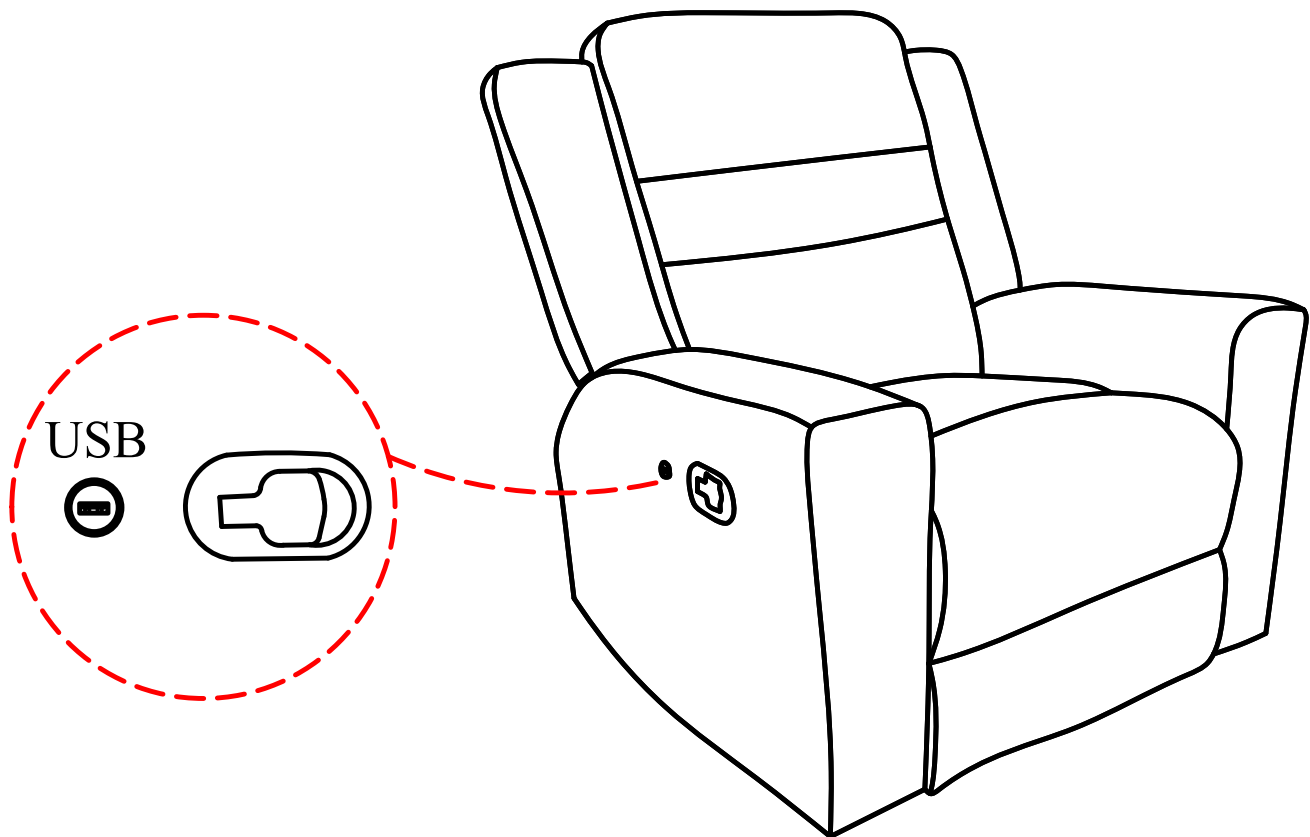



## Warning

- **DANGER:** To reduce the risk of electric shock - Always unplug this furnishing from the electrical outlet before cleaning.
- Unplug from outlet before putting on or taking parts off.
- Close supervision is necessary when used by or near children, or disabled people.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged or dropped into water.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any openings.
- Do not use outdoors. Just for household indoor use only.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- **WARNING:** Risk of injury - Keep children away from extended foot support.
- **WARNING:** Risk of injury to Persons - do not use this furnishing to support video equipment such as televisions or computer monitors.
- When not in use, it is recommended that the wand be stored securely in the pocket on the outside of the arm.

**CAUTION:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.*
- *Consult the dealer or an experienced radio/TV technician for help.*

Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](http://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](http://www.mci-home.com)

## Troubleshooting

1. Check that the power supply has been correctly connected to the socket
2. Confirm that wiring plugs are connected correctly.
3. Check that the wire in Step 4 is correctly connected.
4. After checking all connections have been properly made, unplug the power cord from the outlet for 10 minutes. Then replug the power cord to the outlet.
5. If issues still persist, please contact our customer service team at phone at 1-844-707-0195 (US & Canada only) or by email at [info@mci-home.com](mailto:info@mci-home.com)

## Warranty Information

This product component has a 1-year limited warranty. If you have any questions regarding the warranty or spare / replacement parts, please call our toll-free number 1-844-707-0195 or email us at [info@mci-home.com](mailto:info@mci-home.com)

**NOTE:** Please consider recycling all applicable packaging material.

**Distributed by Sam's West Inc.**  
2101 SE Simple Savings Dr.  
Bentonville, Arkansas 72716-0745

Made in Vietnam



*Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](http://samsclub.com/membersmarkhelp)  
Assembly video available at: [www.mci-home.com](http://www.mci-home.com)*