

Assembly Instructions & User's Manual for


Member's Mark Gracyn 7pc Fire Pit Dinning Set

Item Number: TBD

Model Number: FZA10218ST-A

Customer Assistance (spare/replacement parts): 1-888-690-9800

or Email: cs@sunvillahome.com

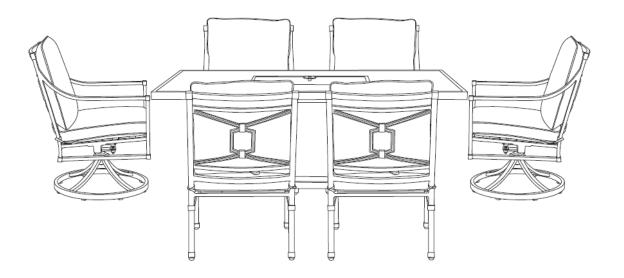

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Warning & Danger	3
	4
Quality Statement	7
Important Safety Information	7
Before Assembly	7
Care & Use	7
Package Contents	8
Product Information	9
Components	9
Hardware	10
Tools	10
Step 1 – Step 17	11
Gas Hookup and Information	17
Troubleshooting	20
Storage Instructions	21
Technical Data	21
Warranty Information	21



Warning & Danger

Model# FHTA10790 Fire Pit

Installer: Leave this manual with

appliance.

Consumer: Retain this manual for future

reference.

loss of life.

This appliance is a Decorative Gas **Appliance for OUTDOOR USE ONLY and** MUST NOT be used for cooking.

WARNING: If the information in this manual is not followed exactly, a fire or explosion may result causing property damage, personal injury, or

WARNING: For outdoor use only. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.







A DANGER

FIRE OR EXPLOSION HAZARD If you smell gas:

- Shut off gas to the appliance.
- Extinguish any open flame.
- If odor continues, leave the area immediately
- After leaving the area, call your gas supplier or fire department

Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury, or death.



 
WARNING

Do not store or use gasoline, or other flammable vapors and liquids, in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.



DANGER

CARBON MONOXIDE HAZARD



Never use this appliance in an enclosed space such as a camper, tent, car or home.





🛕 WARNING 🛕





HOT! DO NOT TOUCH SEVERE BURNS MAY RESULT. CLOTHING IGNITION MAY RESULT.

Glass and other surfaces are hot during operation and cool-down

- Young children should be carefully supervised when they are in the area of the appliance
- Children and adults should be alerted to the hazards of high surface temperatures and should stay away to avoid burns or clothing ignition
- Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance.



MARNING A



Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Read the installation and maintenance instructions thoroughly before installing or servicing this equipment.

CAUTION



DO NOT DISCARD THIS MANUAL

- Important operating and maintenance instructions included.
- Read, understand, and follow these instructions for safe installation and operation.

CAUTION: Hot while in operation. Do not touch Keep burner area clean



WARNING (CALIFORNIA PROPOSITION 65)

WARNING: Combustion byproducts produced when using this product include carbon monoxide, a chemical known to the State of California to cause birth defects or other reproductive harm, and this product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

A. Design and Installation Considerations

Place the Fire Pit on a flat and stable surface in an outdoor location adjacent to the gas supply line or LP gas supply cylinder. DO NOT locate the appliance where it will get excessively wet or submerged in water.

B. Tools and Supplies Required

Before beginning the installation, be sure that the following tools and supplies are at hand.

□Gloves

☐ Safety Glasses

□Wrench

C. Inspect the Appliance and Components



WARNING



Inspect appliance and components for damage. Damaged parts may impair safe operation.

☐ DO NOT install damaged, incomplete, or substitute components.

Report damaged parts to your dealer.

- ☐ Carefully remove all burner components from packaging.
- ☐ Read all instructions before beginning installation. Follow these instructions carefully during installation to ensure maximum safety and benefit.



WARNING



Do NOT use this appliance if any part of it has been under water.

Have a qualified service technician inspect the appliance and replace any part of the control system and any gas control which has been under water.



WARNING



The warranty will be voided by, the following actions:

- ☐ Installation and use of any damaged components.
- ☐ Modification of the burner assembly. ☐ Installation other than as instructed by the
- factory.



MARNING



Never leave Fire Pit unattended for any amount of time.

Never sit on the Fire Pit.

Never use Fire Pit as a storage unit.

WARNING



Asphyxiation Risk

- ☐ This gas appliance is for outdoor use in a wellventilated space.
- ☐ This unit must not be installed inside an enclosed structure or unvented appliance.



- 1. Glass media may have sharp edges. Wear safety glasses and gloves when handling.
- 2. Pour the glass media evenly into the burner area (with the exception of the screen-if applicable). The glass should be 1/2-1"above the burner.
- 3. Keep away from the unit for the first 20 minutes after igniting your unit for the first time, as glass beads could pop out and cause injury. Should any glass beads pop out, discard them.

WARNINGS

Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary.

It is imperative that the control compartment, burners and circulating air passageways of the appliance are kept clean.

- *Do not use this fire pit for cooking.
- *Do not burn any other materials than are supplied with and intended for use in this fire pit.
- *Do not pour water into fire pit.
- *The installation of this product must conform to local codes.
- * Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been under water.
- *Do not store a spare or disconnected liquid propane cylinder under or near this fire pit.
- *After a period of storage, and/or not use, the propane fire pit should be checked for gas leaks and burner obstructions before use.
- *Do not operate the propane fire pit if there is gas leak present.
- *Never use a flame to check for gas leaks.
- * Minimum Clearance from Unit to Combustible Construction: 61" (155.4cm) from the top: 48" (121.9cm) from all sides and back.
- * Do not put any other fire pit cover or anything flammable on, or beneath the fire pit.
- * The propane fire pit should never be used by children. Children must be supervised when they are anywhere near the appliance.
- * Users should be alerted to the hazards of high surface temperatures and keep a safe distance to avoid burning or clothing ignition.
- * Pay attention when operating the fire pit. It is hot in use and should never be left unattended. Do not transit fire pit while in operation.
- * Should fire go out while burning, turn the gas valve off. Follow the instruction and wait five minutes before attempting to relight.
- * Never use charcoal or any other solid fuel in the fire pit. Never parch clothing or other flammable materials on or near the fire pit.
- * Never lean over the open fire pit or place hands or fingers on the upper portion of an operational unit.
- * Keep ventilation openings in cylinder enclosure (FIRE PIT BODY) free and clear of debris.
- * Do not rest feet on the fire pit.
- * Please take out the battery when not using the fire pit for an extended length of time.
- * Do not enlarge valve orifices or burner ports when cleaning the valve or burner. Cylinder supply system must be arranged for vapor withdrawal.
- * LP Tank used must include a collar to protect the cylinder valve.
- * Never fill the cylinder beyond 80% full.
- * Do not use this fire pit on vehicles or boats. Always operate the appliance on the flat ground outdoors.
- * Keep any electrical supply cord and the fuel supply hose away from any heated surfaces.
- * Do not use this fire pit unless all parts are in place.
- * Keep the appliance area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- * Inspect the hose before each use of the appliance.
- * If there is evidence of excessive abrasion or wear or if the hose is damaged, the hose assembly must be replaced prior to the appliance being put into operation.
- * Locating the hose into pathways where people may trip over it or in areas where the hose may be subject to accidental damaged.
- * Prior to each fire table operation, check the hose for evidence of excessive abrasion or wear by looking through the visual check hole. If the hose is damaged, cracked or cut, it must be replaced before using the gas fire table. The hose assembly can only be replaced with a hose assembly specified by the manufacturer.
- * Before each use, remove the glass beads. Examine the burner and its components. If dirty, clean with a soft brush and soapy water solution. Also examine the area around the burner. Any dirt or foreign material, such as spider webs or nests in this area, should be removed. If it is evident that the burner is damaged, the fire table must not be used. The burner assembly can only be replaced with a burner assembly specified by the manufacturer. Please contact call our customer service department at 1-888-690-9800 for technical support.

The LP-gas supply cylinder to be used must be:

- 1) Constructed and marked in accordance with the U.S. Department of Transportation (D.O.T.) Specifications for LP-Gas Cylinders, or the Standard for Cylinders, Spheres and Tubes for Transportation of Dangerous Goods and Commission, CAN/CSA-B339, as applicable;
- 2) Provide with a listed overfilling prevention device;
- 3) Provide with a cylinder connection device compatible with the connection for the appliance.

Quality Statement

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at: samsclub.com/membersmarkhelp

Important Safety Information

- Please read all instructions carefully before assembling this product.
- Where applicable, and for your safety, assembly by an adult is strongly recommended.
- Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.
- Hardware may loosen overtime. Periodically check that all connections are tight.


Before Assembly

- Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.
- The shipping box can provide an ideal work surface if none is available.
- Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.
- To avoid accidentally discarding small components or hardware, do not dispose
 of any packaging or contents of the shipping carton until assembly is complete.
- DO NOT USE power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.
- Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly.

Care & Use

- Use a soft, clean cloth that will not scratch the surface when cleaning.
- Dust often and use a vacuum cleaner crevice tool to clean between seams.
- Keep furniture at least 60cm/2ft from heat sources to avoid damage.

Package Contents

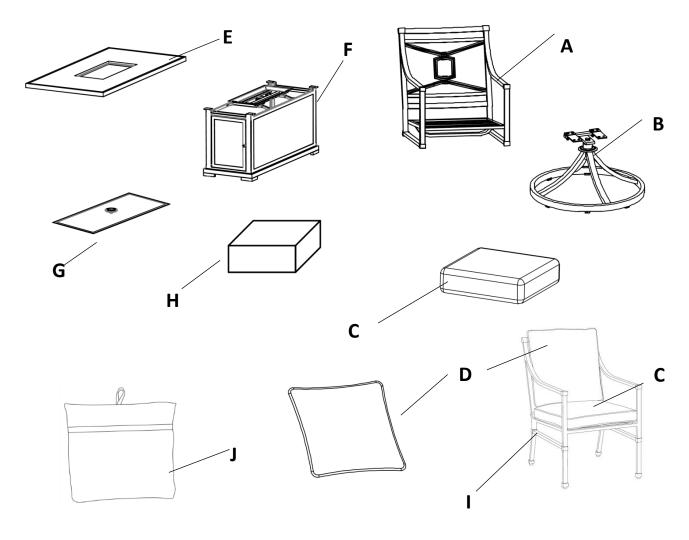

Component	Description	Quantity	Component	Description	Quantity
Α	Chair Frame	2	F	Fire Pit Base	1
В	Chair Base	2	G	Lid	1
С	Chair Seat Cushion	6	Н	Glass Beads	1
D	Chair Back Cushion	6	I	Chair Frame	2
E	Fire Pit Top	1	J	Furniture Cover	1

WARNING: Failure to position the parts in accordance with these diagrams or failure to use only parts specifically approved with this appliance may result in property damage or personal injury.

Product Information

Dimensions:

2pc swivel chair: 28.9"Dx22.6"Wx36"H (73.5cm x 57.5cm x 91.5cm)

4pc stationary chair: 28.9"Dx22.6"Wx36"H (73.5cm x 57.5cm x 91.5cm)

1pc fire pit: 79.9"Dx39.9"Wx29.9"H (203cm x 101.5cm x 76cm)

Weight Capacity:

Chair: Supports up to 250 lbs. (113.4kg.)


Components

A Chair Frame	B Chair Base	C Chair Seat Cushion
Qty 2	Qty 2	Qty 6
D Chair Back Cushion Qty 6	E Fire Pit Top Qty 1	F Fire Pit Base Qty 1
G Lid Qty 1	H Glass Beads Qty 1	


Hardware

AA	BB	CC
M8x45/Φ16x1.6 Bot	Washer Plate	Spring Washer/Φ8xΦ13x2.0
Qty: 8 (4 per chair)	Qty: 8 (4 per chair)	Qty: 8 (4 per chair)
DD	EE	FF
Nut M8	M8x20 Bolt/Φ24x2.0	AAA Battery
Qty: 8 (4 per chair)	Qty: 4	Qty: 1 - +(0)

 
Tools




Step 1 – Step 17

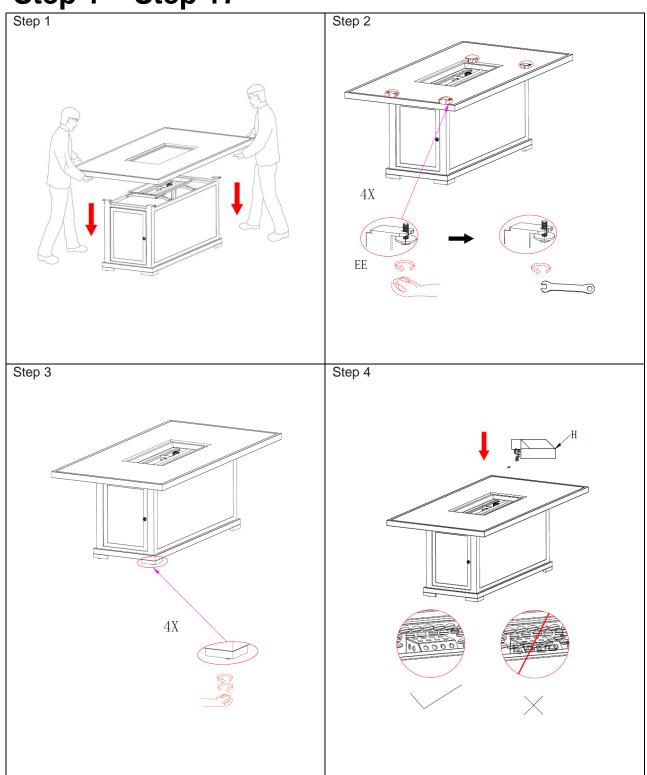


Need Assistance? Visit us at: samsclub.com/membersmarkhelp

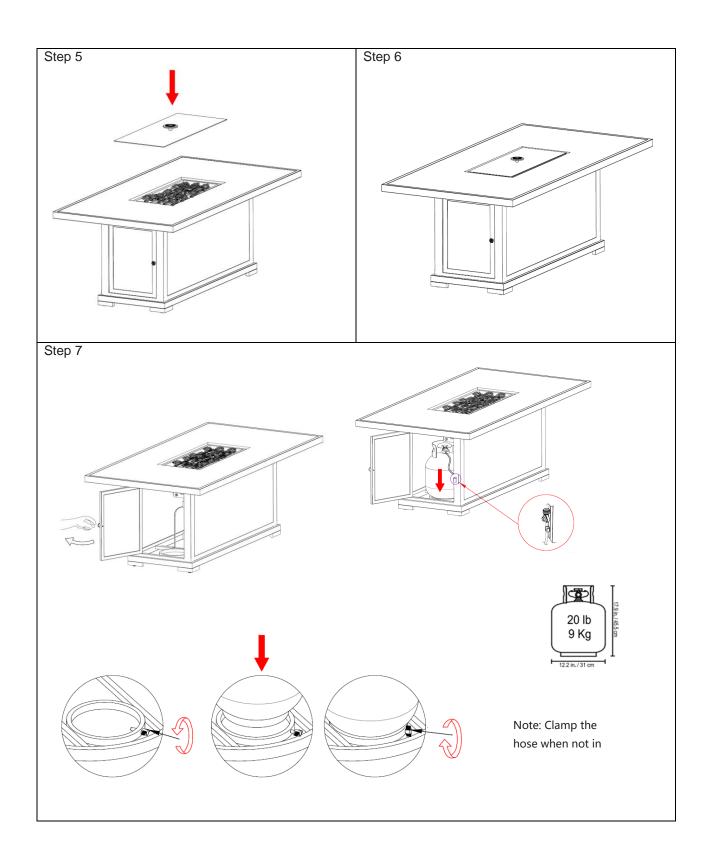


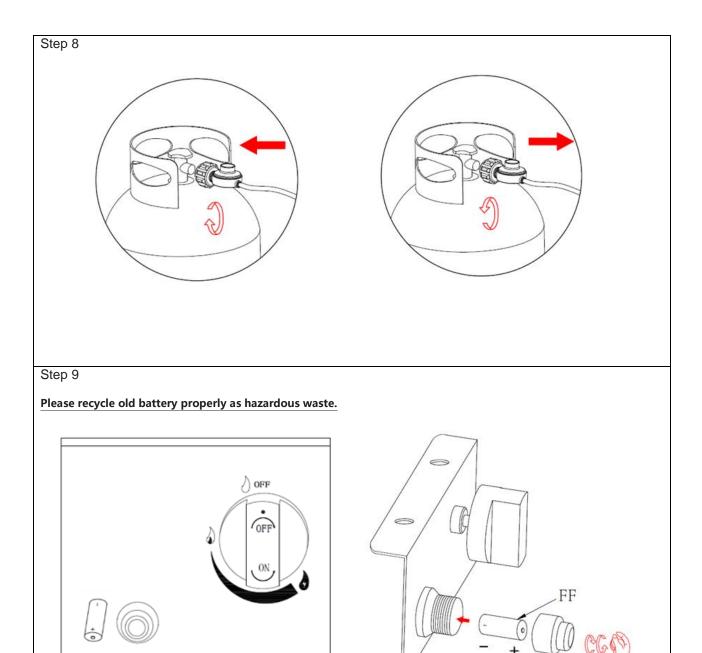


Step 10
Turn the tank valve to release gas. Push and hold ignition button to ignite flame.
Adjust control knob to desired flame once flame is lit.

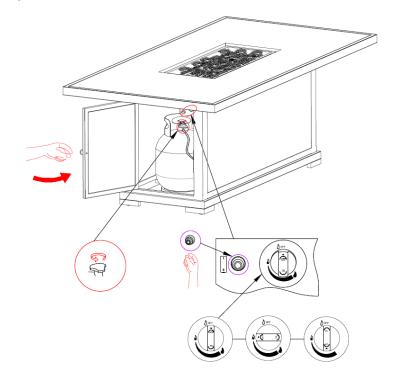


Step 11
Shut the tank valve and adjust control knob to extinguish flame when not in use.

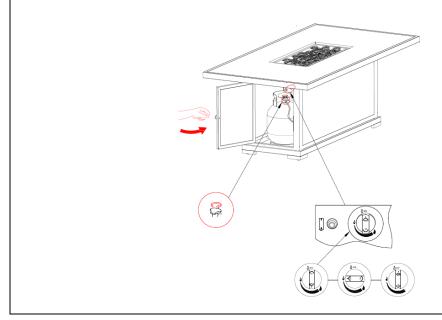

Need Assistance? Visit us at: samsclub.com/membersmarkhelp

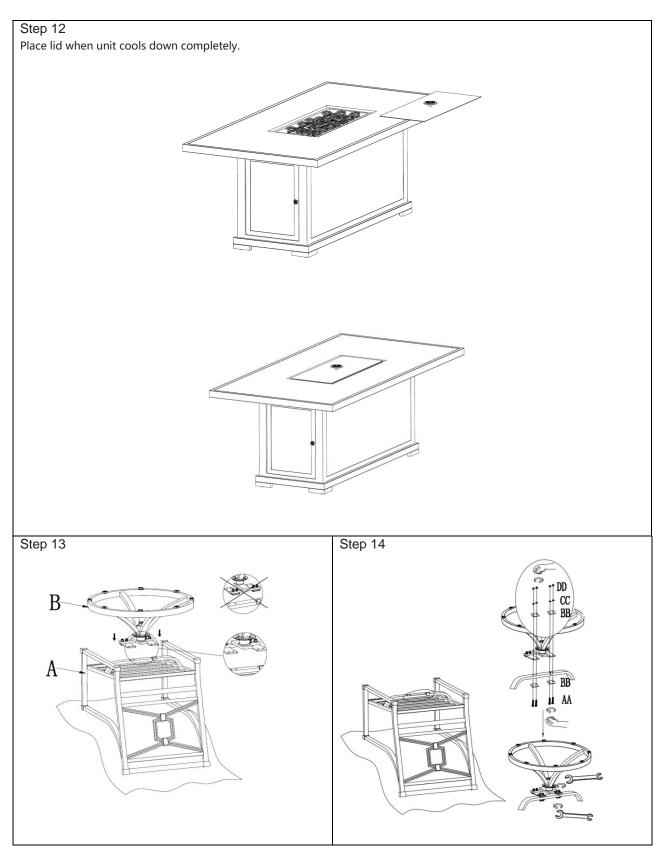

Need Assistance? Visit us at: samsclub.com/membersmarkhelp

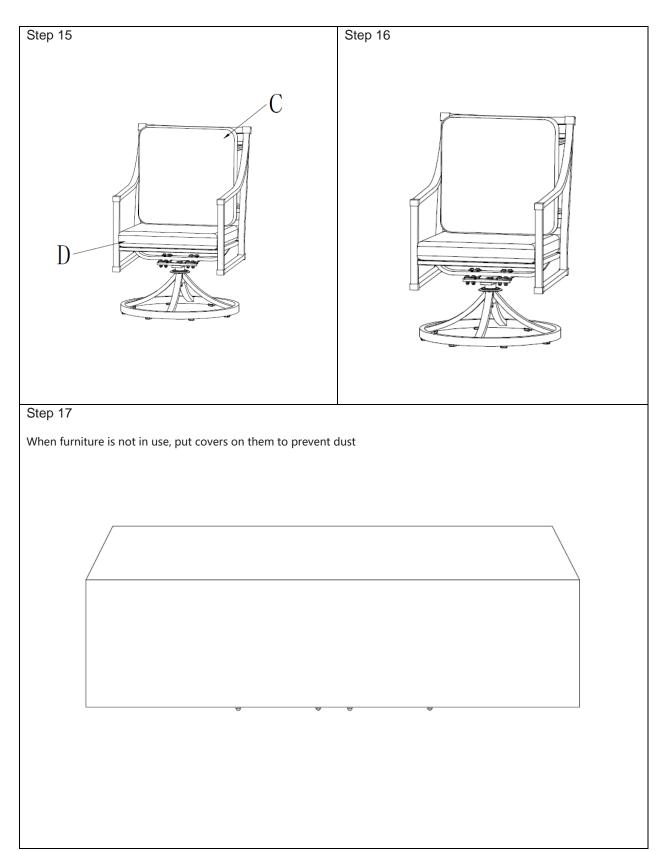

Need Assistance? Visit us at: samsclub.com/membersmarkhelp

Gas Hookup and Information

A. Fuel

Before making gas connections, ensure the appliance being installed is compatible with the available gas type.

B. Gas Pressure

Proper input pressures are required for optimum performance. Gas line sizing requirements need to be made following NFPA54



WARNING **A**





Fire Risk Explosion Risk verify inlet pressures.



- High pressures may cause overfire condition.
- Low pressures may cause explosion.
- Verify minimum pressures when other household gas appliances are operating.

Install regulator upstream of valve if line pressure is greater than 1/2 psi.

Pressure requirements for appliance are shown in table below. Minimum pressures must be met when other household gas appliances are operating.

Pressure	Natural gas	Propane
Minimum Inlet Pressure	3.5 in w.c.	25 psi
Maximum Inlet Pressure	10.5 in w.c.	250 psi

The appliance and its individual shutoff valve must be dis-connected from the gas supply piping system during any pressures in excess of 1/2 psi /3.5 kpa.

The appliance must be isolated from the gas supply piping system by closing its individual manual shutoff valve during any pressure testing of the gas supply piping system at test pressures equal to or less than 1/2 psi / 3.5 kpa.

C. Gas Connection

Note: Have the gas supply installed in accordance with local building codes, if any. If not, follow ANSI 223.1. Installation should be done by a qualified installer approved and/or licensed as required by locality. (in the Common wealth of Massachusetts installation must be performed by a licensed plumber or gas fitter.

Note: A listed (and Common wealth of Massachusetts approved) 3/8 in. T-handle manual shut-off valve and flexible gas connector are connected to the 3/8 in. Control valve inlet. If substituting for these components, please consult local codes for compliance.

● Incoming gas line should be piped to the 3/8 inch connection on the manual shutoff valve.



WARNING





Fire Risk Explosion Risk

- Gas build-up during line purge may ignite.
- Purge should be performed by qualified technician.
- Ensure adequate ventilation.
- Ensure there are no ignition sources such as sparks or open flames.

A small amount of air will be in the gas supply line. When first lighting appliance it will take a short time for air to purge from lines. Subsequent lighting of the unit will not require such purging. Never allow the ON / OFF valve to remain in the open position without pressing and continuing to hold igniter button FIRST.







WARNING



 


CHECK FOR GAS LEAKS Fire Risk Explosion Risk

Asphyxiation Risk



- Check all fittings and connections.
- Do not use open flame
 - After the gas line installation is complete, all connections must be tightened and checked for leaks with a commercially available leak-check solution. Be sure to rinse off all leak check solution following testing.



FOR LIQUID PROPANE GAS UNITS

- *Do not attempt to disconnect the gas regulator or any gas fitting while your fire pit is in operation.
- *A dented or rusty liquid propane cylinder may be hazardous and should be checked by your gas supplier prior to use.
- *Do not use a liquid propane cylinder with a damaged valve and any other worn out parts.
- *Transit and store the empty gas cylinders carefully and properly.
- *If you see, smell or hear the hiss of escaping gas from the liquid propane cylinder;
- 1. Turn off the gas supply and get away from the gas cylinder and the fire pit at once.
- 2. Do not attempt to correct the problem yourself.
- 3. Get to your gas supplier and/or the fire department for help.



WARNING

This screen must be clear and free of obstructions at all times to insure proper operation.

Screen

DO NOT PLACE GLASS BEADS ON THE SCREEN. KEEP SCREEN CLEAR.



OPERATION

CAUTION: Children and adults should be alerted to the hazards on high surface temperatures and should stay away to avoid burns or clothing ignition. Young children should be carefully supervised when they are in the area of the appliance.

WARNING: Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of control system and any gas control, which has been under water.

SAFETY WARNINGS

- 1. Never leave the Fire Pit unattended during operation.
- 2. Clothing or other flammable materials should not be hung from the appliance or placed on or near the appliance
- 3. Any guard, barrier, or other protective device removed for servicing the appliance shall be replaced prior to operating the appliance.
- 4. Installation and repair should be done by a qualified service person. The appliance should be inspected before use and at least annually by a qualified service person. More frequent cleaning may be required as necessary. It is imperative the control compartment, burners and circulating air passageways of the appliance be kept clean.
 - 5. Inspect the fuel supply connection before each use of the appliance.
- 6. Temporary storage of this appliance indoors is permissible only if it has been disconnected from its fuel supply (Natural or L.P. gas line).

WARNING

1. This appliance is hot when operated and can cause severe burns if contacted.

2. Do not burn any solid fuels in this appliance.

Note:

- Illustrations reflect typical installations and are <u>FOR DESIGN PURPOSES ONLY.</u>
- Illustrations / diagrams are not drawn to scale.
 Actual installation may vary due to individual design preference.



WARNING






Fire Risk

provide adequate clearance

- Around air openings.
- For service access.

Locate appliance away from traffic areas.

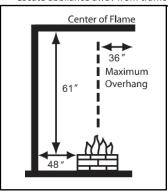

Clearance to Combustibles

Checking for leaks

- 1. Make 2-3oz of leak detection solution by mixing one part liquid dishwashing soap with three parts water.
- 2. Make sure control knobs are in the "o" position(Figure 1)
- 3. Connect LP gas tank;
- 4. Turn LP gas tank valve to "open";
- 5. Spoon several drops of solution or use a squirt bottle, at all "X" locations;
- a. If any bubbles appear, turn LP gas tank valve to "CLOSED", reconnect and re-rest
- b. If you continue to see bubbles after several attempts turn LP gas tank valve to "CLOSED" and disconnect LP gas tank, per "Disconnecting LP Gas Tank Contact 888-690-9800 for assistance.
- c. If no bubbles appear after one minute, turn LP gas tank valve to "CLOSED", $\,$

wipe away solution proceed.



CAUTION: After lighting-using a fire place tool and heat-resistant gloves, carefully move the glass beads back to their proper position, being careful to avoid the flame.



 


Figure 2 Figure 3

LIGHTING

- 1. Make sure all labels, packaging and protective films have been removed from flow of the outdoor fireplace.
- 2. Remove cover and lid from outdoor fireplace before lighting.
- 3. Check for obstructions of airflow to the burner. Spiders, insects and webs can clog the burner/venturi tube. A clogged burner tube can lead to a fire.
- 4. Control knob must be in the "OFF" position (Figure 3)
- 5. Clear small area of glass rocks away from the igniter cover (Figure 4).
- 6. Connect LP gas tank per "Installing LP Gas Tank" section.
- 7. Turn LP gas tank valve to "OPEN".
- 8. Push and hold the electronic igniter to create sparks within the electrode, continue to hold.
- 9. Push in the control knob and turn to the "ON" position, Keep holding down the control knob to allow gas to flow for 20 seconds.
- 10. After 20 seconds, release and turn control knob counterclockwise to adjust flame to desired height.
- 11. If ignition does not occur in 20 seconds turn burner control knob to "OFF" wait 5 minutes, fan with a newspaper or magazine, and repeat lighting procedure.
- 12. If igniter does not light burner:
- a. Wearing heat-resistant gloves, position a long lit match or long lit butane lighter near the pilot housing.
- b. Push and turn control knob to on
- c. Remove match/lighter once burner is lit.
- 13. After lighting, observe the burner flame make sure all ports are lit and flame height matches illustration (figure 3).
- 14. If you're having trouble lighting your fire pit, please follow this checklist:
- (1)Battery is inserted with the negative side going in first. (2)LP gas tank valve is open. (3)Thermocouple is fully fastened. (4)The control knob is pushed in for a minimum of 20 seconds.

TURNING OFF

- 1. Turn LP gas tank valve to "CLOSED".
- 2. Turn control knob to the "OFF" position. Note: A "poof" sound is normal as the last of the LP gas is burned.
- 3. Disconnect LP gas tank per "Disconnecting LP Gas Tank" section.

Troubleshooting

Problem	Possible Cause	Prevention / Solution
Fire won't light	No LP in tank.	Check the LP (propane) tank. You may be out of gas. Or check Natural Gas valve at main.
	Plugged burner orifice.	Check the burner orifice for stoppage. Remove stoppage.
Low flames or won't stay lit	Manual shutoff valve (on/off control knob) open or not installed between LP tank and appliance.	Close LP tank and manual shutoff valves. Open LP tank valve first, then the manual shutoff valve.
Blue flames	This is a result of normal operation and flames will begin to yellow as unit is allowed to burn for 16-20 minutes.	Do nothing.
	Improper air / fuel mixture related to air shutter position.	Close air shutoff. (for LP, leave1/4" open, natural gas 1/16" open)
Metallic noise	Noise is caused by metal expanding and contracting as it heats up and cools down, similar to the sound produces by a furnace or heating duct. This noise does not affect the operation or longevity of the appliance.	Do nothing.
Decorative Beads cracking or splitting.	Heat and/or abrupt temperature changes.	This is a property of glass and may happen occasionally. Do nothing. This is completely normal.

Maintenance and Service Tasks

Inspect	Insped	ct
	1	Remove decorative glass and examine burner. Vacuum and wipe out as needed. Use caution when cleaning these areas.
Burner	2	Inspect for warping and corrosion. Repair as necessary.
Assembly	3	Check the hose connecting the LP gas cylinder to ensure it is not damaged. Replace as necessary.
	4	Verify air shutter area is clean.
Burner Ignition and Operation	1	Verify all gas connections are tight and leak-free.
	2	Clean burner top, inspect for plugged ports, corrosion. or deterioration. Replace burner if necessary.
	3	Inspect for flame problems.
	4	Verify air shutter is clear of dust and debris and is in correct position for the gas type being used.
	5	Inspect orifice for soot, dirt, or corrosion.
	6	Verify manifold and inlet pressures. Adjust regulator as required.
Gas Hose with Regulator	1	The gas hose with regulator supplied with appliance must be used for LP installations. The replacement must be those specified by the appliance manufacturer.

Before Storing

- 1. Turn LP gas tank valve to "CLOSED".
- Turn control knob to the "OFF" position. Note: A "poof" sound is normal as the last of the gas is burned.
- Disconnect LP gas tank per "Disconnecting LP Gas Tank" section.
- 4. Clean all surfaces.

CAUTION: NEVER place cover on hot outdoor fireplace.

- 5. Lightly coat the burner with cooking oil to prevent excess rusting.
- If storing the outdoor fireplace indoors, cover the outdoor fireplace and store in a cool dry location away from children and pets.
- If storing the outdoor fireplace outdoors, cover the outdoor fireplace with the included cover for protection from the weather.

Storage Instructions

- 1. Carefully place all components into shipping box and/or provided container tape it shut.
- 2. When not in use, please store your item in a cool, dry place away from sunlight.
- 3. Exposing your item to excessive heat or humidity may damage your item.
- 4. When furniture is not in use, put covers on them to prevent dust.

Technical Data

Fire Pit BTU: 55000 Aluminum: 6063 Steel: Q235

Furniture Cover: 180g (300D) domestic polyester, with PU coating

Warranty Information

This product component has a 3 years guarantee against defects in material and/or workmanship. If you have any questions regarding the warranty or spare / replacement parts, please call our toll-free number 1-888-690-9800 or email us at cs@sunvillahome.com

NOTE: Please consider recycling all applicable packaging material.

Distributed by Sam's West Inc.

2101 SE Simple Savings Dr. Bentonville, Arkansas 72716-0745

Made in China

