



Assembly Instructions & User's Manual

for


Member's Mark Bisbee Rope Swing

Item Number: 990017829/990017830

Model Number: GCS09137A

Customer Assistance (spare/replacement parts): 1-888-690-9800

or Email: cs@sunvillahome.com

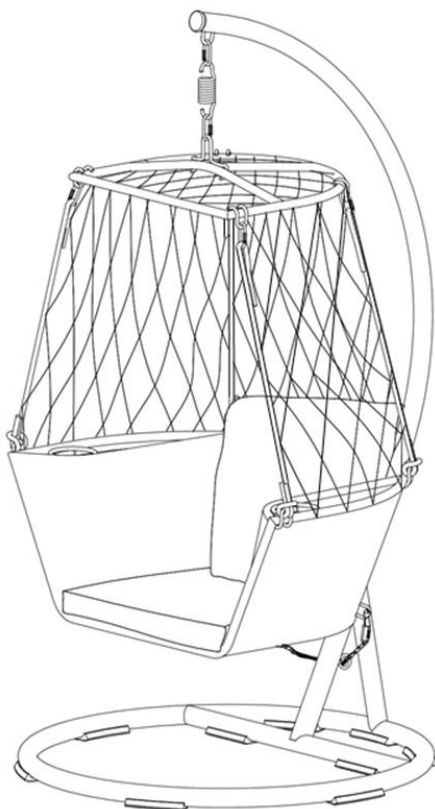

THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Quality Statement.....	3
Important Safety Information	3
Before Assembly	3
Care & Use	3
Package Contents	4
Product Information	5
Components	5
Hardware	5
Tools	5
Step 1 – Step 5	6
Troubleshooting	7
Storage Instructions	7
Technical Data	7
Warranty Information	8

Quality Statement

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at:
samsclub.com/membersmarkhelp

Important Safety Information

- *Please read all instructions carefully before assembling this product.*
- *Where applicable, and for your safety, assembly by an adult is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*






Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box can provide an ideal work surface if none is available.*
- *Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.*
- *To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- **DO NOT USE** power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.
- *Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly.*

Care & Use

- *Use a soft, clean cloth that will not scratch the surface when cleaning.*
- *Dust often and use a vacuum cleaner crevice tool to clean between seams.*
- *Keep furniture at least 60cm/2ft from heat sources to avoid damage.*

Package Contents

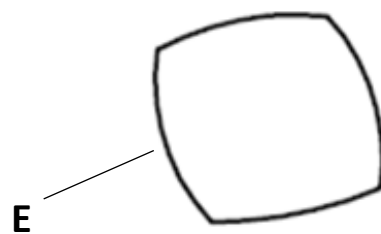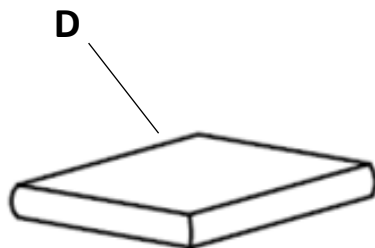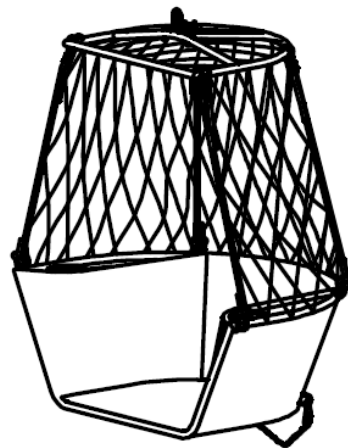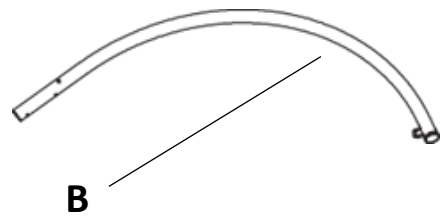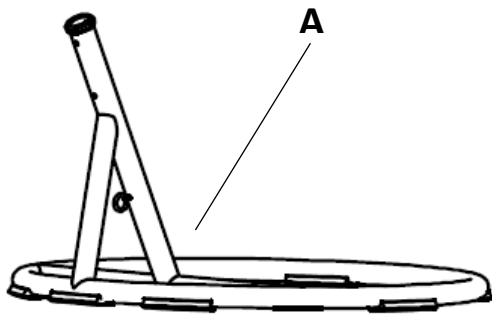

Component	Description	Quantity		Component	Description	Quantity
A	Base	1		D	Seat cushion	1
B	Pole Stand	1		E	Back cushion	1
C	Chair Frame with Bungee attached	1				

Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://www.samsclub.com/membersmarkhelp)

Product Information






Dimensions:

Swing chair: dia.41.3"x77.1" (dia.105cm x 196cm)

 




Weight Capacity:

Swing Chair: Supports up to 250 lbs. (113.4kg.)


 
Components

A Base Qty 1	B Pole Stand Qty 1	C Chair Frame with Bungee attached Qty 1
		
D Seat cushion Qty 1	E Back cushion Qty 1	
		

Hardware

AA M8X60 Bolt Qty: 2		BB M8 Washer Qty: 2	
CC M8 Nut Qty 2		DD M8 Nut Cap Qty 2	
EE Spring with Carabiners Qty 1			

Tools


Hex Wrench (Included)		Wrench (Included)	
-----------------------	---	-------------------	---

Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://www.samsclub.com/membersmarkhelp)

Step 1 – Step 5


Step 1

Slide the Pole Stand (B) into the Base (A). Align holes and insert M8x60 Bolt (AA), Washer (BB) into the corresponding holes and tighten Nut (CC) and Bolt (AA) with Wrench and Allen Wrench. Make sure bolts are tight. Then put the Nut Cap on (DD).

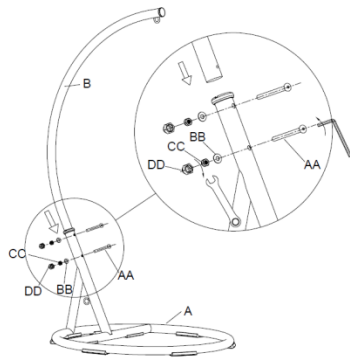


Step 2

Open the locking carabiners by turning the locking bolt. See step 1. Hang the Spring (EE) to the pole stand (B) using the carabiner, while attaching the opposited end to the loop on the chair frame (C) as shown in step 2. Close and lock both top and bottom carabiner as shown in step 3.

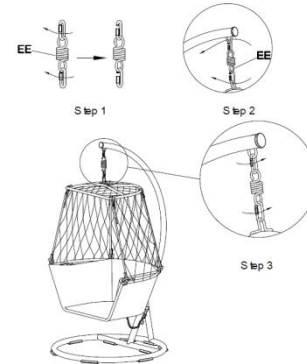


Step 3

Make sure you have fully tightened the carabiners. You can use the wrench to tighten the lock. Open either carbiner on the bottom of the frame and place it thru the ring on the base as shown. Re-attach carbiner to leash strap and lock securely by hand.

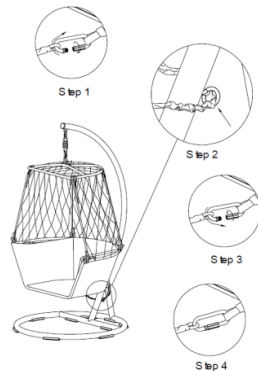


Step 4

Place the back cushion and seat cushion on the frame.

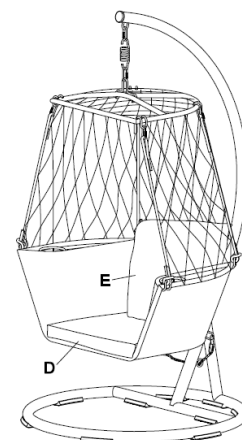

Step 5

Please make sure the chair seat is right ahead of the hanging pole before sitting. Do not cause chair to swing outside base area.

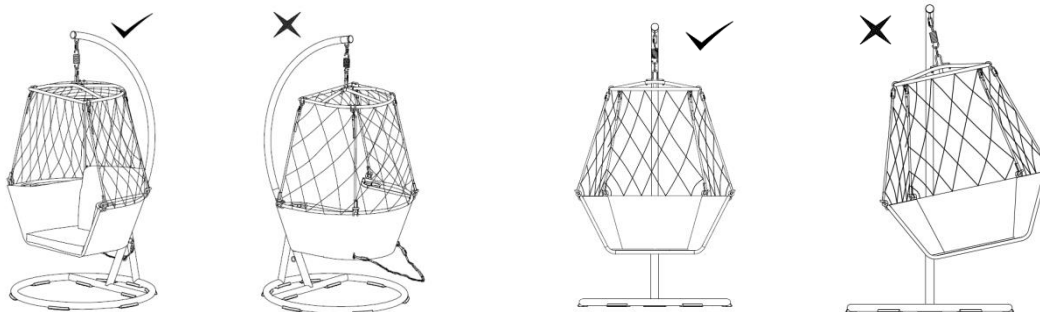

Need Assistance? Visit us at: samsclub.com/membersmarkhelp

Troubleshooting

Problem	Possible Cause	Prevention / Solution
Chair Frame with Bungee attached drop	Spring with Carabiners may loosen overtime.	Periodically check that Spring with Carabiners are tight.
Chair Frame swing outside base area	Bungee with Carabiners may loosen overtime.	Periodically check that Bungee with Carabiners are tight.
Chair is unstable	Hardware may loosen overtime.	Check all connections are tight, do not use if bolts or hardware are missing or damaged.

Storage Instructions

1. Carefully place all components into shipping box and/or provided container tape it shut.
2. When not in use, please store your item in a cool, dry place away from sunlight.
3. Exposing your item to excessive heat or humidity may damage your item.

Technical Data

Steel: Q235

Sunbrella Fabric: Acrylic

Need Assistance? Visit us at: samsclub.com/membersmarkhelp

Warranty Information

This product component has a 3 years guarantee against defects in material and/or workmanship. If you have any questions regarding the warranty or spare / replacement parts, please call our toll-free number 1-888-690-9800 or email us at cs@sunvillahome.com

NOTE: Please consider recycling all applicable packaging material.

Distributed by Sam's West Inc.
2101 SE Simple Savings Dr.
Bentonville, Arkansas 72716-0745

Made in China



Need Assistance? Visit us at: samsclub.com/membersmarkhelp