


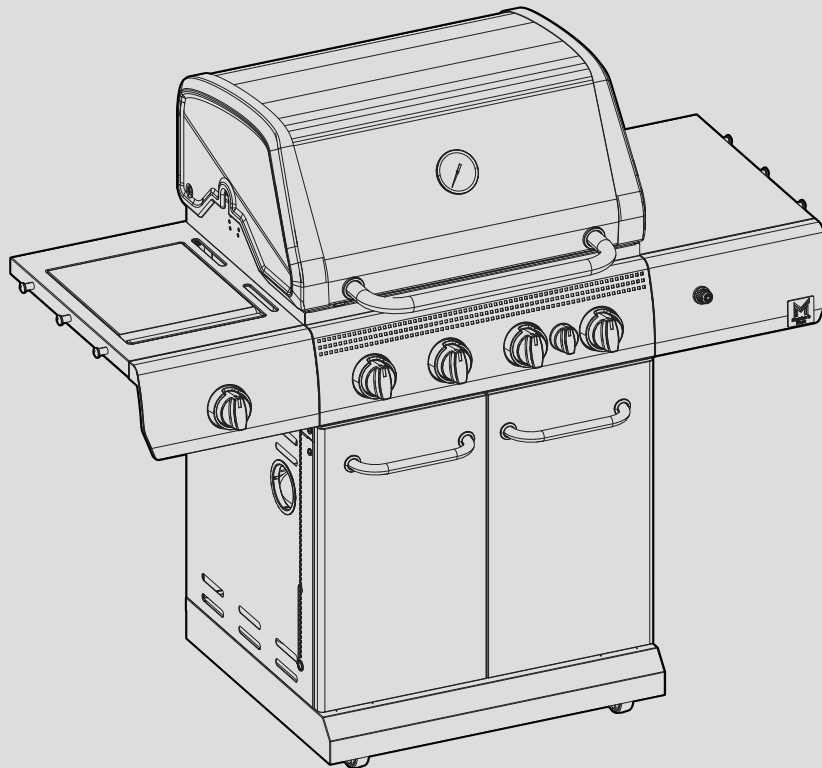

5-BURNER GAS GRILL



Assembly Instructions & User Manual

Model G48101

Scan for easy 3D instructions

Tap. Zoom. Rotate with official interactive instructions on the BILT app.



BILT.

Download on the
App Store

GET IT ON
Google Play



Quick Start Video
Scan this QR code.



STOP



Do not return this product to the store. If you need help or require parts, call the Customer Care Hotline:

1-833-454-0864

This manual must remain with the product at all times.

FOR OUTDOOR USE ONLY.



IMPORTANT SAFETY WARNINGS



**THIS MANUAL MUST REMAIN WITH
THIS PRODUCT AT ALL TIMES**



⚠ CAUTION

Read and follow all safety statements, assembly instructions, use and care directions before attempting to assemble and cook.

⚠ INSTALLER OR ASSEMBLER/CONSUMER

This manual should be kept with the grill at all times.

⚠ WARNING

Failure to follow all of the Manufacturer's instructions could result in hazardous fires, explosions, property damage, or serious personal injury or even death.

Follow all leak check procedures carefully prior to operation of grill, even if grill was dealer assembled. Do not try to light this grill without reading the Lighting Instructions section of this manual.

⚠ DANGER

1. If you smell gas:

- a. Shut off gas to the appliance.**
- b. Extinguish any open flame.**
- c. Open lid.**
- d. If odor continues, keep away from the appliance and immediately call your gas supplier or your fire department.**

2. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.

3. LP gas cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.

⚠ CAUTION

IN DIRECT SUN, AND IN OPERATION, YOUR GRILL'S STAINLESS STEEL AND PAINTED STEEL PARTS CAN BECOME VERY HOT.



THIS GRILL IS FOR OUTDOOR USE ONLY



⚠ CAUTION

Some parts may contain sharp edges, especially as noted in the manual. Wear protective gloves during assembly and usage of this appliance.




For residential use ONLY. Do not use for commercial cooking.

⚠ WARNING



Do not attempt to repair or alter the hose and regulator or valve assembly for any assumed defect or for any type of retro fit or conversion. Any modifications to this assembly will void your warranty and create the risk of a gas leak and fire. Use only authorized replacement parts supplied by the manufacturer, for your model.

TABLE OF CONTENT

| | |
|--|-----------|
| INSTALLATION / ADDITIONAL WARNINGS | 4 |
| LP GAS CYLINDER HOOK-UPS AND WARNINGS | 5 |
| SAFETY HOSE AND REGULATOR: | |
| Installing LP gas cylinder | 6 |
| Regulator reset procedure | 8 |
| Leak test procedure | 9 |
| LIGHTING INSTRUCTIONS | 11 |
| START GRILLING | 14 |
| PREVENTION | 17 |
| MAINTENANCE | 19 |
| STORING YOUR GRILL | 21 |
| TROUBLESHOOTING | 22 |
| ASSEMBLY INSTRUCTIONS | 25 |
| WARRANTY AND SERVICE | 49 |

-  **DANGER:** Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
-  **WARNING:** Be alert to the possibility of serious bodily injury if the instructions are not followed. Be sure to read and carefully follow all of the messages.
-  **CAUTION:** Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.


CALIFORNIA PROPOSITION 65 WARNING

-  **WARNING:** This product can expose you to chemicals including lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov
-  **WARNING: CONTAINS LEAD. MAY BE HARMFUL IF EATEN OR CHEWED. COMPLIES WITH FEDERAL STANDARDS. KEEP OUT OF REACH OF CHILDREN.**

INSTALLATION

Installation must conform with local codes or, in the absence of local codes, with either the National Fuel Gas Code, ANSI Z223.1/NFPA 54, Natural Gas and Propane Installation Code, CSA B149.1, or Propane Storage and Handling for Recreational Vehicles, ANSI A 119.2/NFPA 1192, and CSA Z240 RV Series, Recreational Vehicle Code, as applicable.

ADDITIONAL WARNINGS

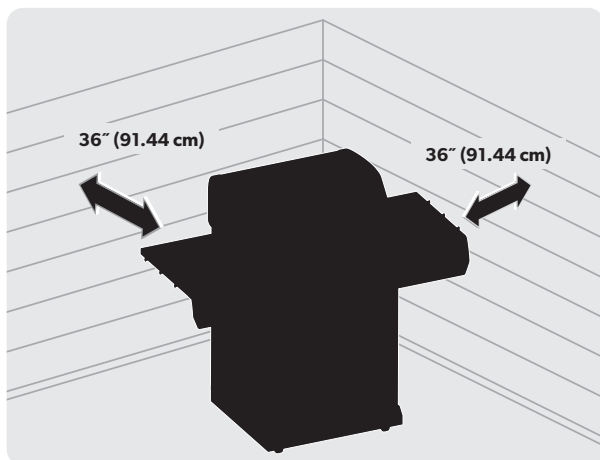

MINIMUM CLEARANCE TO ADJACENT COMBUSTIBLE MATERIALS:

MINIMUM OF **36" (91.44 CM)** FROM FURTHEST PROTRUDING EDGE ON ALL SIDES OF THE GRILL.



DO ENSURE GRILL IS POSITIONED ON LEVEL SURFACE.

MINIMUM CLEARANCE OF 36" ON BOTH SIDES AND REAR OF THE GRILL.

- **DO NOT** operate this grill under or near any overhanging or unprotected construction, aluminum siding, windows, or fencing.
- **DO NOT** use in enclosed spaces such as carport, garage, porch or covered patio.
- **DO NOT** obstruct the flow of combustion and ventilation air to the grill.
- **DO NOT** place grill against a wall or other solid structure.
- **DO** always keep the area around this grill clean and clear of any and all combustible materials such as gasoline or other inflammable liquids, paper or oily rags.
- **DO** remember this grill is for **OUTDOOR USE ONLY** and is **NOT** for use on any boat or recreational vehicle.
- **DO** use this grill outdoors in a well-ventilated area, at least **36" (91.44 cm)** from any dwelling or building.
- **DO** always close LP cylinder valve and remove coupling nut before moving LP cylinder from specified operating position.
- **DO** check burner flames regularly.
- **DO NOT** attempt to light burner with lid closed. A buildup of non-ignited gas inside a closed grill is hazardous.
- **DO NOT** leave your grill unattended while in operation.
- **DO NOT** use while under the influence of drugs or alcohol.
- **DO NOT** store any spare LP gas cylinder, full or empty, under or near your grill.
- **DO NOT** allow children or pets to play anywhere near the grill.
- **DO NOT** block ventilation holes in the sides or back of grill.
- **DO NOT** use charcoal or ceramic briquettes in this gas grill.
- **DO NOT USE GRILL UNTIL A LEAK-TEST AND A SAFETY CHECK IS COMPLETED.**
- Minimum ambient operating temperature: 0°F (-18°C).

OUTDOOR

- An appliance is considered to be outdoors if installed with shelter no more inclusive than with walls on three sides, but with no overhead cover; all openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered as permanent openings;
- An appliance is considered to be outdoors if installed with shelter no more inclusive than within a partial enclosure that includes an overhead cover and no more than two sidewalls. The sidewalls may be parallel, as in a breezeway, or at right angles to each other; all openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered as permanent openings; or
- An appliance is considered to be outdoors if installed with shelter no more inclusive than within a partial enclosure that includes an overhead cover and three sidewalls, as long as 30% or more of the horizontal periphery of the enclosure is permanently open. All openings must be permanently open; sliding doors, garage doors, windows, or screened openings are not considered as permanent openings.

LP GAS CYLINDER REQUIREMENTS

DO NOT connect to a LP gas cylinder exceeding 9 kg (20 lb) capacity or use a cylinder with any other type of cylinder valve connection device.

LP gas supply cylinder must be constructed and marked in accordance with the specifications for LP gas cylinders of the U.S. Department of Transportation (DOT) or the National Standard of Canada, CAN/CSA-B339, Cylinders Spheres and Tubes for the Transportation of Dangerous Goods.

⚠ WARNING

- (a) Do not store a spare LP-gas cylinder under or near this appliance;
- (b) Never fill the cylinder beyond 80 percent full;
- (c) If the information in "(a)" and "(b)" is not followed exactly, a firecausing death or serious injury may occur.


GAS HOOK-UP'S AND WARNINGS

WHAT IS LIQUID PETROLEUM (LP) GAS?

- Liquefied petroleum gas, also called LP gas, liquid propane or propane is non-toxic, odorless and colorless when produced. For your safety, LP gas has been given an odor (similar to rotten cabbage) so that it can be detected.
- LP gas is highly flammable and may ignite unexpectedly when mixed with air.

LP GAS CYLINDER VALVE MUST HAVE:

- Shut-off valve with a correct cylinder valve output as specified in current standards. CSA/ANSI Z21.58-2022 & CSA 1.6-2022 Outdoor Cooking Gas Appliances.
- Type 1 outlet compatible with regulator or grill. The type 1 valve is easily recognized by the large external thread on the outside of the valve.
- Safety relief valve with direct connection to the vapor space of the cylinder.
- UL listed Overfill Protection Device (OPD). This OPD safety feature is identified by a unique triangular hand wheel.
- Use only LP cylinders equipped with this type of valve.
- A device for vapor withdrawal.
- A collar to protect the LP gas cylinder shut-off valve.
- A ring on the bottom of the LP gas cylinder to secure it to the support assembly.
- Place dust cap on cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder valve. Other types of caps or plugs may result in leakage of propane.

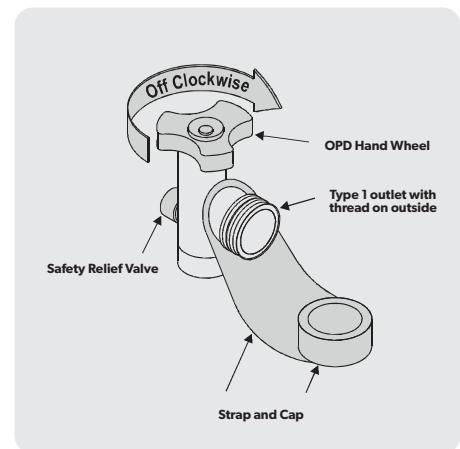


⚠ ATTENTION

Any attempt to connect a regulator to any connectors other than the mating TYPE-1 connector could result in fires, explosions, injuries, or property damage. Use only LP gas cylinders equipped with this type of valve. DO NOT connect to a LP gas cylinder exceeding 9 kg capacity or use a cylinder with any other type of cylinder valve connection device. Before opening LP cylinder valve, check the coupling nut for tightness.

LP GAS CYLINDER RUBBER SEAL INSPECTION



LP GAS WARNINGS:

- Inspect LP gas cylinder valve rubber seal for cracks, wear or deterioration prior to use. A damaged rubber seal can cause a gas leak, possibly resulting in an explosion, fire or severe bodily harm.
- Inspection should be done each time LP gas cylinder is connected to grill, has been refilled, exchanged or has not been used for more than 60 days.
- Do not use a LP gas cylinder with a damaged rubber seal. Exchange LP gas cylinder or have rubber seal replaced at a qualified propane filling station.

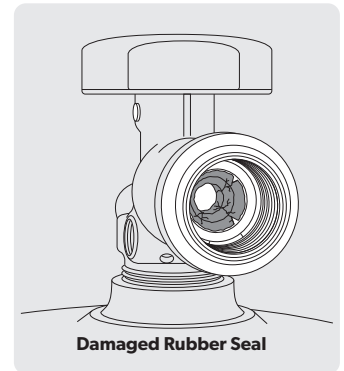

INSTALLING THE LP GAS CYLINDER

1. Check that the cylinder shut-off valve is closed, by turning knob clockwise.
2. Place cylinder into LP gas cylinder holder in bottom of cabinet.
3. Orient LP gas cylinder so valve opening faces forward.
4. Secure the LP gas cylinder using the tank retention screw.

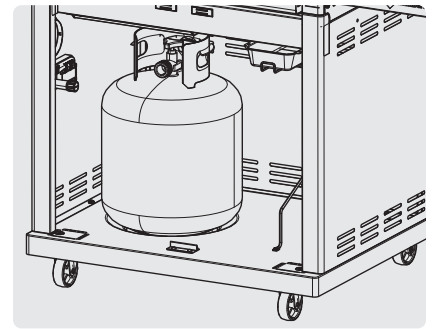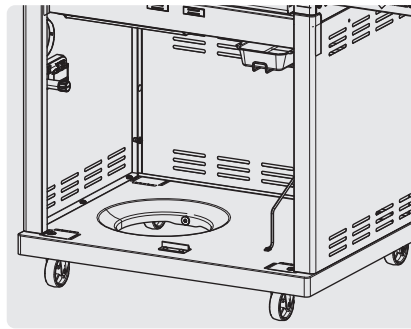

⚠ DANGER

- NEVER store a spare LP gas cylinder, empty or full, under or near the appliance.
- Never fill a cylinder beyond 80% full.
- An over filled or improperly stored cylinder is a hazard due to possible gas release from the safety relief valve. This could cause an intense fire or explosion with risk of property damage, serious injury or death.
- Do not store objects or materials inside the grill cabinet enclosure that would block the flow of combustion air to the underside of either the control panel or the firebox.
- If you see, smell or hear gas escaping, immediately get away from the LP gas cylinder/ grill and call your fire department.



LP GAS WARNINGS:

- Always turn LP gas cylinder valve off when the grill is not in use.
- Always handle the LP gas cylinder valve with the utmost care.
- Never connect an unregulated LP gas cylinder to the grill.
- Always keep the LP gas cylinder in use, securely fastened in an upright position.
- Never expose the LP gas cylinder to direct sunlight or excessive heat.
- Never insert any kind of object into the valve outlet as this may cause damage to the Backcheck. A damaged Backcheck can leak resulting in fires, explosions, property damage, severe injuries or death.
- Do not store an LP gas cylinder in enclosed spaces such as a carport, garage, porch, covered patio or other building. Make sure the storage area has a lot of ventilation.
- Do not store an LP gas cylinder in an area where children play.

INSTALLING THE LP GAS CYLINDER

HOSE AND REGULATOR

Your grill is equipped with a Type 1 connection device with the following features:

1. The system will not allow gas flow from cylinder until a positive connection to valve has been made.
NOTE: The cylinder valve and all control knobs must be turned "OFF" before any connection is made or removed.
2. A regulator flow limiting device, when activated, restricts the flow of gas to 10 cubic feet per hour. If the flow limiting device is activated, perform Regulator Reset Procedure.
3. A thermal element built into the regulator supply hose will shut the flow of gas between 240—300°F (115.5—148.8°C).


NOTE: If you are experiencing performance issues such a low heat, low flame, or difficulty lighting, you have likely tripped your regulators flow limiting feature. Follow steps for regulator reset, on page 8.

CONNECTING HOSE AND REGULATOR

⚠ ATTENTION

Visually inspect hose prior to each use for damage, excess wear, or deterioration. If found, replace hose before using your grill. Only the manufacturer's supplied replacement should be used.

1. Inspect LP gas cylinder valve rubber seal for cracks, wear or deterioration prior to use. A damaged rubber seal can cause a gas leak, possibly resulting in an explosion, fire or severe bodily harm. Do not use a LP gas cylinder with a damaged rubber seal.
2. Check that the grill's burner control knobs are "OFF".
3. Check that the cylinder valve is closed by turning knob clockwise.
4. Position the LP gas cylinder into the grill cabinet and secure with the tank screw.
5. Remove the protective plastic cap from cylinder valve.
6. Check that the hose does not contain kinks, and ensure that the supply hose does not come in contact with any sharp edges.

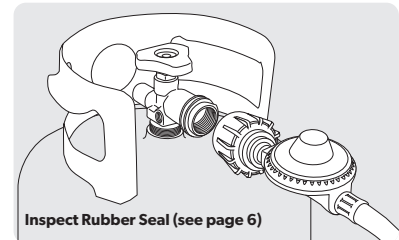

⚠ WARNING

Ensure that the supply hose does not come in contact with the heat shield above.

7. Connect the Type 1 regulator coupling to the LP gas cylinder valve, turning clockwise. Hold the regulator in a straight line with the LP cylinder when connecting. Take care not to cross thread. Hand-tighten only.
8. Leak check all fittings before lighting your grill. See section on "Leak Testing" in this manual.

NOTE: To remove regulator from LP gas cylinder, turn off the valve and rotate large coupling nut counter-clockwise.

REGULATOR RESET PROCEDURE

If you are experiencing any of the following performance issues, you may have activated the flow limiting feature in your regulator:

- Burners not getting hot enough.
- Low or incomplete burner flames.
- Low gas pressure.
- Difficulty lighting all burners or burners not staying lit.



Flow Limiting Device Video
Scan this QR code.



BEFORE DISCONNECTING THE LP GAS CYLINDER:

1. With all control knobs in the "OFF" position and the LP gas cylinder shut-off valve in the "OFF" position, open the grill lid.
2. Disconnect the regulator from the LP gas cylinder.
3. Turn all control knobs to the "10" position, and let stand for 1-3 minutes, allowing all excess gas in the gas manifold to dissipate.
4. Turn all control knobs back to the "OFF" position.
5. With the grill lid still OPEN, reconnect the regulator to the LP gas cylinder. Do not cross thread the connection. Hand-tighten only.
6. Check all connections to ensure that a positive seal has been made.
7. Slowly open the LP gas cylinder shut-off valve.
8. Wait approximately 30 seconds for the regulator pressure to stabilize.

NOTE: If the LP gas cylinder is opened too quickly, the flow limiting device in the regulator will activate, limiting the flow of gas from the LP gas cylinder.

9. Turn the first control knob to the "10" position.
10. Press the electronic ignition button, or use a match and the match holder, or a grill lighter to ignite the burner.

NOTE: Avoid activating the flow limiting feature in the regulator by following the proper lighting and shutdown procedures and performing a complete leak test and safety check to ensure that there are no leaks in the system.

⚠ WARNING

Never use your grill without leak testing all gas connections, hoses and LP gas cylinder.

⚠ DANGER

To prevent fire or explosion hazard:

- DO NOT smoke or permit ignition sources in the area while conducting a leak test.
- Perform test OUTDOORS in a well ventilated area that is protected from the wind.
- Never perform a leak test with a match or open flame.
- Never perform a leak test while the grill is in use or while grill is still hot.

LEAK TEST PROCEDURE

WHEN TO PERFORM A LEAK TEST:

- After assembling your grill and before lighting for the first time, even if purchased fully assembled.
- Every time LP gas cylinder is refilled, exchanged or if any of the gas components are disconnected or replaced.
- Any time your grill has been moved.
- At least once per year or if your grill has not been used for more than 60 days.

CHECKING FOR LEAKS:

1. Create a mixture of 50% water and 50% liquid dishwashing soap.
2. Open lid.

NOTE: The leak test must be performed in an area that has adequate lighting in order to see if bubbles are developing and not in a windy or noisy area so larger leaks can be detected by smell or sound.

3. Ensure all control knobs are set to "OFF".
4. Brush or spray soapy water solution onto all connections shown.
5. Slowly open LP gas cylinder shut-off valve by turning the hand wheel counter clockwise.
6. Check each location listed (A–J) for growing bubbles, which indicates a leak. Large leaks may not be detected by bubbles but should produce a rushing sound or gas smell.
7. Turn off gas supply at LP gas cylinder valve.

⚠ WARNING

If you hear a rushing sound or smell gas, turn gas off. Tighten any leaking connections. If leak is detected at connection nut and tightening does not stop leak, reinspect LP gas cylinder rubber seal.

8. Tighten any leaking connections. If a leak is detected at connection nut and tightening does not stop leak, reinspect LP gas cylinder rubber seal (see page 6).
9. Repeat soapy water test until no leaks are detected.
10. Turn off gas supply at LP gas cylinder valve until you are ready to use your grill.
11. Wash off soapy residue with cold water and towel dry.
12. Wait 5 minutes to allow all gas to evacuate area before lighting grill.




Leaking Test Video
Scan this QR code.



⚠ WARNING

DO NOT use grill if leaks cannot be stopped. Customer Care hotline at 1-833-454-0864.

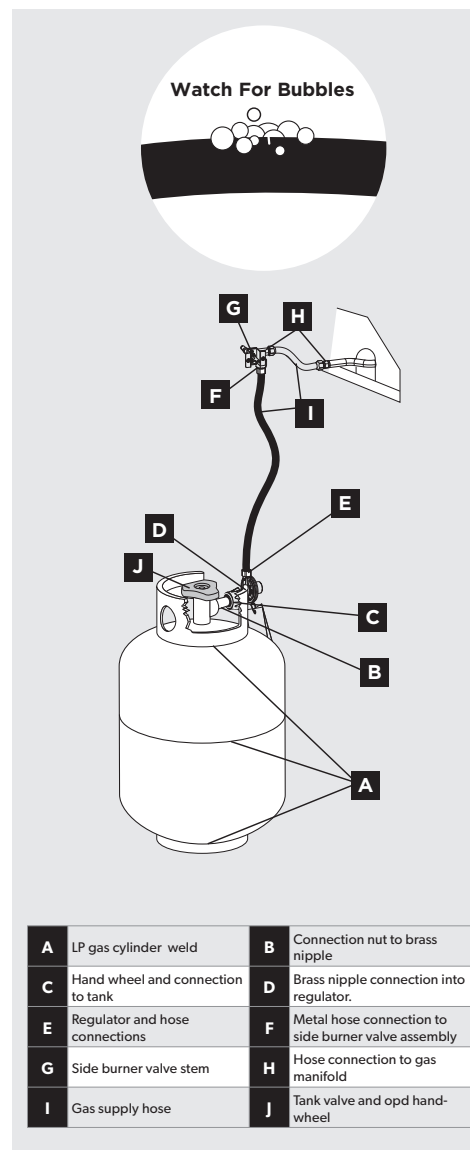

LP CYLINDER REMOVAL, TRANSPORT AND STORAGE

BEFORE DISCONNECTING THE LP CYLINDER:

1. Turn "OFF" all control knobs and the LP gas cylinder valve.
 2. Turn coupling nut counter-clockwise by hand only - do not use tools to disconnect. Remove LP gas cylinder from inside cabinet.
 3. Install safety cap onto LP gas cylinder valve. Always use cap supplied with LP cylinder valve.
- **Failure to use safety cap as directed may result in serious personal injury and/or property damage.**

WARNING

When transporting and storing the cylinder, make sure it is in an upright position and not on its side. Do not smoke around cylinder, especially when transporting in a vehicle.

LP GAS CYLINDER FILLING

- Use only licensed and experienced dealers.
- **Ensure that the dealer checks and tests the LP gas cylinder for leaks after filling.**
- LP gas cylinder dealer must purge new cylinder before filling.
- Dealer should **NEVER** fill LP gas cylinder more than 80% of LP gas cylinder volume. Volume of propane in LP gas cylinder will vary by temperature.
- Do not release liquid propane LP gas cylinder into the atmosphere. This is a hazardous practice.
- To remove gas from LP cylinder, contact an LP gas cylinder dealer or call a local fire department for assistance.

WARNING

If the above instructions are not completely adhered to, it could cause a fire/explosion, resulting in death or serious Injury, or property damage.

CAUTION

A frosty regulator indicates gas overfill. Immediately close LP gas cylinder valve and call local LP gas cylinder dealer for assistance.

DANGER

Property damage, bodily harm, severe burns, and death could result from failure to follow these safety steps. These steps should be performed after the grill has been assembled and prior to each use. **DO NOT** operate this grill until you have read and understand ALL of the warnings and instructions in this manual.

LIGHTING INSTRUCTIONS


LIGHTING THE MAIN BURNERS AND SEAR ZONE BURNER:

Read instructions before lighting.

1. Open lid before lighting.
2. Make sure all control knobs and the LP gas cylinder shut-off valve are "OFF."
3. Open the LP gas cylinder valve. Wait 5 seconds.
4. Turn desired burner control knob to the "10" (⚡) or "MAX" position.
5. Press igniter. Repeat if necessary.
6. If ignition does not immediately take place, turn burner control knobs "OFF". Wait 5 minutes before lighting with a match or butane lighter.
7. Once main burner is lit, if desired turn on sear zone burner knob.



Lighting Instruction
Video Scan this QR code.

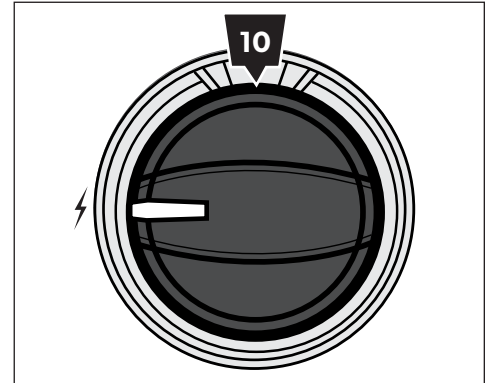

⚠ WARNING

Never stand with your head directly over the grill when preparing to light the main burners, to prevent possible bodily injury.

⚠ ATTENTION


Once lit, confirm that the burner is properly lit and that the flame pattern is as desired. If the flame pattern is other than normal, consult the troubleshooting guide for corrective action.

MATCH LIGHTING THE MAIN BURNERS:

IMPORTANT: When match lighting the grill use the control knob closest to the match lighting hole.

Repeat steps 1 to 4 of "**LIGHTING THE MAIN BURNERS AND SEAR ZONE BURNER**" above.

1. To match light: push in and turn the far left burner control knob counter-clockwise to the "10" (⚡) or "MAX" position.
2. Immediately strike a match or use a butane lighter and position through the lighting hole on the left side of the firebox. The burner should light.
3. To light the other burners, press in and turn the nearest control knob. The flame will track around the burner and light via the carryover tubes. Allow the grill to preheat with the grill lid closed for 10-15 minutes before cooking.

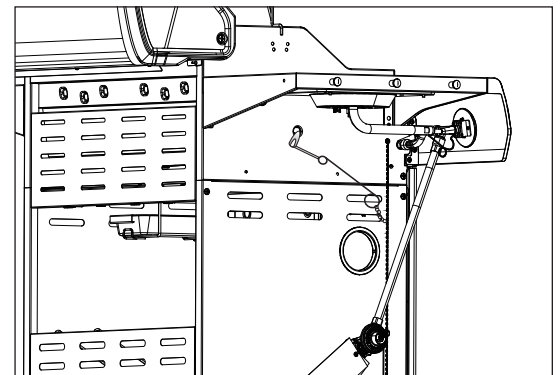

LIGHTING INSTRUCTIONS

LIGHTING THE SIDE BURNER

NOTE: After using the side burner, wait until the unit is completely cool before closing the side burner lid.

1. Open the side burner lid.
2. Confirm that all burner control knobs are in the "OFF" position before opening the gas supply.
3. Open the LP gas cylinder valve.
4. Turn the side burner control knob to the "10 (⚡)" position. Wait 5 seconds.
5. Immediately press the igniter button. You will hear rapid clicks. Repeat if necessary.

⚠ CAUTION


If the side burner fails to light, immediately turn the burner control knob "OFF" and wait for 5 minutes before attempting to re-light it with a match.

MATCH LIGHTING THE SIDE BURNER

1. Open lid. Turn "OFF" all control knobs. Ensure LP gas cylinder is closed.
2. Open the LP gas cylinder valve.
3. Turn the side burner control knob to to the "10 (⚡)" position. Wait 5 seconds.
4. Insert a lit match or a butane lighter under the side burner grate.

⚠ CAUTION

If ignition does NOT occur in 5 seconds, turn the burner controls "OFF", wait 5 minutes and repeat the lighting procedure. If the burner does not ignite with the LP gas valve open, gas will continue to flow out of the burner and could accidentally ignite with risk of injury. Turn controls and gas source "OFF" when not in use.

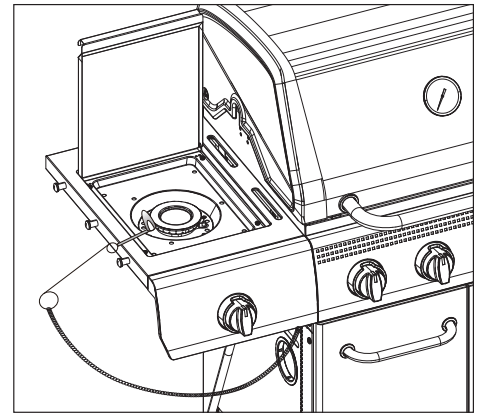

⚠ ATTENTION

Always preheat grill before starting to cook. Light all burners and adjust them to the "10" position with the lid closed until the desired temperature is reached. Following preheat, adjust the controls to low/medium setting for most cooking requirements.

⚠ ATTENTION

If the heat output is too low, the "Flow Limiting" feature may have been activated due to a gas leak or improper lighting procedure. If so, turn "OFF" all control knobs and cylinder valve, and perform a "Leak Test". If there are no leaks, perform a complete regulator "Flow Limiting Device" reset.

LIGHTING INSTRUCTIONS

USING THE SIDE BURNERS

- The side burner can be used to prepare side dishes such as beans, potatoes, corn, or to warm sauces.
- The burner valve can be adjusted from high to low depending upon your cooking demands.

⚠ WARNING

- Never close the side burner cover when the burner is lit.
- Use a 10" diameter pot or smaller that does NOT have an extended handle when cooking on the side burner. Center pot over the burner.
- Never place more than 15 pounds on the side burner. The side burner is not constructed to hold weight exceeding 15 pounds.
- Use caution to avoid bumping the grill or side burner.
- DO NOT use side burner to deep fry food in oil to avoid dangers associated with oil igniting, creating a very dangerous situation.


SHUT DOWN PROCEDURE

1. Push in and turn each control knob clockwise to the "OFF" position.
2. Turn LP gas cylinder shut-off valve clockwise to close.

⚠ CAUTION

The cylinder valve should always be in the "OFF" or closed position when grill is not in use.

TURN SHUT-OFF
VALVE CLOCKWISE TO
CLOSE

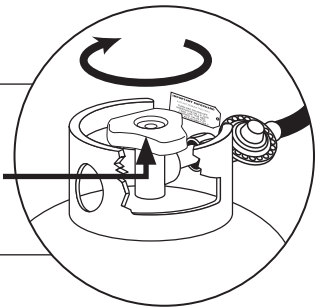

START GRILLING

⚠ WARNING:

Read and follow all warnings and instructions contained in the preceding sections of this manual.

- DO NOT cover cooking grates or other components with aluminum foil, as this blocks ventilation and damage to grill or result in personal injury.
- DO NOT leave your grill unattended while it is "ON" or in use.
- DO NOT move grill when it is hot, or in use.
- DO NOT use water on a grease fire. If safe to do so, close the grill lid to extinguish the fire or smother with dirt, sand or baking soda. If closing the lid to extinguish the fire is not possible, use a fire extinguisher or smother the fire with dirt, sand, or baking soda.
- Never cook on the grill without the grease cup/tray in place.

BREAKING IN YOUR GRILL:

- In the process of manufacturing and preserving the components of your grill, oil residue may be present on burners and cooking surfaces.
- Before cooking for the first time you should preheat for 15 minutes on "10" to burn off these residual oils.

SEAR ZONE BURNER

Sear zone burner is your answer to more heat when you need it. Use your sear zone burner burner in colder temperatures, or when you require a boost of heat to sear the perfect steak.

Sear zone burner winter use:


- For use when outdoor temperatures are below 5°C.
- During preheat set sear zone burner and main burners to "MAX (⚡)" and preheat with the lid closed, until desired temperature is reached.
- Once desired temperature is reached, adjust ALL burners to lower temperature, cook with lid closed, and monitor temperature gauge, adjusting burners as necessary.

TIP: During cold weather cooking, avoid opening the lid when possible to reduce heat loss, and maintain desired temperatures.

How to Sear:

After pre-heat, set the sear zone burner and burner #3 and burner #4 to the "MAX (10)" position.

- Set burner #1 and burner #2 to medium low/ "3", to create a lower temperature cooking zone.
- Position meat in the area above the **SEAR ZONE** and sear each side of meat for 1-4 minutes, until desired sear is reached, and then move to lower temperature area on your grill to complete. Never leave your grill unattended temperatures.

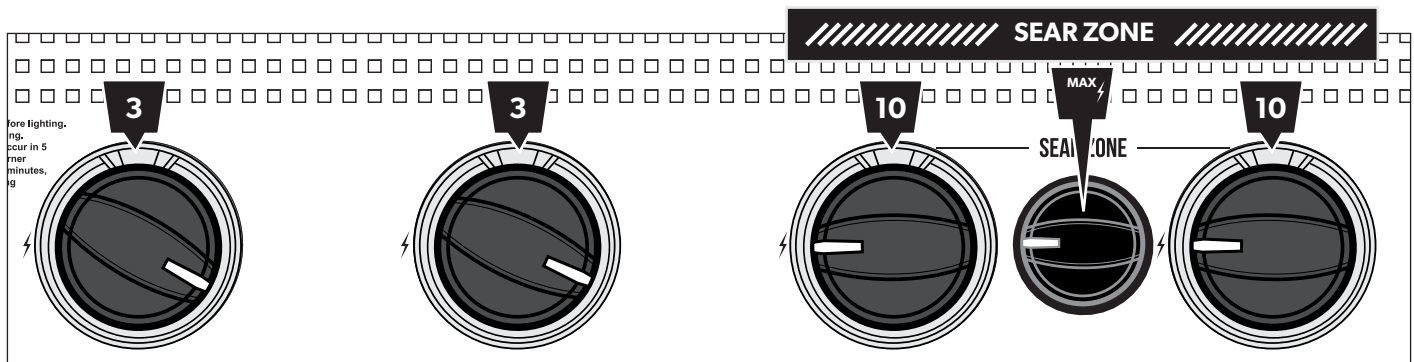

START GRILLING

USING RUBS AND SAUCES

Always apply dry rubs to meat in advance of cooking and let it sit, covered at room temperature for a minimum of 20 minutes. Dry rubs contribute to the delicious, bold flavors and crunchy "bark" or crust that builds up during low and slow cooking.

- Always apply sauces towards the end of the cook to create a caramelized crust. Applying sauce too early can cause the sauce to burn or dry out leaving a bitter burnt char on the surface.

SEASONING:

After performing a burn off and brushing with a grill brush, allow the grates to complete cool. Using rubber gloves spread VEGETABLE SHORTENING over the entire grate surface. Be thorough. Vegetable oil or canola oil are also good options. Do not use salted fats such as butter or margarine. Position the seasoned grates into the grill. Light your grill, and set to Medium temperature for 30 minutes. Turn all controls "OFF" and close the LP gas cylinder. Let the cooking grates cool. This procedure should be repeated several times throughout the season, to ensure optimal protection from damages related to humidity and corrosion.

ROTISSERIE COOKING:

- Your grill is pre-drilled with mounting holes for a universal rotisserie (sold separately Item #990133827).
- Read and follow all instructions provided with the rotisserie kit. Save instructions for future reference.

START GRILLING

GRILL COOKING TIPS:



WARNING
TO ENSURE THAT IT IS SAFE TO EAT, FOOD MUST BE COOKED TO THE MINIMUM INTERNAL TEMPERATURES LISTED IN THE TABLE BELOW.





USDA SAFE MINIMUM INTERNAL TEMPERATURES

| | |
|---|----------------|
| Fish | 145° F (63° C) |
| Pork | 160° F (71° C) |
| Egg Dishes | 160° F (71° C) |
| Steaks and Roasts of Beef, Veal or Lamb | 145° F (63° C) |
| Ground Beef, Veal or Lamb | 160° F (71° C) |
| Whole Poultry (Turkey, Chicken, Duck, etc.) | 165° F (74° C) |
| Ground or Pieces Poultry (Chicken Breast, etc.) | 165° F (74° C) |

USDA Food Safety and Inspection Service





WARNING: TO ENSURE THAT IT IS SAFE TO EAT, FOOD MUST BE COOKED TO THE MINIMUM INTERNAL TEMPERATURES LISTED IN THE TABLE ABOVE. USDA SAFE MINIMUM INTERNAL TEMPERATURES FISH 145° F (63° C), PORK 160° F (71° C), EGG DISHES 160° F (71° C), STEAKS AND ROASTS OF BEEF, VEAL OR LAMB 145° F (63° C), GROUND BEEF, VEAL OR LAMB 160° F (71° C), WHOLE POULTRY (TURKEY, CHICKEN, DUCK, ETC.) 165° F (74° C), GROUND OR PIECES POULTRY (CHICKEN BREAST, ETC.) 165° F (74° C).

PREVENTION

CONTROLLING FLARE-UPS/GREASE FIRES:

- Flare-ups are a common occurrence when cooking meats on a gas grill. Use caution when opening lid, as sudden flare-ups may occur. Excessive flare-ups can overcook your food and create a dangerous situation for you and your grill. Excessive flare-ups result from the build-up of grease in your grill. If this should occur, **DO NOT** pour water onto the flames. This can cause grease to splatter and may result in serious burns or bodily harm.
- If safe to do so, remove food from grill surface, close the lid, shut off all grill control knobs, close LP gas cylinder valve and allow the fire to burn-out.
- If grease fire does not quickly burn out, or if the fire is growing/spreading: Use fire extinguisher or smother the fire with baking soda.

TO MINIMIZE FLARE-UPS:

- Trim excess fat from meats prior to cooking.
- Cook meats with high fat contents (chicken or pork) on "LOW" settings or indirectly.
- Ensure that your grill is on level ground and grease is allowed to evacuate grill the drain hole in the bottom and into the grease cup/tray.
- Clean the grill frequently to minimize grease build-up.


PROPER BURNER FLAME PATTERN

The burner flame pattern is the key indicator of proper or improper function within the cook system. When the burners are performing correctly, you will see a specific flame pattern. All burner ports should be 2.5 cm/ 1" flame on "10" with orange tips, light blue center, with a darker blue flame at the base of the burner port. Refer to the Troubleshooting section on pages 22-23 if you experience any of the following issues:

- Large, unruly, or irregular orange burner flames.
- The smell of gas in conjunction with irregular flames.
- Low temperatures or uneven heat.

⚠ ATTENTION:

After lighting, ensure the burner is lit correctly and the flame pattern is as expected. If the flame pattern is not normal, check the troubleshooting guide for solutions.

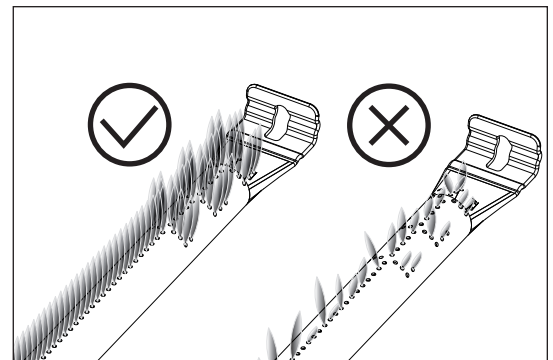


PREVENTION

BLOCKED BURNER VENTURI

Blockages in the burner venturi caused by spiders, insects or nests can cause a FLASHBACK FIRE. A flashback fire occurs when a blockage in the venturi tubes caused by spiders, insects and nests blocks the flow of gas, forcing it back towards the control panel and control knob. The ignited gas, if not detected, can cause a fire to burn in this area.

 IF YOU EXPERIENCE ANY OF THE CHARACTERISTICS OF A FLASHBACK FIRE. CLOSE THE LP GAS CYLINDER SHUT-OFF IMMEDIATELY. FOLLOW THE BURNER CLEANING PROCEDURE OUTLINED IN THE MAINTENANCE SECTION OF THIS MANUAL.



CHARACTERISTICS OF A FLASHBACK FIRE

- A fire burning outside of the firebox, usually visible behind or under the control panel.
- Hot or melting control knobs.
- Large yellow, unruly flames accompanied by the smell of gas.
- Burners not lighting correctly, or partially lighting.

⚠ WARNING

At first sight of yellow, unruly flames, poorly lit burners accompanied by the smell of gas, shut down your grill, and perform burner cleaning maintenance, outlined in the maintenance section of this manual, page 20.

MAINTENANCE

PROPER CARE & MAINTENANCE

ATTENTION:

If you are experiencing any of the following performance or safety issues: 1) grill not reaching temperature potential, 2) yellow burner flames, 3) the smell gas, 4) popping noises, 5) delayed burner ignition, 6) uneven heat, 7) flash fires, or 8) grease fires, **TURN OFF YOUR GRILL** immediately and perform the following maintenance regime. Perform these steps when your grill is off and cool. A thorough cleaning is recommended at least twice a year, or more if your grill is used consistently.

CLEANING THE FIREBOX

Excessive build-up inside the firebox can lead to grease fires and overheating.

1. Use a plastic scraper to scrape debris off the interior surfaces of the firebox, and into the grease tray liner.

IF A MORE THOROUGH CLEANING IS REQUIRED:

2. For stubborn build-up, use a grill degreaser to loosen up debris and then repeat step 1.

CLEANING THE GREASE CUP

The grease cup and grease tray are located below the firebox of the appliance and is accessible from the rear of the grill. It will catch any grease dripping, and food residue that is not burnt off during cooking. Always wait for grease to cool before removing the grease cup or collection tray. The grease cup and collection tray should be emptied regularly to prevent possible flare ups, spillage or grease fires.

CLEANING PORCELAIN CAST IRON COOKING GRATES (IF APPLICABLE)

During preheat, brush cooking grates with a grill brush to remove debris.

IF A MORE THOROUGH CLEANING IS REQUIRED:

1. Wash cooking grates with soap and water only.
2. Rinse and dry thoroughly with a towel. If cleaning on a very hot day, allow grates to dry in the sun.

CAUTION:

Always handle Porcelain-Coated Cast Iron grates with care to avoid damaging the porcelain enamel finish.

CLEANING THE HEAT PLATES

1. Remove heat plates.
2. Holding your heat plate over a large garbage receptacle, use a plastic paint scraper or a grill brush to remove debris

IF A MORE THOROUGH CLEANING IS REQUIRED:

3. Clean away all remaining debris with mild soap and warm water.
4. Dry thoroughly.
5. Re-install.

MAINTENANCE

CLEANING THE BURNERS

Keeping burners free of blockages including spiders, insects, nests and other debris that can block the burner ports is essential for safe operation.

1. Use a clean grill brush to clean the outside of the burner.
2. Remove the hitch pins used to secure the burners to the firebox. Use pliers if necessary.
3. Lift burners out slightly, exposing the burner venturi. Be careful not to damage or disconnect the electrode connector.
4. Use a pipe cleaner or flexible Venturi Brush to clean the interior of all burners. Shake any loose debris out of the burner.
5. Use a wire or paper clip to clean burner port holes. Do not use anything that can damage or enlarge port holes.
6. Use a clean soft bristle brush to clean spider/ insect screens.
7. Reinstall, ensuring that the burner orifice is placed over the gas jet correctly.

CLEANING STAINLESS STEEL COOKING GRATES (IF APPLICABLE)

The stainless-steel cooking grates are very low maintenance. Regular cleaning should include a burn-off of excess grease and brushing away debris with a grill brush.

If a more thorough cleaning is required, grates can be removed and cleaned with warm soapy water and a fine scouring pad, to avoid scratching or damage the surface. Once clean, rinse and dry thoroughly. It is possible to coat the grates with vegetable or canola oil for added protection, but this is best done when the grates are not in the firebox and using a paper towel.

NOTE: IF SEASONING IS REQUIRED, ADD OIL TO YOUR FOOD.

CLEANING THE INSIDE OF THE LID

Over time you may notice “paint-like” peeling on the inside of the grill lid. During use, grease and smoke vapors turn into carbon deposits, which eventually begin to peel. These deposits are non-toxic but should be cleaned off to avoid flakes falling onto food.

Use a grill brush to brush off the carbon build-up from inside the lid to prevent this accumulation.

CLEANING THE EXTERIOR STAINLESS-STEEL SURFACES (IF APPLICABLE)

- Always use a non-abrasive, non-toxic stainless-steel cleaner designed for outdoor products and grills.
- Always use a micro-fiber cloth to clean in the direction of the stainless-steel grain.
- Do not use paper towels as they can scratch the stainless-steel finish.
- If you notice a film or leftover residue from your cleaner, rinse thoroughly with water and dry with a micro-fiber cloth.
- Do not allow any spills from sauces to remain on stainless steel parts.
- Always wipe surfaces immediately following cooking.

MAINTENANCE

CLEANING THE EXTERIOR PAINTED, PORCELAIN ENAMEL SURFACES (IF APPLICABLE)

1. Clean painted and porcelain-coated surfaces with warm soapy water.
2. After wiping down all surfaces, rinse thoroughly with water.
3. Dry with a soft microfiber cloth.

DO NOT USE ANY CHEMICAL CLEANERS ON PAINTED SURFACES AS THEY COULD STRIP THE PAINT AND PERMANENTLY DAMAGE THE SURFACE, LEAVING IT UNPROTECTED.

Cleaning the Outside of Grills that are in Unique Environments if your grill is subject to a particularly harsh environment, you will want to clean the outside more often. Acid rain, pool chemicals, and salt water can cause surface rusting to appear. Wipe down the outside of your grill with warm soapy water. Follow up with a rinse and thorough drying. Additionally, you may want to apply a stainless-steel cleaner weekly to prevent surface rust.

STORING YOUR GRILL

Before storing your grill ensure that cylinder valve is fully closed.

- Clean all surfaces. Lightly coat burners with cooking oil to prevent excess rusting.
- If storing grill indoors, disconnect LP gas cylinder and leave LP gas cylinder OUTDOORS.
- Place dust cap on cylinder valve outlet whenever the cylinder is not in use.
- Check and clean burner prior to use after storing, at the beginning of grilling season or after a period of not being used. Spiders and insects like to build nests in burner tubes (especially during colder months). Blocked burner tubes can prevent gas flow to burners and could result in a burner tube fire or fire beneath grill.
- If storing grill outdoors, cover grill with a grill cover for protection from the weather.
- Remove and clean all components. Season cooking grates with vegetable shortening and wrap in a towel before storing.
- If storing for a prolonged period, remove the igniter battery to avoid corrosion.

WARNING:

- Make sure that LP gas cylinder valve is closed and burner knobs are in the "OFF" position.
- DO NOT store a spare LP gas cylinder (filled or empty) under or near the grill.
- Never store flammable liquids or spray canisters under or near the grill.
- If the outdoor cooking gas appliance is not in use, the gas must be turned off at the LP gas supply cylinder.
- LP gas cylinders must not be stored in a building or enclosure, including garages and sheds.
- LP gas cylinders must be kept out of reach of children.


TROUBLESHOOTING

RESOLVING IGNITION ISSUES, QUICK CHECK:

Press the ignition button located on the left shelf fascia (see image A). You should hear a continuous clicking sound when the button is pressed. If you hear no sound, 1) replace the battery (see image B), 2) check that all wires are firmly pushed in (see image C).

TIP: When checking the wires there are two common trouble spots to pay attention to:

1. The two lead wires connected to the ignition button and the electronic ignition module.
2. Check that all wires connected to the electronic ignition module are firmly pushed in.

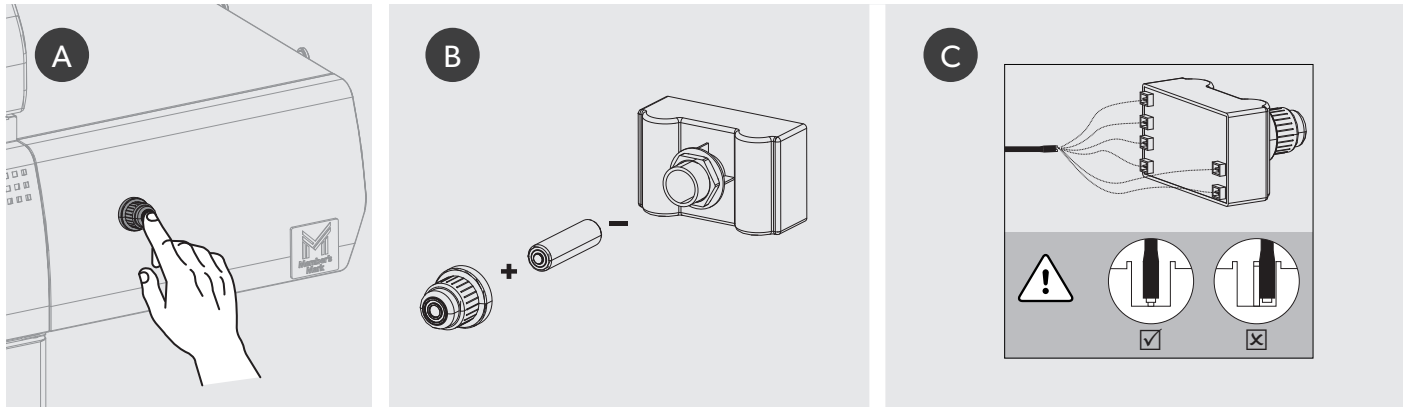

⚠ Battery care, use and disposal ⚠

- DO start by positioning a brand new battery in your electronic ignition module.
- DO remove the battery from the electronic ignition module during storage periods.
- DO recycle or dispose of batteries properly, as per the requirements of your local municipality.

- DO NOT submerge the electronic ignition module in water.
- DO NOT leave the batteries where a child or pet could play with or swallow them.

| PROBLEM | IDENTIFYING THE CAUSE: |
|---|---|
| Burners will not light (with igniter or match) | Positive connection has not been made between the LP gas cylinder and the regulator. |
| | Low or out of propane. |
| | Gas supply valve is turned off. |
| | Burners are not properly seated over valve orifices. |
| | Flow limiting device in regulator has been activated. Follow reset instructions on page 8. |
| Burners will not light with the igniter, but can match-light (no spark) | Ignition module battery needs to be replaced. Replace the battery. Ensure positive side out towards battery cap. |
| | Loose ignition button lead wires - check lead wires on the back of the ignition button. Push in until you feel a click |
| | Loose wires at electronic ignition module (see inside cabinet). Push in until you feel a click. |
| | Faulty electronic ignition module. Contact customer support to order a replacement. |
| Fire at control knob /control panel flashback fire | Burner and/or burner tubes have a blockage, forcing flames back towards the user. Burners must be removed and cleaned to resolve this issue. Follow the steps on page 20. |
| | Burner is improperly seated over gas jet. The gas valve must sit inside of the burner venturi. Disassemble the burner and fix the assembly. |
| Yellow smokey flames/ gas odor can be smelled | Burner and/or burner venturi is obstructed and needs to be cleaned. Burners must be removed and cleaned, to resolve this issue. Follow the steps on page 20. |
| | Possible spider web or other debris. |

TROUBLESHOOTING


| PROBLEM | IDENTIFYING THE CAUSE: |
|--|---|
| Flame blows out on LOW | Flow limiting device in regulator has been activated, either due to a leak or improper lighting. You must conduct a leak test (page 9) and reset the regulator (page 8). |
| | Low or out of propane. |
| | High wind condition. Adjust your grill to shield from wind. |
| | Burner is improperly seated on gas jet. The gas valve must sit inside of the burner venturi. Disassemble the burner and fix the assembly. |
| Low heat | Flow limiting device in regulator has been tripped, restricting the flow of gas to the burners. You must perform a regulator reset (page 8) and follow proper lighting procedure (pages 11-13) to avoid this in the future. |
| | Make certain the problem is isolated to only one burner. If it appears so, the burner and/or burner tubes are blocked. Burners must be removed and cleaned to resolve this issue. Follow the steps on page 20. |
| | Check for a bent or kinked fuel hose. |
| | In colder temperatures, preheat for longer periods. |
| Low or incomplete flame (assuming burners and venturi tubes are free and clear of blockages) | Flow limiting device in regulator has been activated due to a leak or improper lighting. Perform a leak test (page 9) and perform a regulator reset (page 8). |
| Too much heat/ Excessive flare-ups | Excessive grease and build-up on heat tents, in grease cup and within firebox. Follow cleaning steps on pages 19. |
| | Cooking on the HI position: Only use HI for preheating and searing. Always adjust the temperature to avoid too much heat. |
| | Covering more than 70% of the cooking surface may cause overheating. |
| | Excessive fat on meat. Always cut fat where possible to limit excess grease drippings. |
| "Paint" appears to be peeling inside lid | The interior lid is aluminum and not painted. Carbon from baked on grease can accumulate on the lid's interior, resembling flaking paint. Follow cleaning steps on page 19. |
| | To remove, you will need to brush or scrape the buildup away. |
| Decreasing heat, burner output on "10" setting is too low. (Rumbling noise and fluttering blue flame at burner surface) | Out of propane or supply hose pinched. |
| | Burner and/or burner tubes are blocked. Follow cleaning on page 20. |
| | Regulator flow limiting device activated either by improper lighting, opening LP gas cylinder too quickly or a leak in the system. Perform a leak test page 9 and perform a regulator reset page 8. |
| Humming noise from regulator | Cylinder valve opened too quickly. |
| | This is not a defect. It is caused by internal vibrations in the regulator and does not affect performance or safety of the gas grill. |

WARNING:

HEED THE WARNINGS IN THIS MANUAL. ALWAYS PERFORM A LEAK TEST, EVERY TIME YOU REFILL OR CHANGE YOUR LP GAS CYLINDER. NEVER LEAVE YOUR LP GAS CYLINDER OPEN WHILE NOT IN USE. NEVER LEAVE THE CONTROL KNOBS OPEN WHILE NOT IN USE. ALWAYS OPEN YOUR GRILL LID BEFORE ATTEMPTING TO LIGHT YOUR GRILL.



WARNING: HOT SURFACES

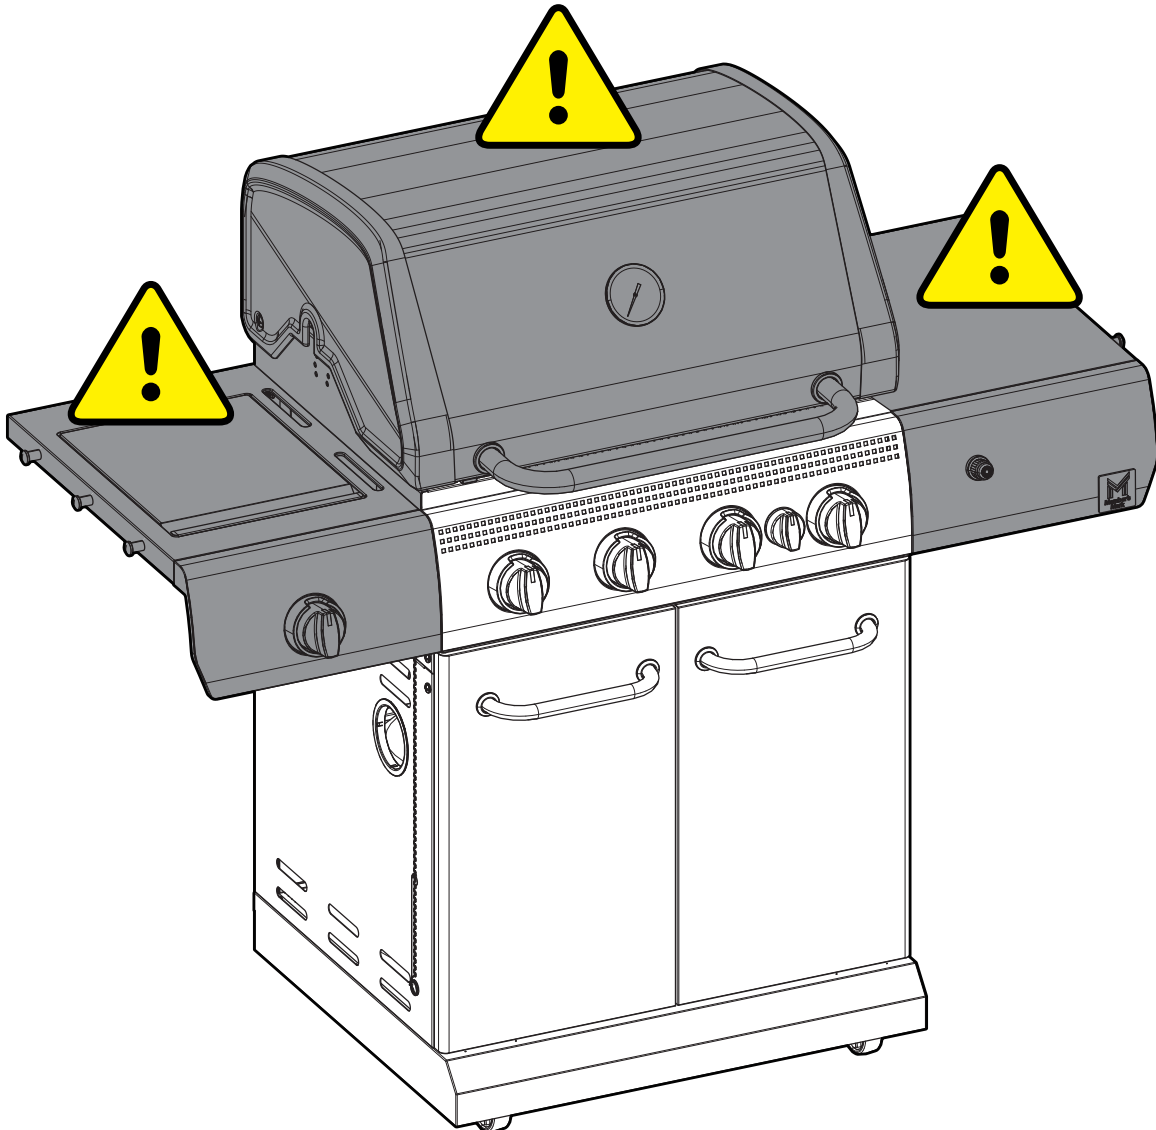

WARNING: EXTERIOR SURFACES WILL BECOME VERY HOT. TO PREVENT BURNS, ALWAYS WEAR INSULATED PROTECTIVE GRILL MITTS WHEN WORKING AT THE GRILL.

- **KEEP AWAY FROM COMBUSTIBLE MATERIALS.**
- **KEEP CHILDREN AND PETS AWAY FROM THIS GAS-FIRED GRILL.**
- **AVOID DANGEROUS FIRES: DO NOT LEAVE YOUR GRILL UNATTENDED WHILE IN OPERATION.**

Scan for easy 3D instructions




Tap. Zoom. Rotate with official interactive instructions on the BILT app. Download now for faster setup.







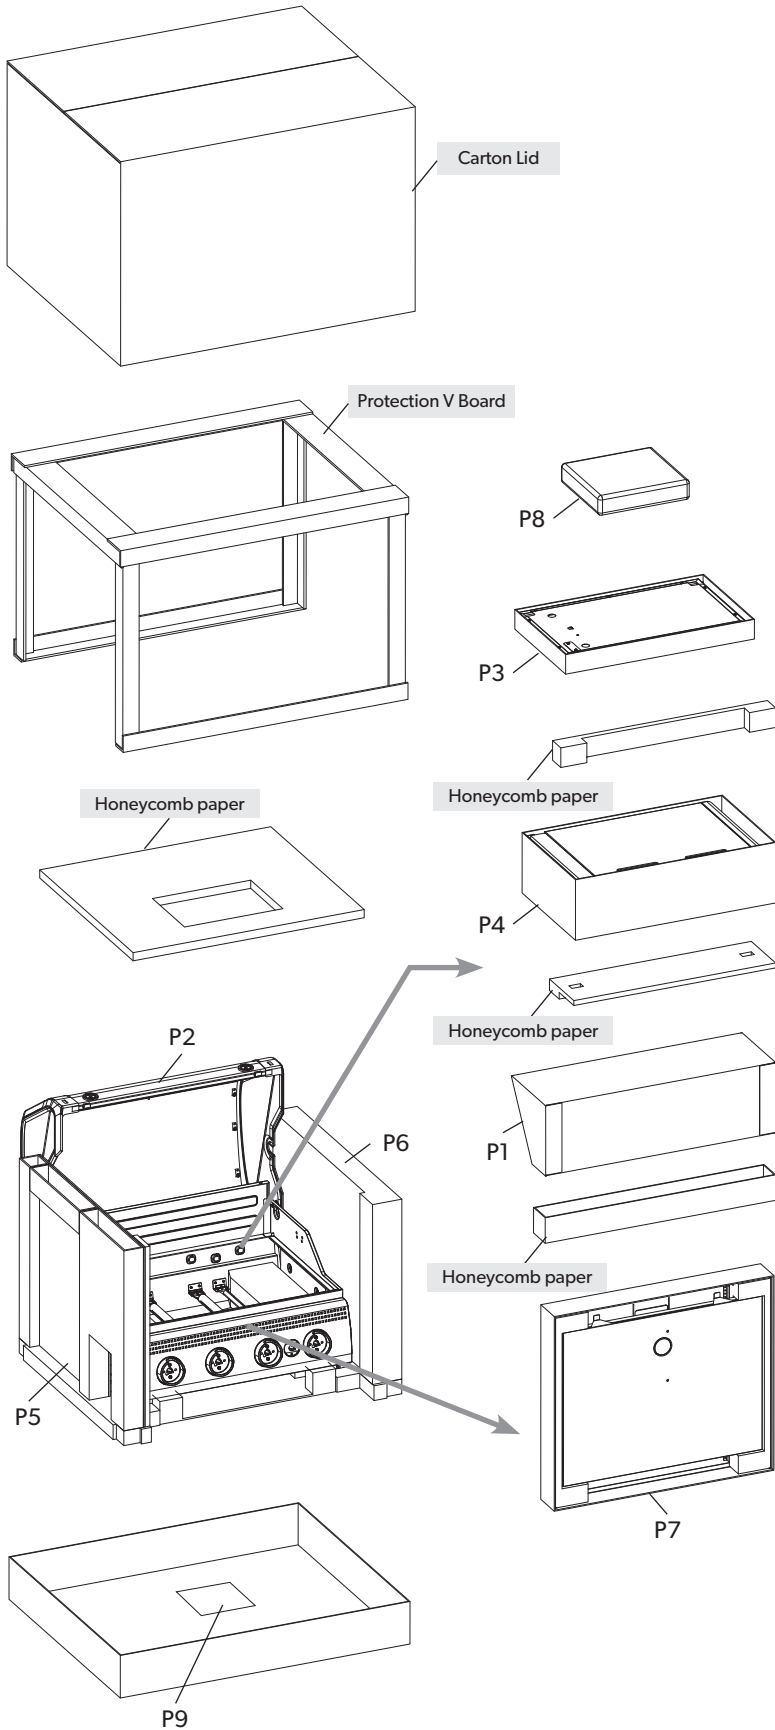




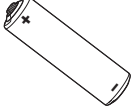


BILT.[®]


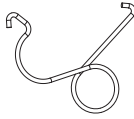

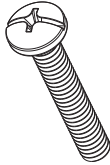
PACKAGE CONTENTS




| Component | Description | Qty |
|-----------|----------------------------|-----|
| P1 | Lid Handle | 1 |
| | Warming Rack | 1 |
| | Front Brace | 1 |
| P2 | Firebox Assembly | 1 |
| P3 | Door | 2 |
| P4 | Door Handle | 2 |
| | Side Shelf Assembly | 1 |
| | Side Burner Shelf Assembly | 1 |
| | Grease Cup Holder | 1 |
| | Caster | 4 |
| | Side Burner Assembly | 1 |
| | Electronic Ignition Module | 1 |
| | Grease Cup | 1 |
| | Lid Handle Bezel | 2 |
| | Door Handle Bezel | 4 |
| | Heat Tent | 6 |
| Tool Hook | 6 | |
| P5 | Cooking Grate | 2 |
| P6 | Cart Side Panel | 2 |
| P7 | Bottom Shelf | 1 |
| | Tank Heat Shield | 1 |
| | Back Panel | 2 |
| | Tank Exclusion Wire | 2 |
| | Cooking Grate, Side Burner | 1 |
| P8 | Control Knob | 5 |
| | Cover | 1 |
| P9 | Hardware Pack | 1 |

HARDWARE PACK


| Key | Description | Picture | Qty |
|-----|------------------------|--|-----|
| A | 1/4"-20UNC x18 Screw |  | 4 |
| B | 1/4"-20UNC x13 Screw |  | 6 |
| C | NO.10-24UNC x13 Screw |  | 16 |
| D | NO.8-32UNC X10 Screw |  | 2 |
| E | ST4.2X10 Tapping Screw |  | 4 |
| F | NO.5-40 X10 Screw |  | 6 |
| G | M4-Wingnut |  | 1 |
| H | Knob |  | 1 |
| I | Bezel, Knob |  | 1 |
| J | AA Battery |  | 1 |
| K | Caster Pin |  | 1 |
| L | Spacer, Door Handle |  | 4 |

| Key | Description | Picture | Qty |
|-----|-----------------------|--|-----|
| M | Φ6.5 Washer |  | 8 |
| N | Sideburner Valve Clip |  | 1 |
| O | 1/4" Flange Nut |  | 4 |
| P | 1/4"-20UNC x38 Screw |  | 10 |
| Q | Extra Hardware | | |

 TOOLS REQUIRED




Screwdriver
(Not Included)

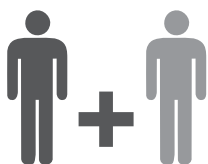

2 people

EXPLODED DIAGRAM

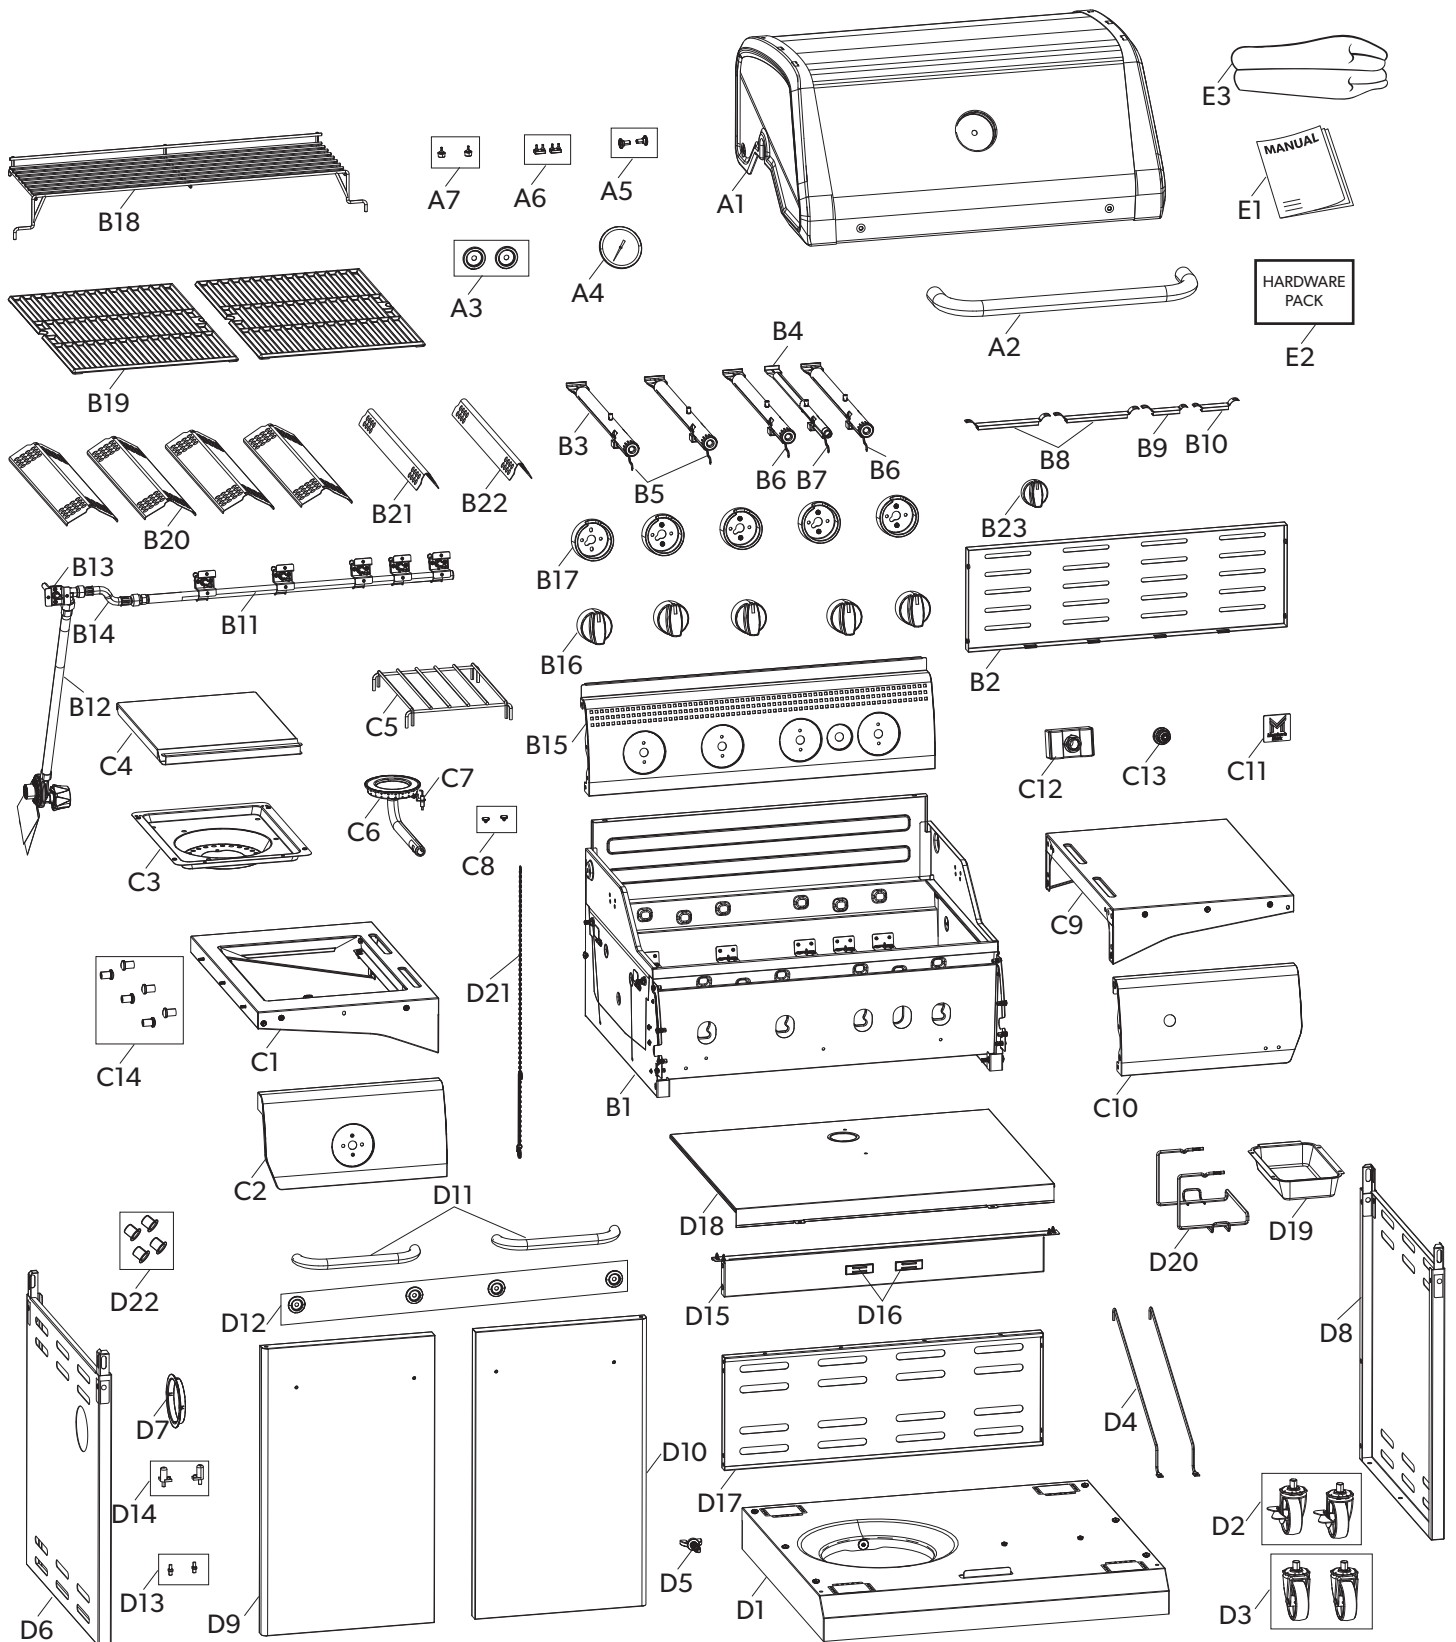



PARTS LIST

| Key | Qty | Description | Part No. |
|-----|-----|------------------------------|--------------|
| A1 | 1 | Top Lid Assembly | G481-2000-C1 |
| A2 | 1 | Lid Handle | G481-0004-C1 |
| A3 | 2 | Lid Handle Bezel | G481-0034-C1 |
| A4 | 1 | Temperature Gauge | G481-0003-C1 |
| A5 | 2 | Top Lid Hardware | G481-0005-C1 |
| A6 | 2 | Lid Bumper, Front | G508-0063-C1 |
| A7 | 2 | Lid Bumper, Rear | G303-0038-C1 |
| | | | |
| B1 | 1 | Firebox | G481-3100-C1 |
| B2 | 1 | Upper Back Panel | G481-0015-C1 |
| B3 | 4 | Main Burner | G481-3500-C1 |
| B4 | 1 | Sear Burner | G481-3700-C1 |
| B5 | 2 | Electrode Set, Main Burner A | G515-0014-C1 |
| B6 | 2 | Electrode Set, Main Burner B | G515-0067-C1 |
| B7 | 1 | Electrode Set, Sear Burner | G466-0057-C1 |
| B8 | 2 | Carryover Assembly A | G614-0095-C1 |
| B9 | 1 | Carryover Assembly B | G453-0096-C1 |
| B10 | 1 | Carryover Assembly C | G453-0097-C1 |
| B11 | 1 | Manifold Assembly | G481-3300-C1 |
| B12 | 1 | Regulator | G453-00B2-C1 |
| B13 | 1 | Side Burner Valve | G481-0007-C1 |
| B14 | 1 | Metal Hose | G608-0039-C1 |
| B15 | 1 | Control Panel | G481-0009-C1 |
| B16 | 4 | Control Knob, Main Burner | G481-0033-C1 |
| B17 | 4 | Control Knob Bezel | G478-0018-C1 |
| B18 | 1 | Warming Rack | G481-0032-C1 |
| B19 | 2 | Cooking Grate | G453-0019-C1 |
| B20 | 4 | Heat Tent A, Main Burner | G453-0072-C1 |
| B21 | 1 | Heat Tent B, Main Burner | G481-0026-C1 |
| B22 | 1 | Heat Tent, Sear Burner | G453-000D-C1 |
| B23 | 1 | Control Knob, Sear Burner | G481-0011-C1 |
| | | | |
| C1 | 1 | Side Burner Shelf | G481-0700-C1 |
| C2 | 1 | Side Burner Self Fascia | G481-0027-C1 |
| C3 | 1 | Side Burner Drip Pan | G515-0083-C1 |
| C4 | 1 | Side Burner Lid | G501-0070-C1 |
| C5 | 1 | Cooking Grate, Side Burner | G501-0077-C1 |
| C6 | 1 | Side Burner | G453-3400-C1 |
| C7 | 1 | Electrode Set, Side Burner | G515-0039-C2 |
| C8 | 2 | Rubber Bumper, Side Burner | G508-0033-C1 |
| C9 | 1 | Right Side Shelf | G481-0800-C1 |
| C10 | 1 | Right Side Shelf Fascia | G481-0028-C1 |
| C11 | 1 | Logo Plate | G702-9402-C1 |
| C12 | 1 | Electronic Ignition Module | G439-0010-C1 |



| Key | Qty | Description | Part No. |
|-----|-----|--------------------------------|----------------|
| C13 | 1 | Electronic Ignition Module Cap | G501-0072-C1 |
| C14 | 6 | Tool Hook | G474-0029-C1 |
| | | | |
| D1 | 1 | Bottom Shelf | G481-0600-C1 |
| D2 | 2 | Locking Caster | G350-0023-C1 |
| D3 | 2 | Caster | G350-0024-C1 |
| D4 | 2 | Tank Exclusion Wire | G532-0077-C1 |
| D5 | 1 | Tank Screw | G505-0047-C1 |
| D6 | 1 | Cart Side Panel, Left | G481-0400-C1 |
| D7 | 1 | Grommet | G501-0039-C1 |
| D8 | 1 | Cart Side Panel, Right | G481-0500-C1 |
| D9 | 1 | Left Door | G481-5000-C1 |
| D10 | 1 | Right Door | G481-6000-C1 |
| D11 | 2 | Door Handle | G481-0021-C1 |
| D12 | 4 | Door Handle Bezel | G481-0025-C1 |
| D13 | 2 | Fixed Pin, F/Door | G411-0053-C1 |
| D14 | 2 | Spring Pin, F/Door | G362-0052-C2 |
| D15 | 1 | Front Brace | G481-4100-C1 |
| D16 | 2 | Door Magnet | G527-0037-C1 |
| D17 | 1 | Lower Back Panel | G481-0016-C1 |
| D18 | 1 | Tank Heat Shield | G481-0017-C1 |
| D19 | 1 | Grease Cup | G545-0034-C1 |
| D20 | 1 | Grease Cup Holder | G481-0023-C1 |
| D21 | 1 | Match Holder | G481-0036-C1 |
| D22 | 4 | Spacer, Door Handle | G466-0035-C1 |
| | | | |
| E1 | 1 | Assembly and User Manual | G481-010801-C1 |
| E2 | 1 | Hardware Pack | G481-B001-C1 |
| E3 | 1 | Cover | G481-0035-C1 |

ASSEMBLY INSTRUCTIONS



1

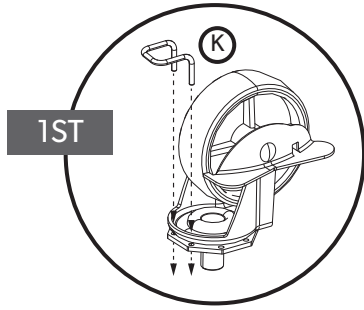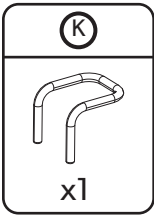

2ND

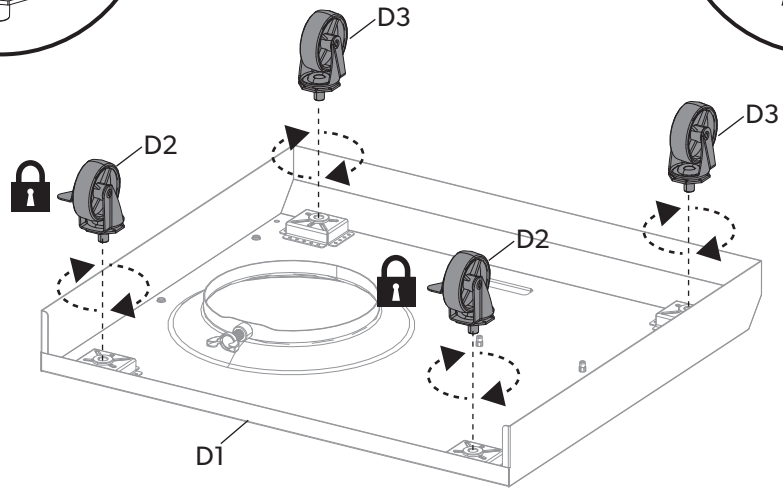
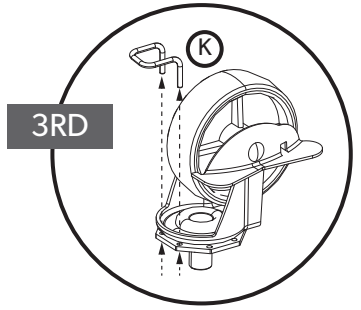


2

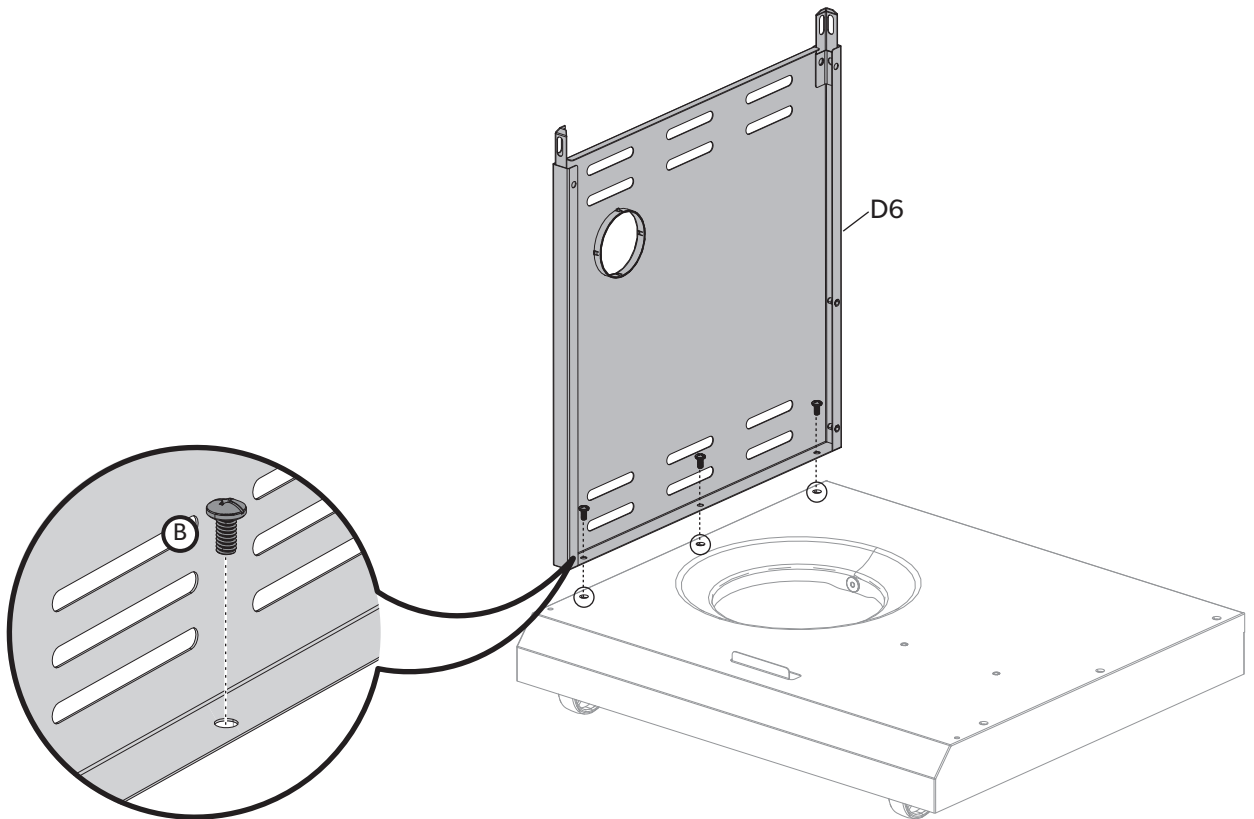
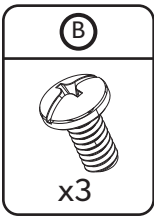


ASSEMBLY INSTRUCTIONS

3

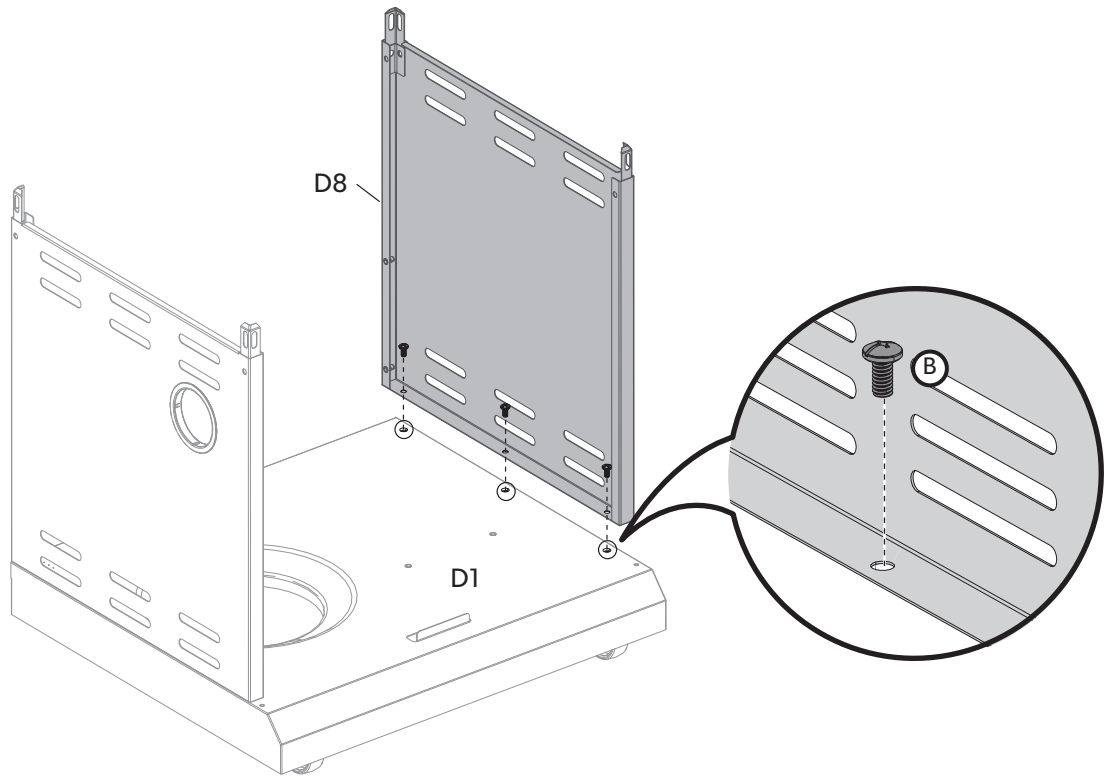
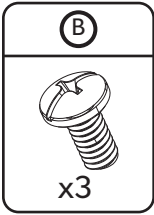


4

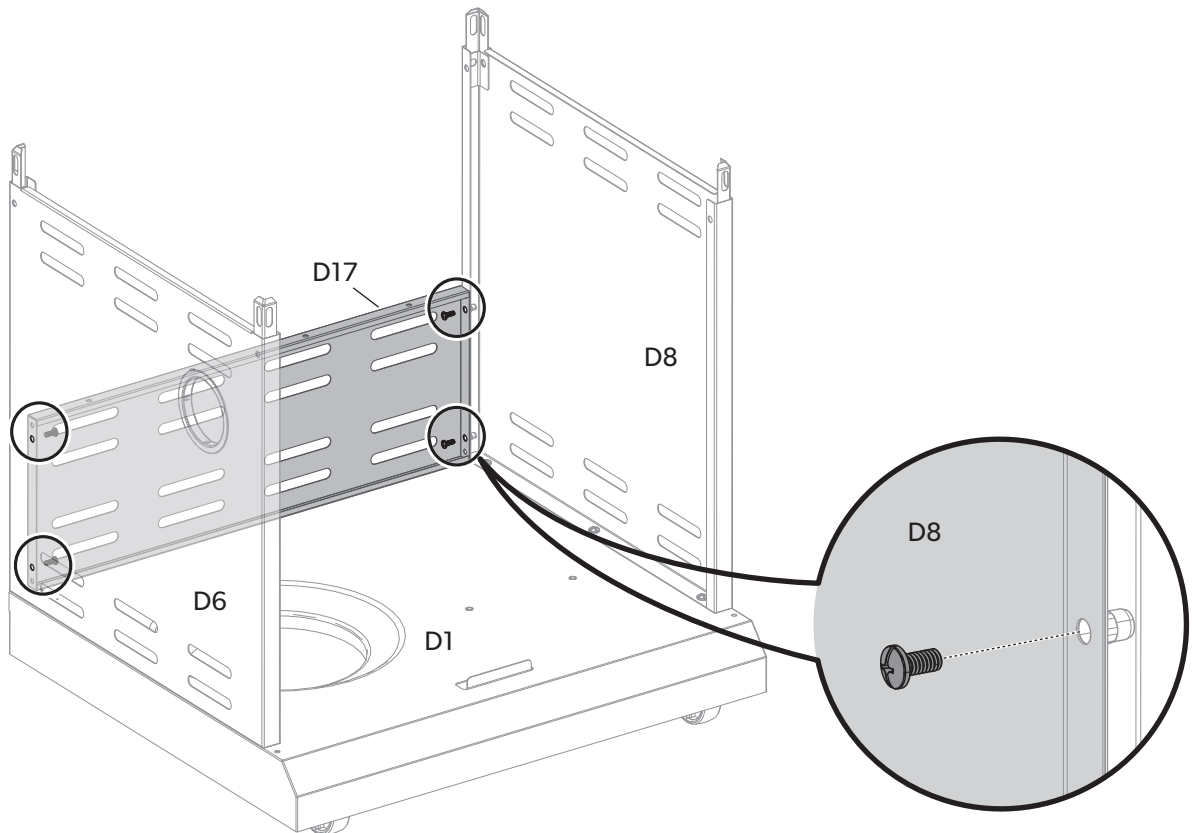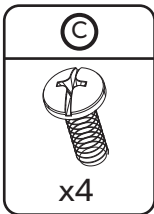


ASSEMBLY INSTRUCTIONS

5

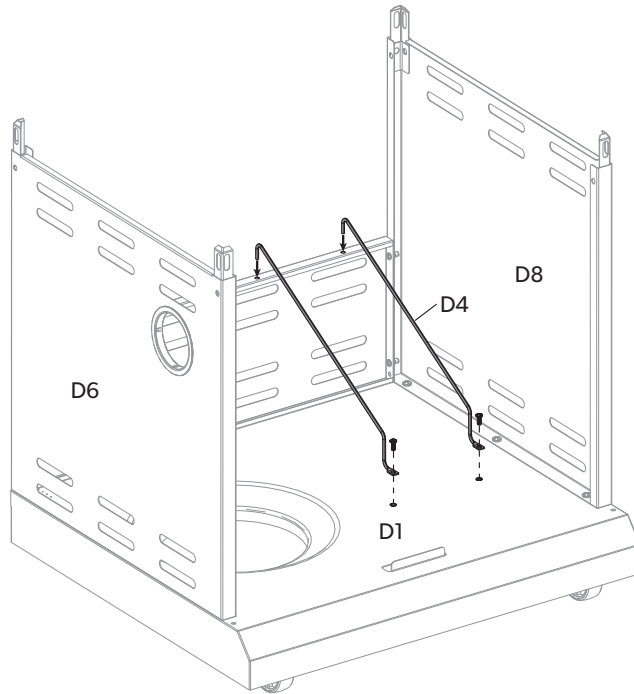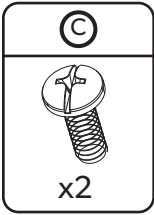


6

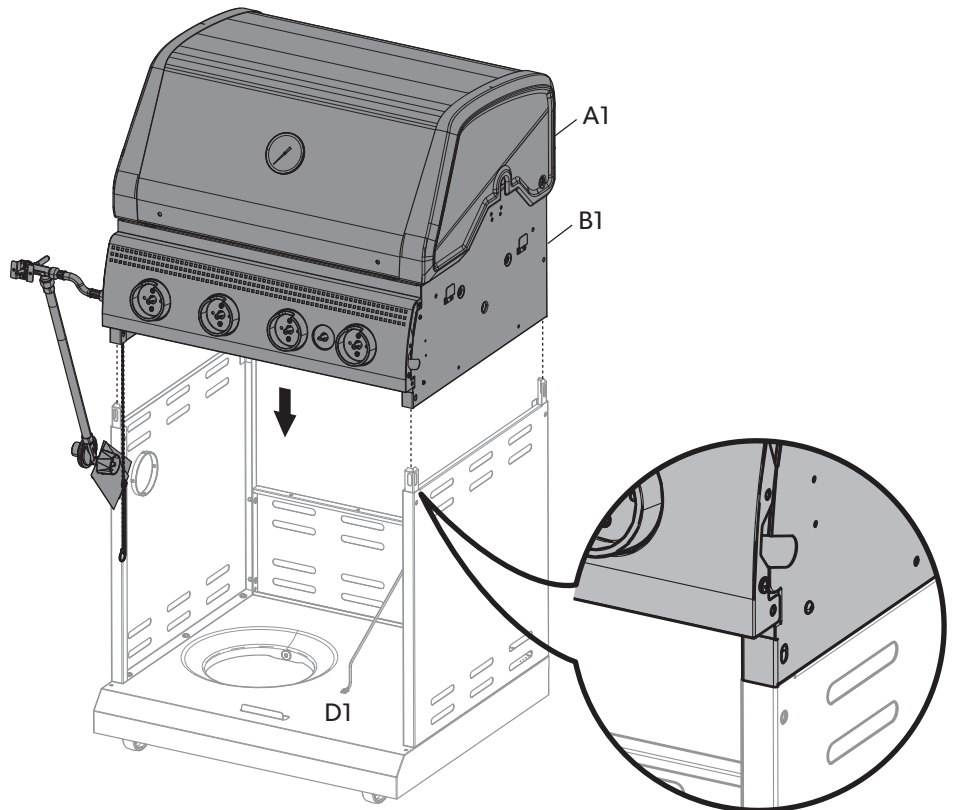




ASSEMBLY INSTRUCTIONS

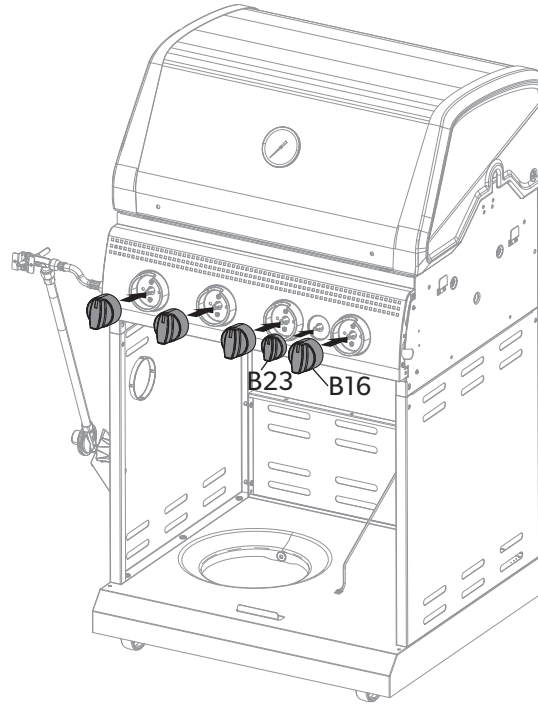7





8

| | |
|---|---|
|  x4 |  x2 |
|---|---|


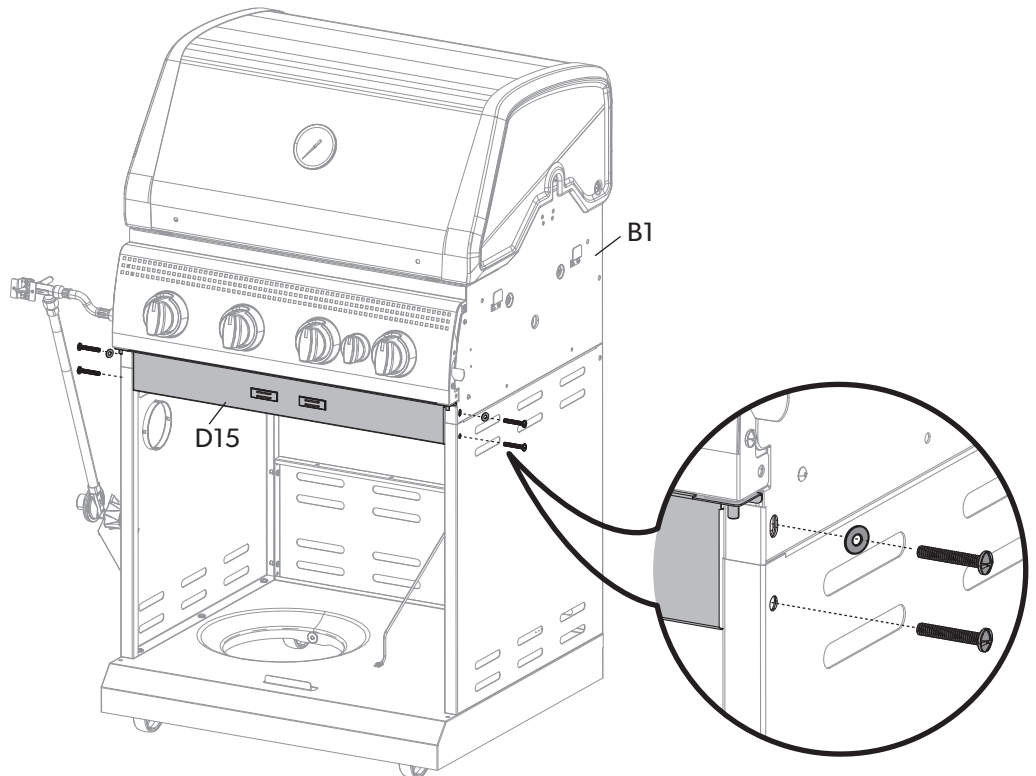


ASSEMBLY INSTRUCTIONS

9

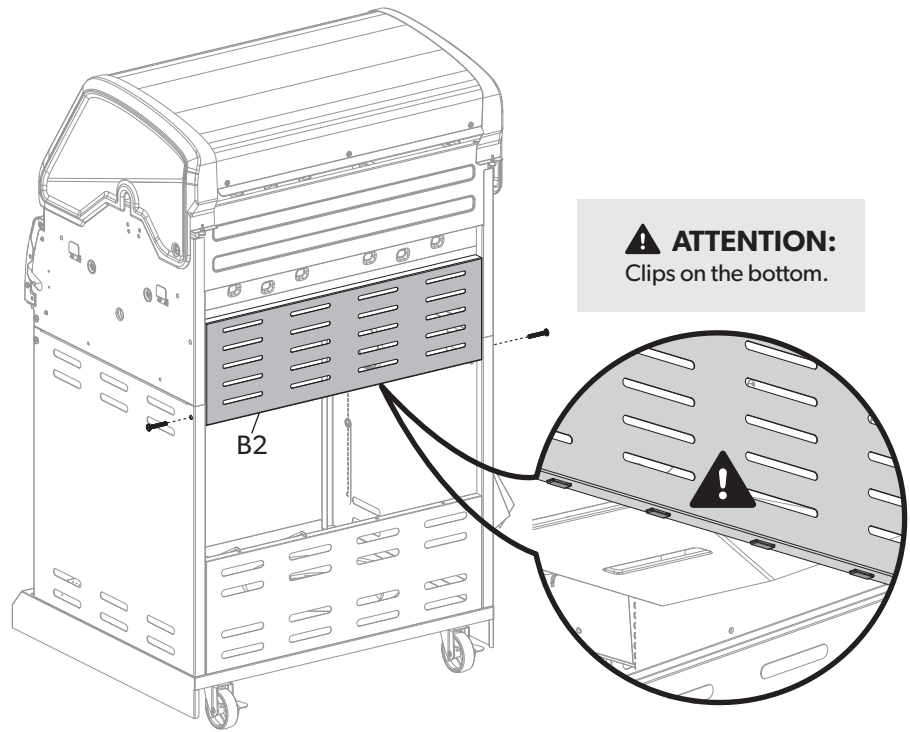
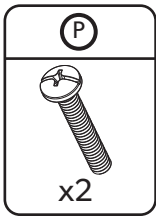


10

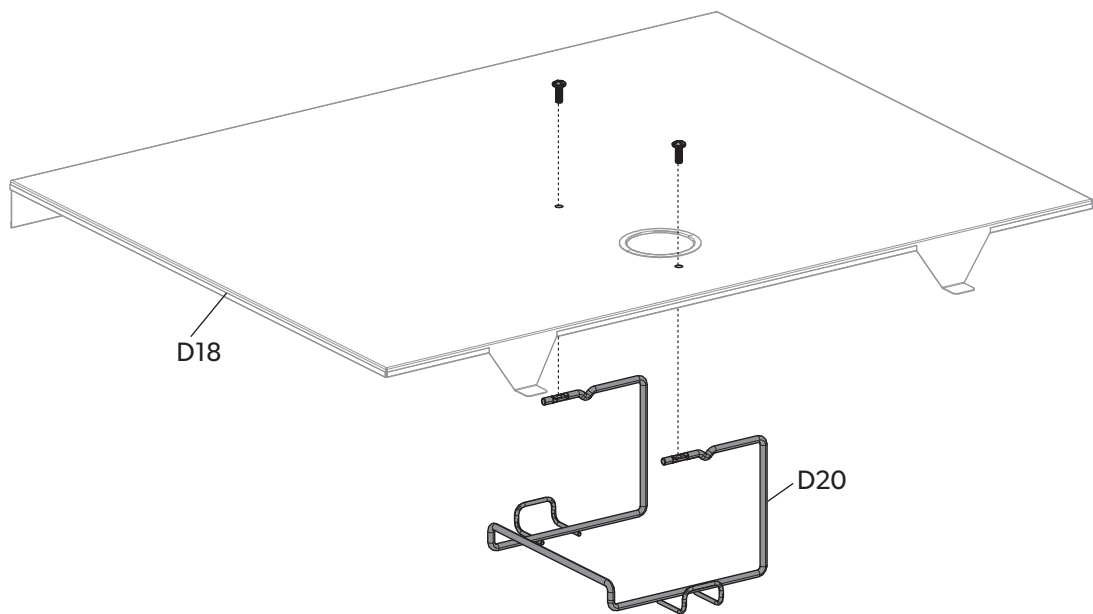
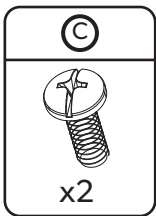


ASSEMBLY INSTRUCTIONS

11

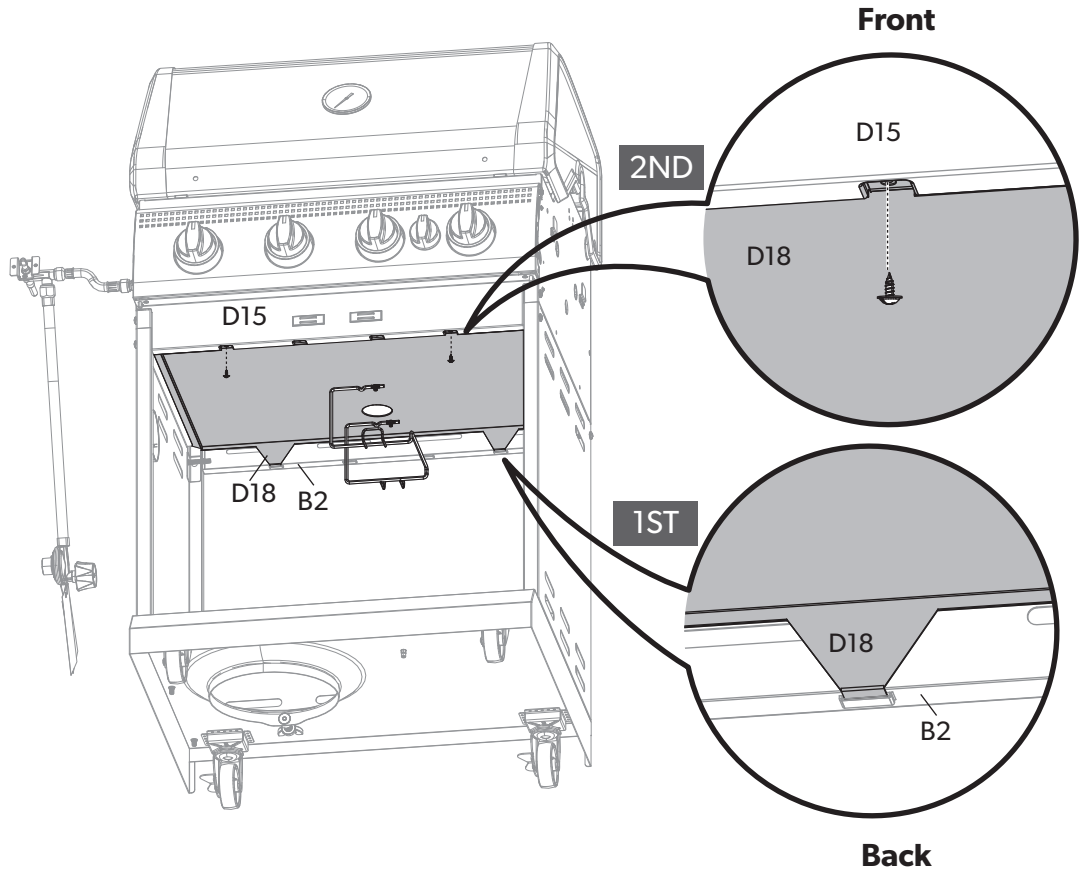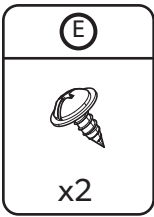



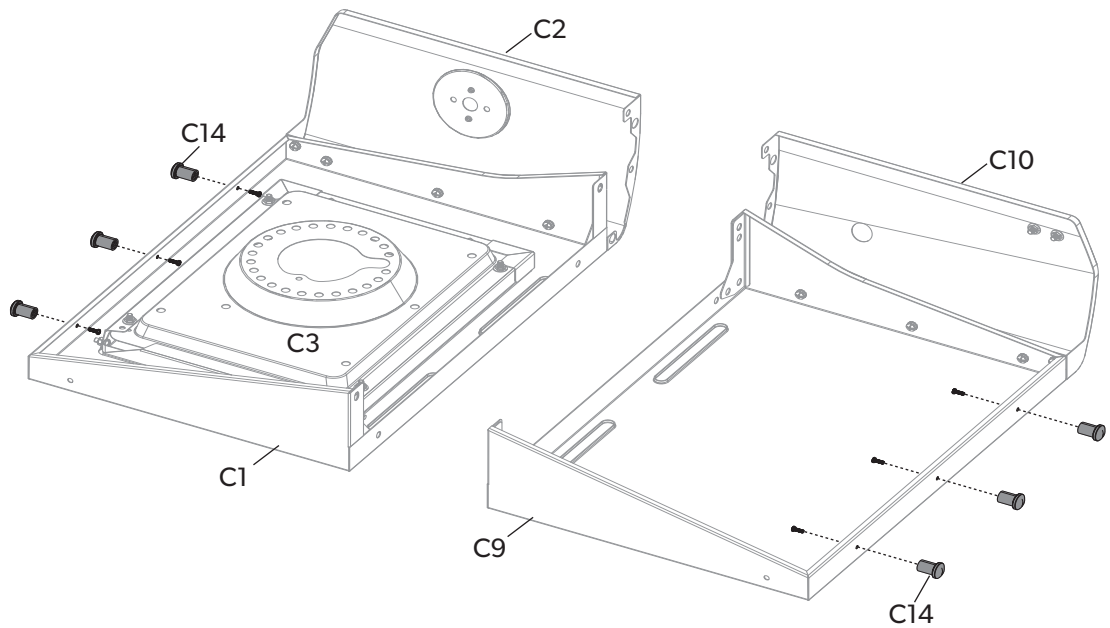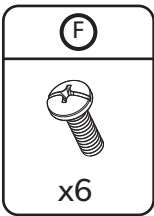





12



ASSEMBLY INSTRUCTIONS




13

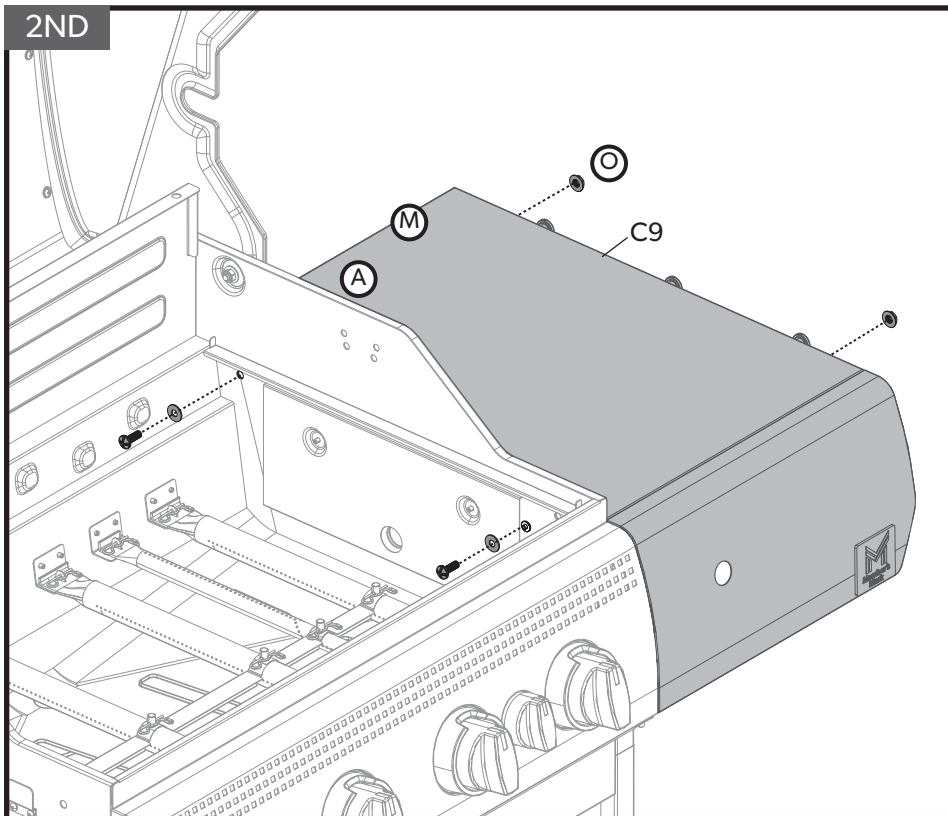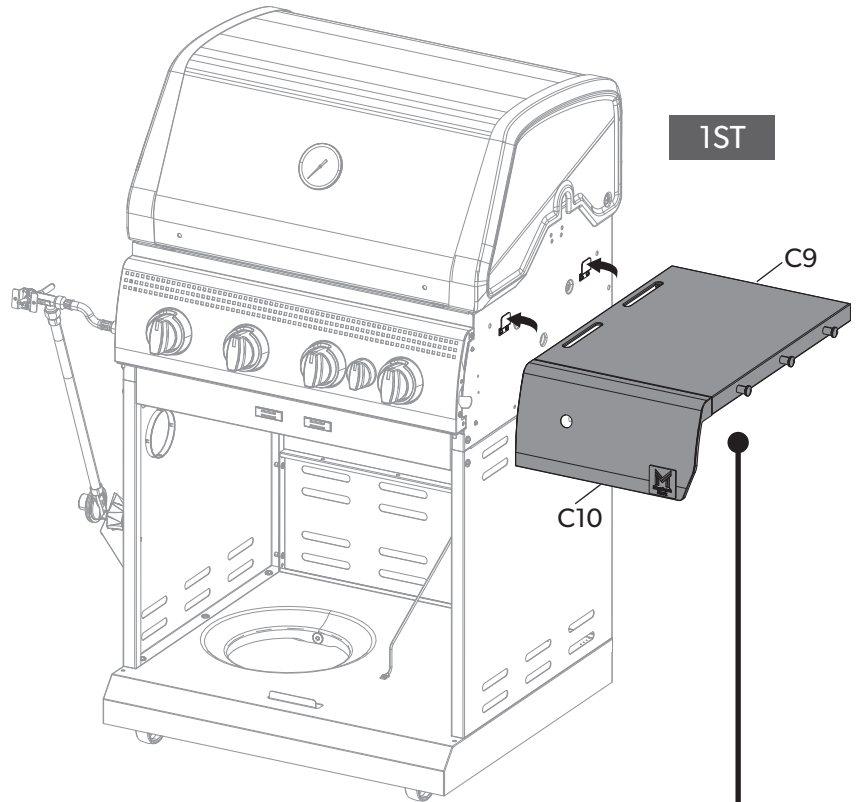
| | | |
|---|---|---|
|  A |  M |  O |
|  |  |  |
| x2 | x2 | x2 |



ASSEMBLY INSTRUCTIONS



14
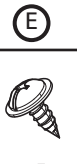
| | | |
|---|---|---|
|  x1 |  x2 |  x1 |
|---|---|---|

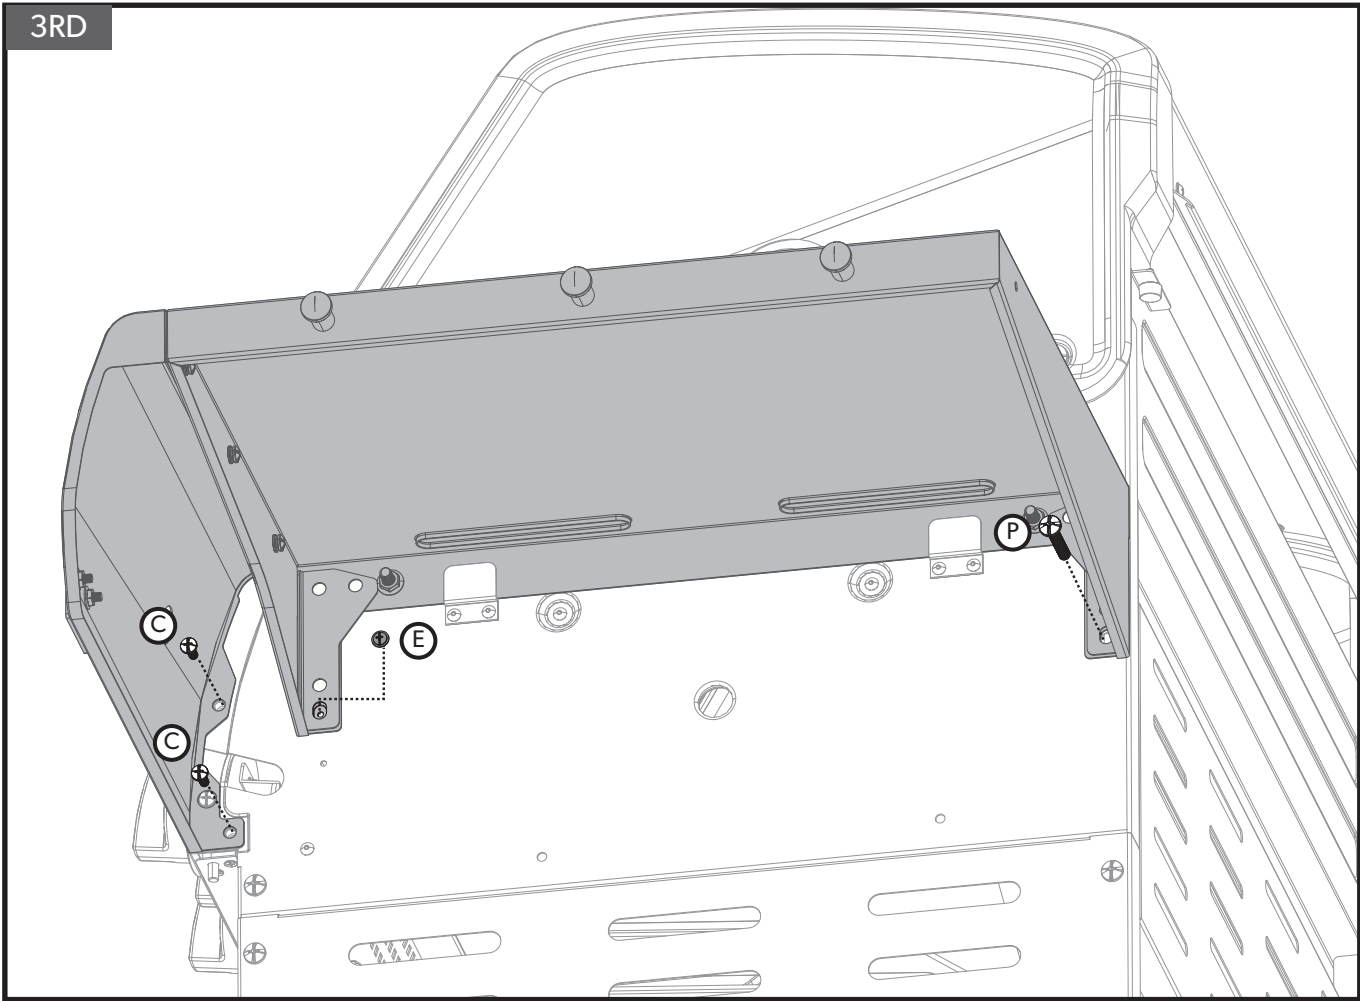

ASSEMBLY INSTRUCTIONS



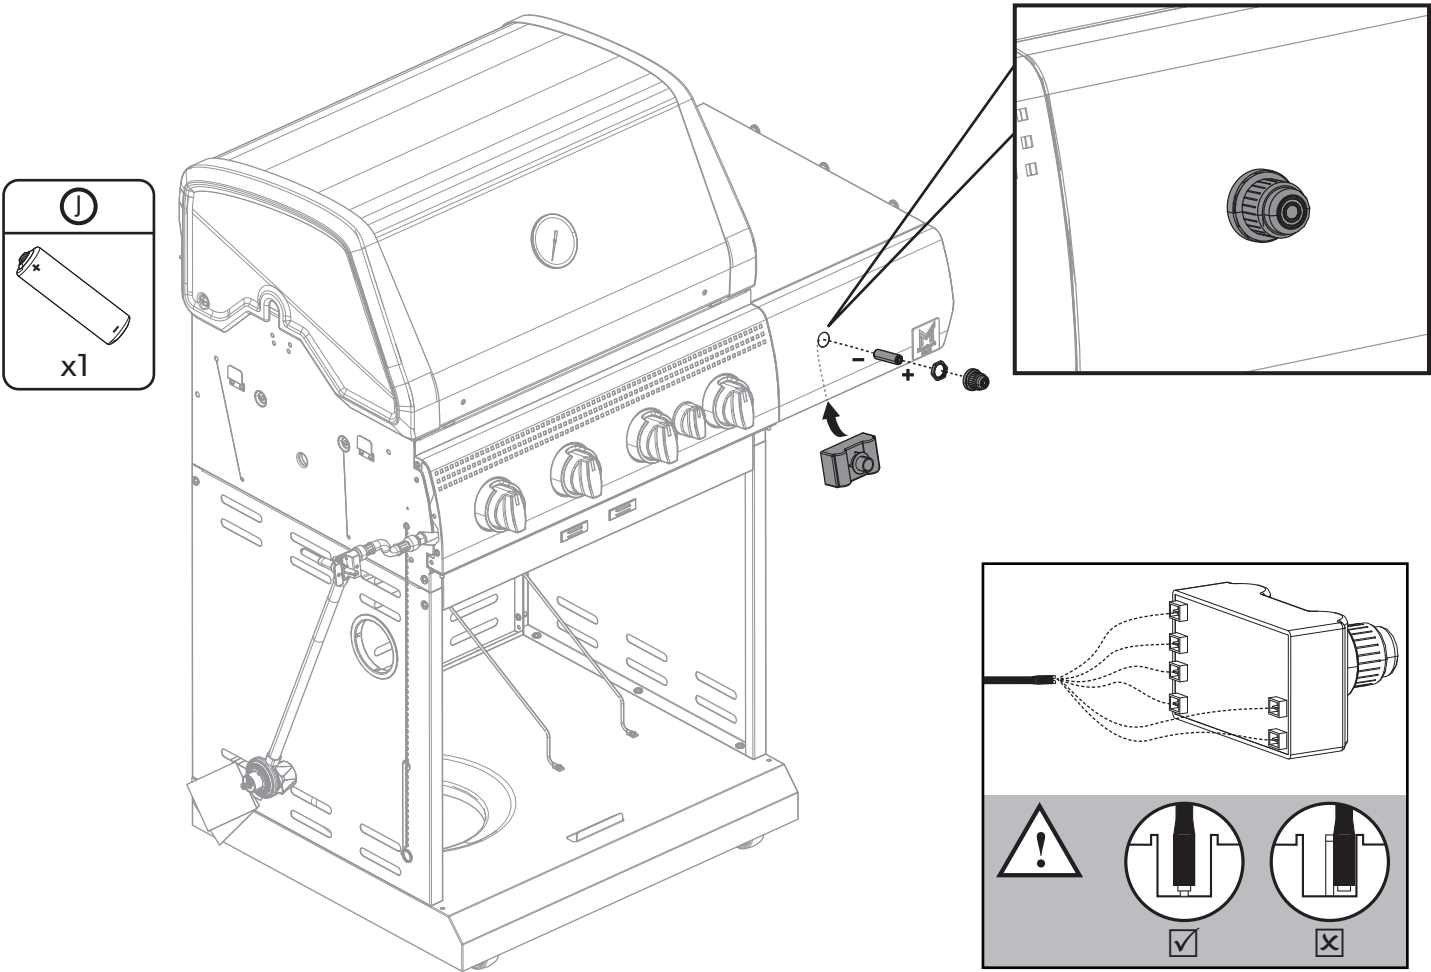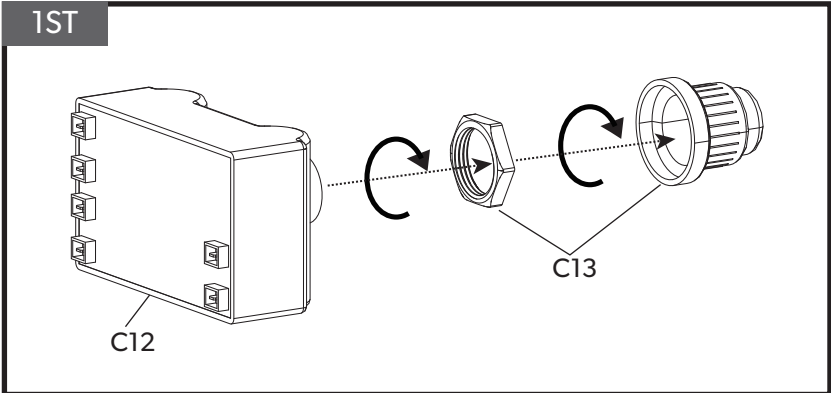



15




⚠ ATTENTION:
 All five electrode wires are the same size. They can be found under the right side shelf.
 Position Electrode set wires (B5, B6, B7) into Electronic Ignition outputs based on the length of each wire. Grasp each electrode wire with your thumb and index finger and push in firmly until you feel a positive connection has been made with the Electronic Ignition module (C12).

ASSEMBLY INSTRUCTIONS


16

| | | |
|---|---|---|
|  A |  M |  N |
|  |  |  |
| x2 | x2 | x2 |

1ST

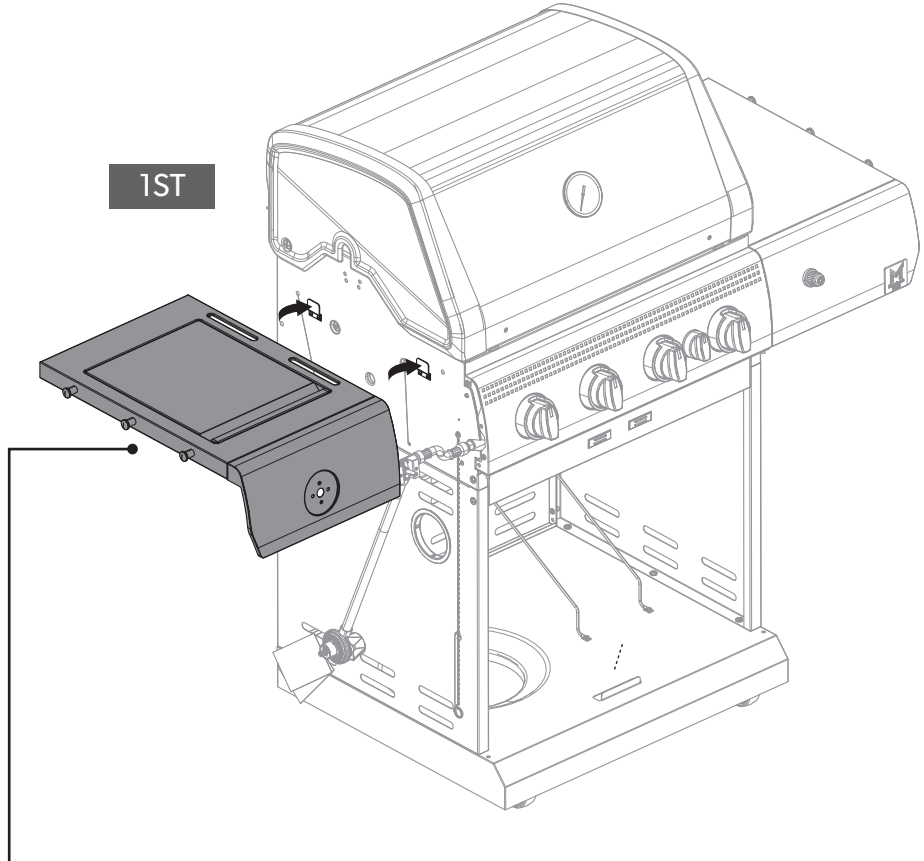

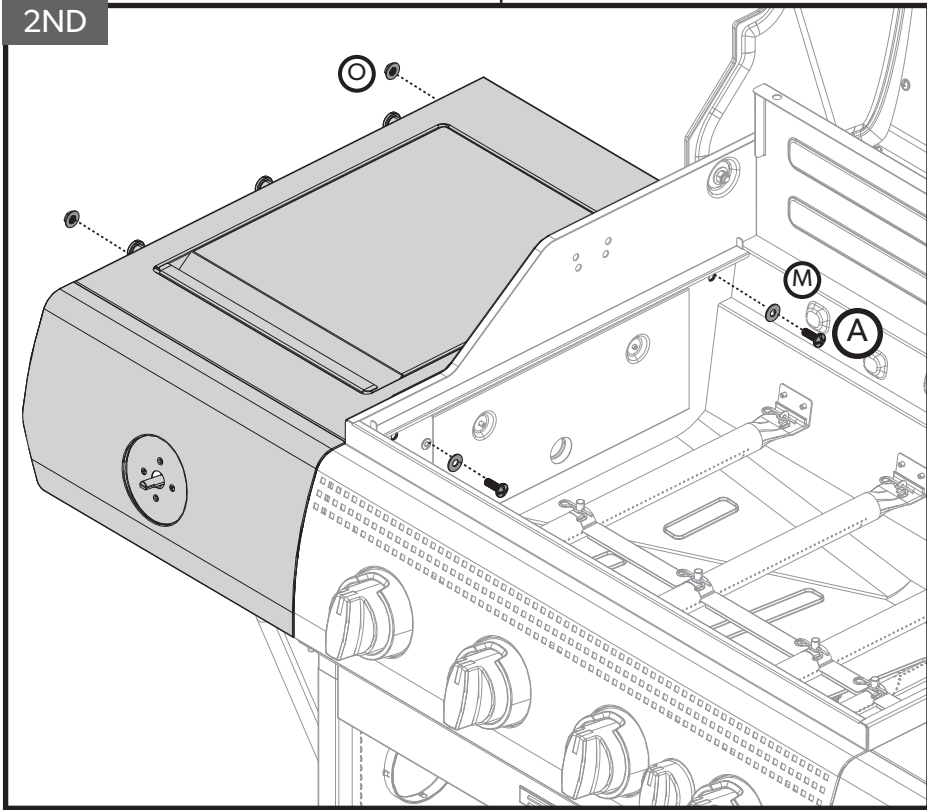


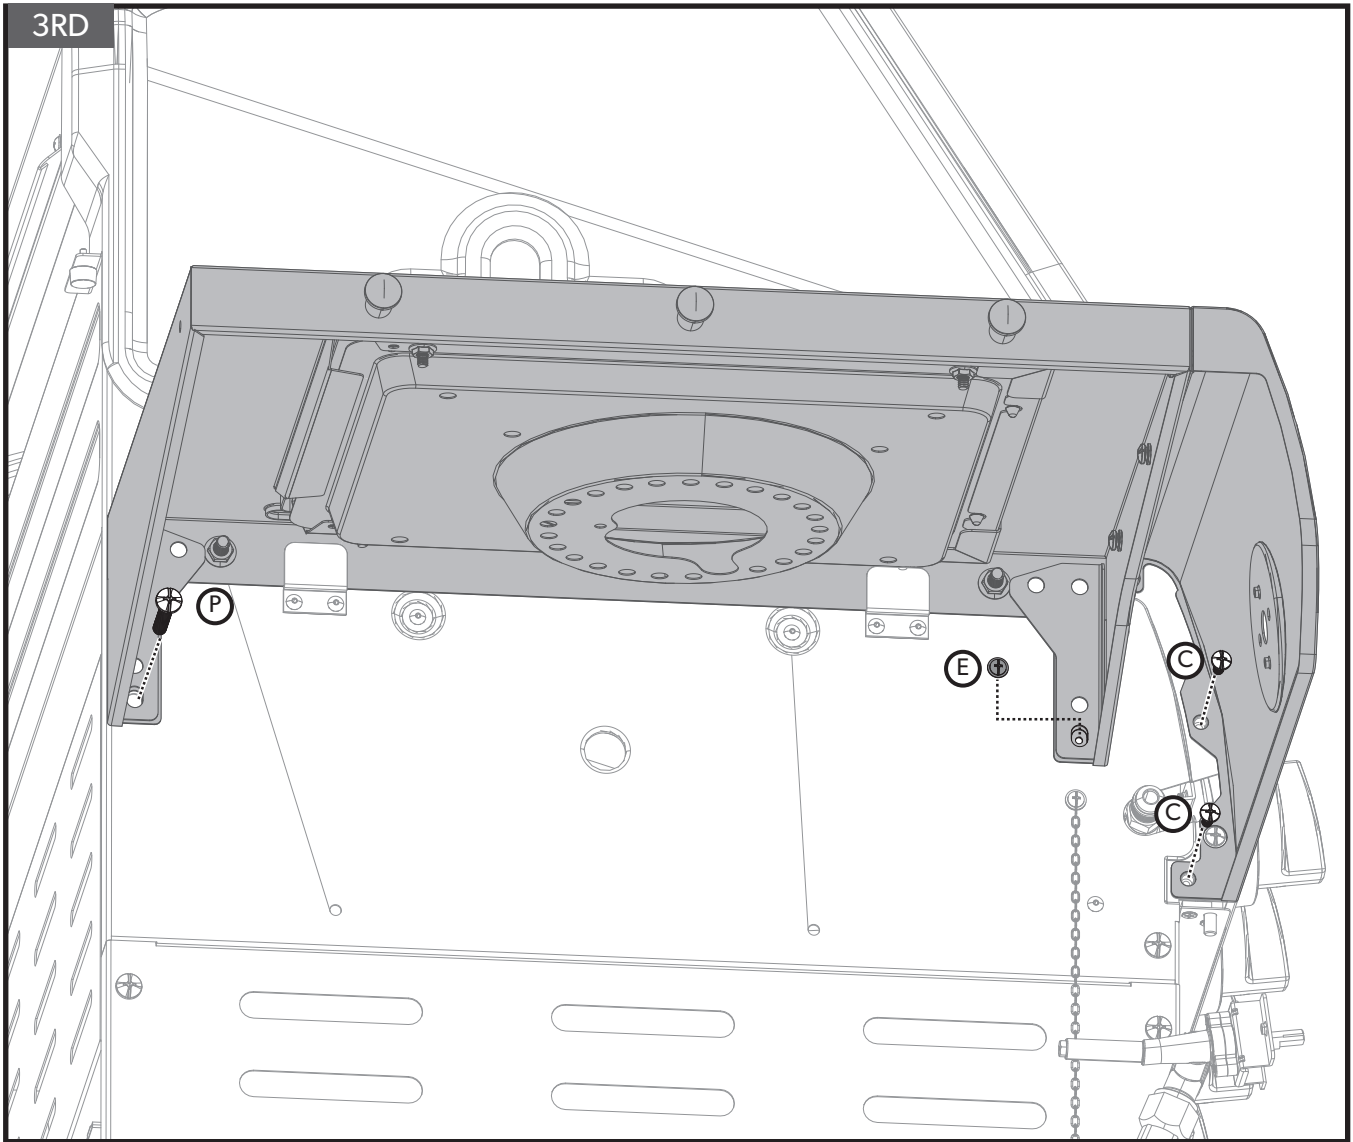
2ND



ASSEMBLY INSTRUCTIONS




16




| | | |
|---|---|---|
| P | C | E |
|  |  |  |
| x1 | x2 | x1 |



ASSEMBLY INSTRUCTIONS


17

| | | |
|---|---|---|
|  x1 |  x1 |  x2 |
|---|---|---|

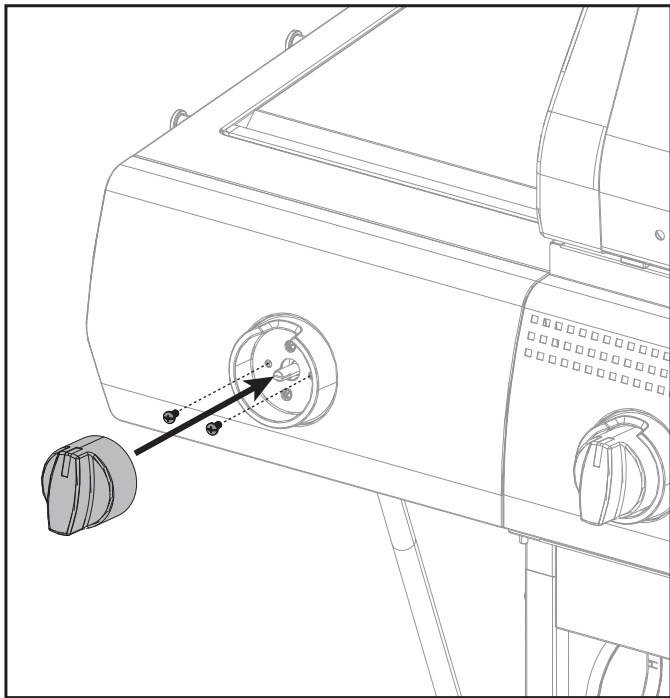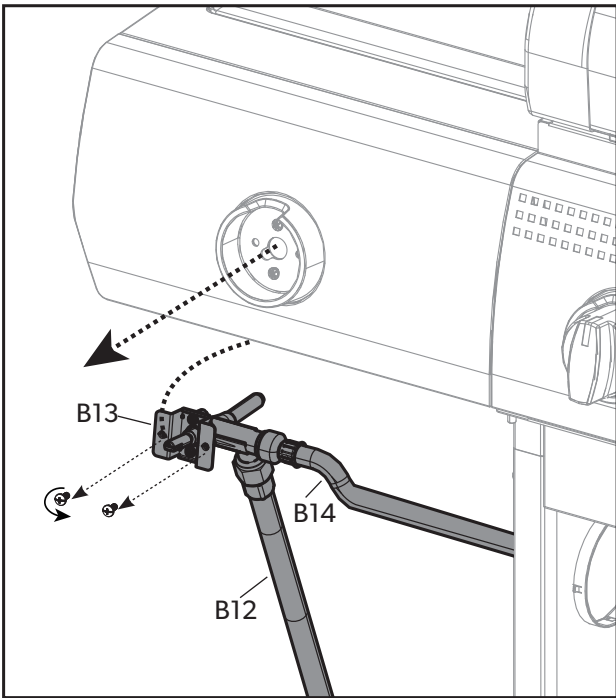
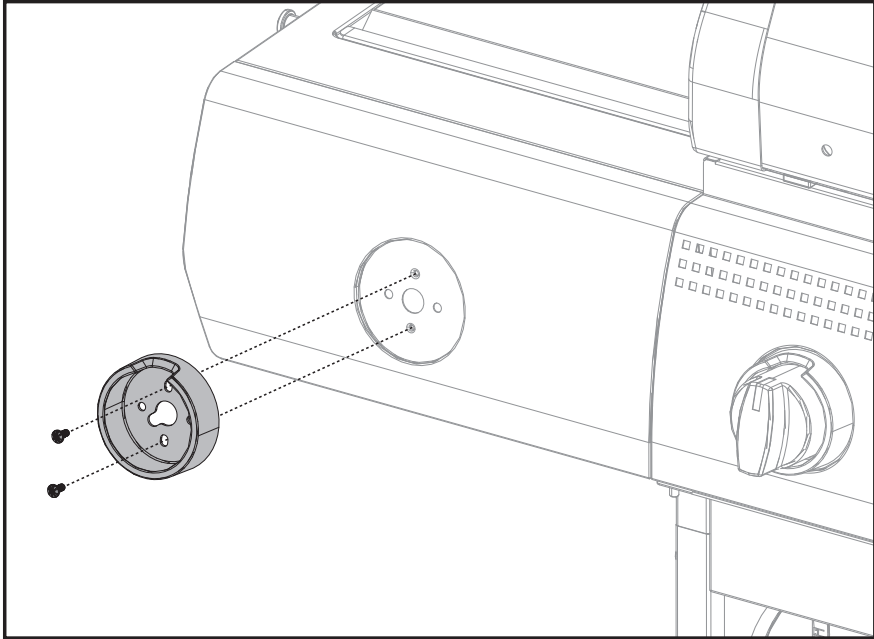


ASSEMBLY INSTRUCTIONS

18


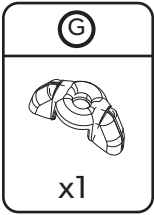


1ST

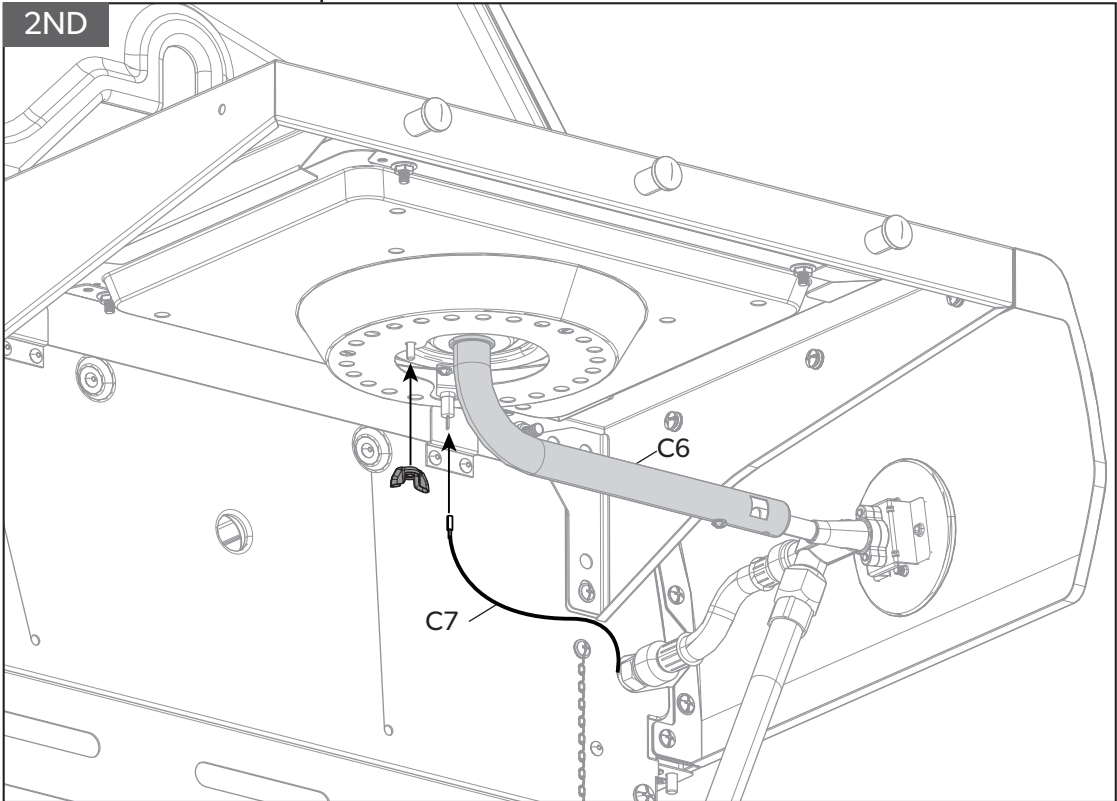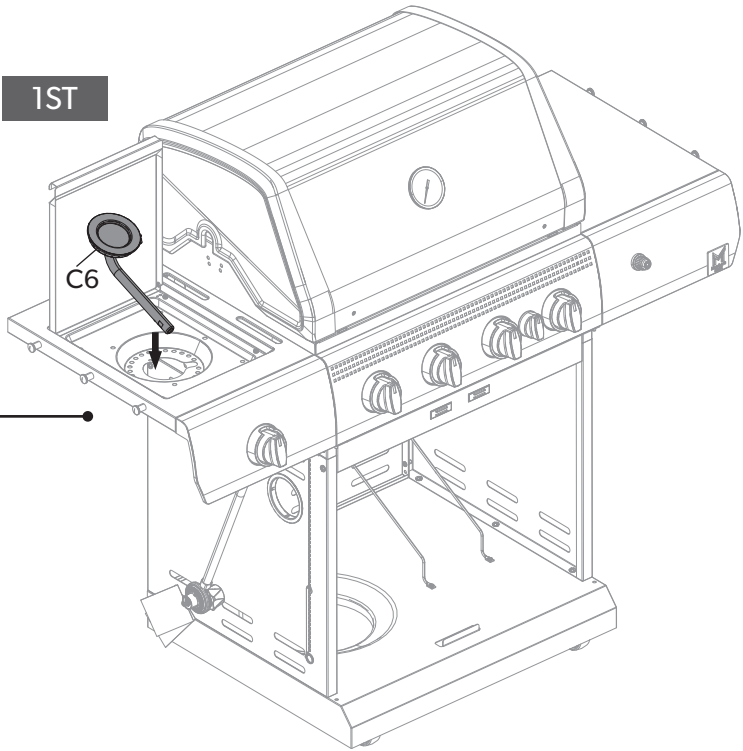


ASSEMBLY INSTRUCTIONS

18

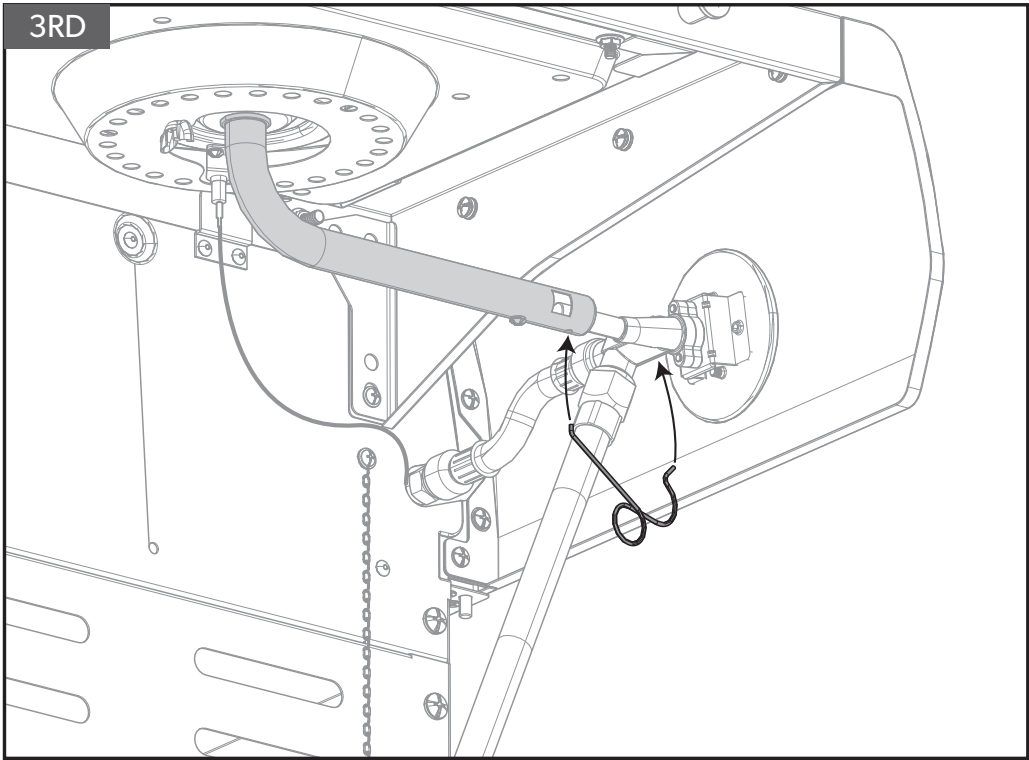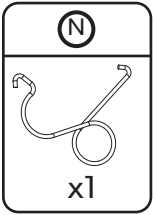

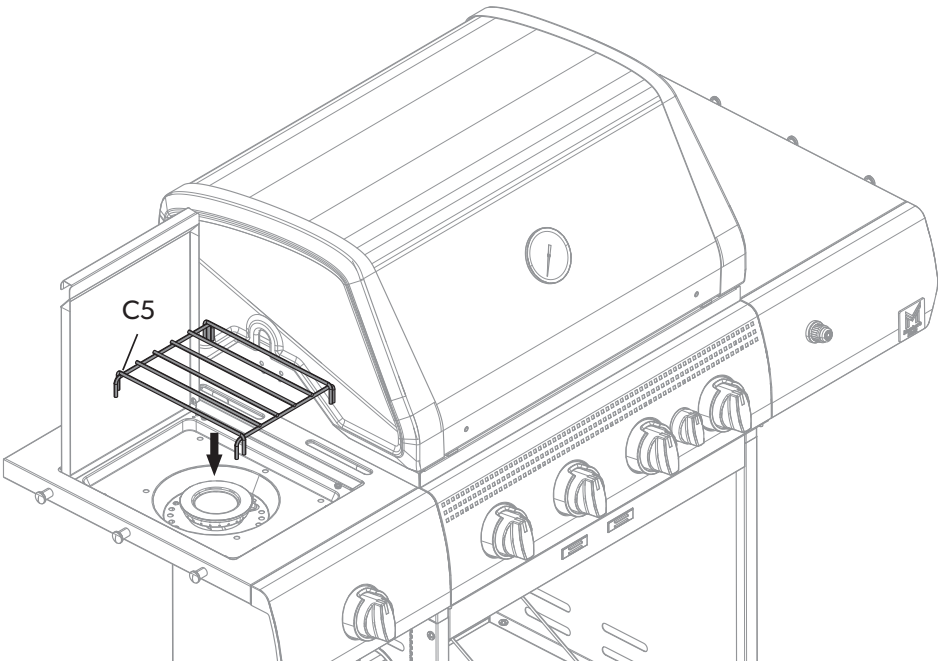

19




ASSEMBLY INSTRUCTIONS

20

| | |
|---|---|
| (P) | (M) |
|  |  |
| x2 | x2 |




21

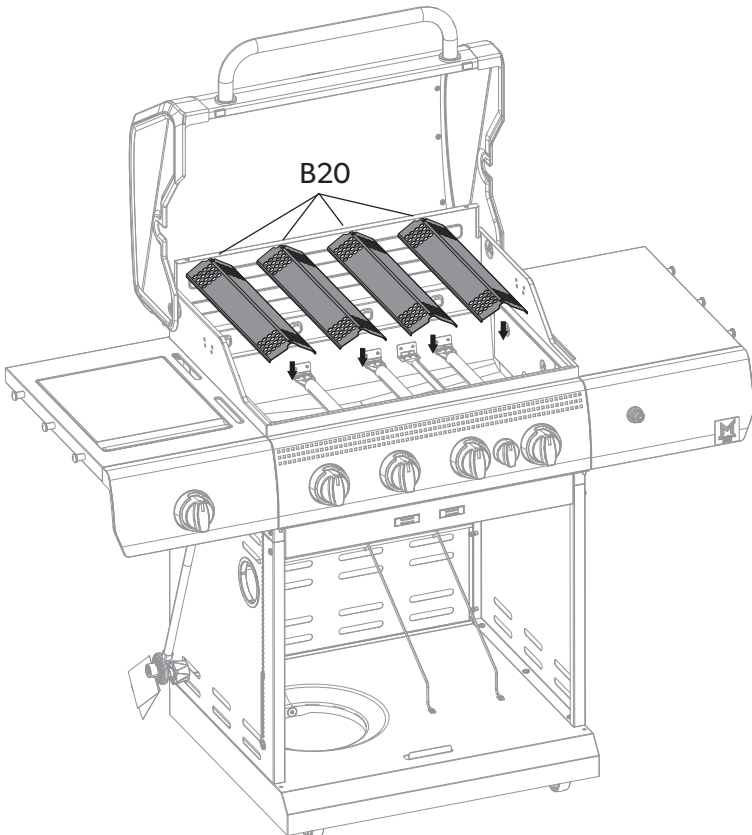


ASSEMBLY INSTRUCTIONS

22

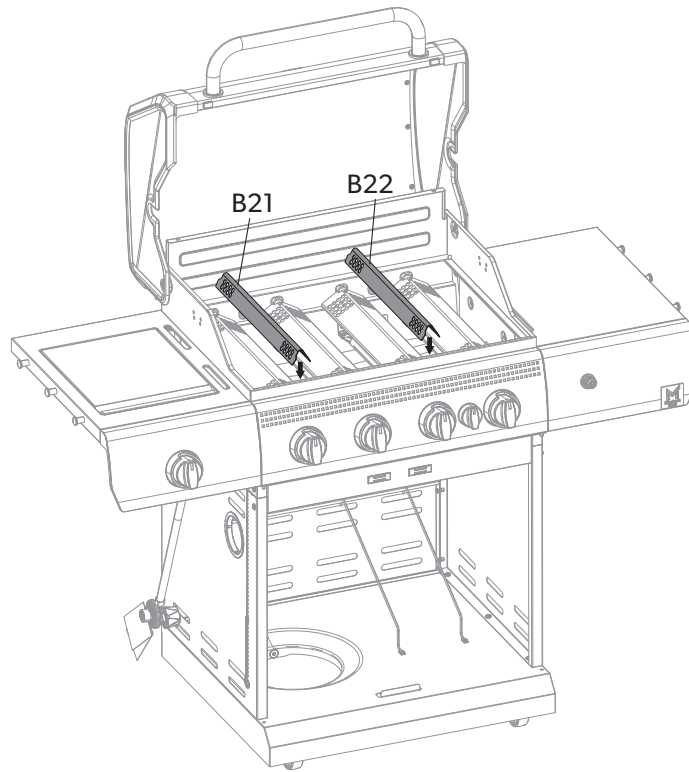


23

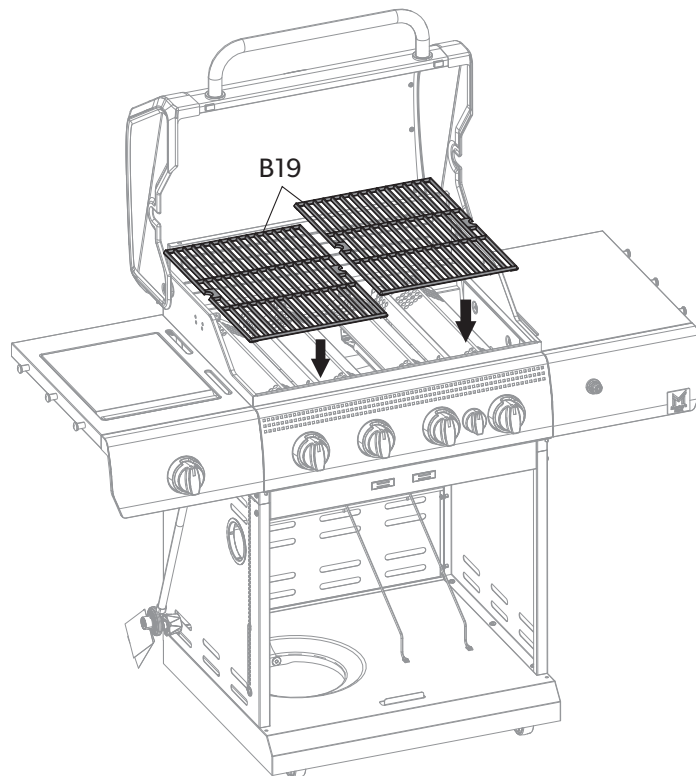


ASSEMBLY INSTRUCTIONS

24


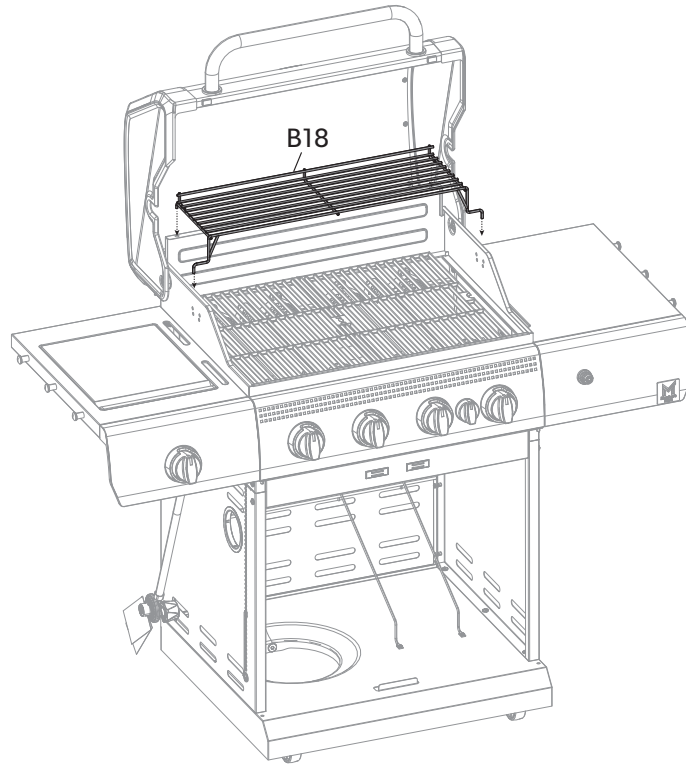


25

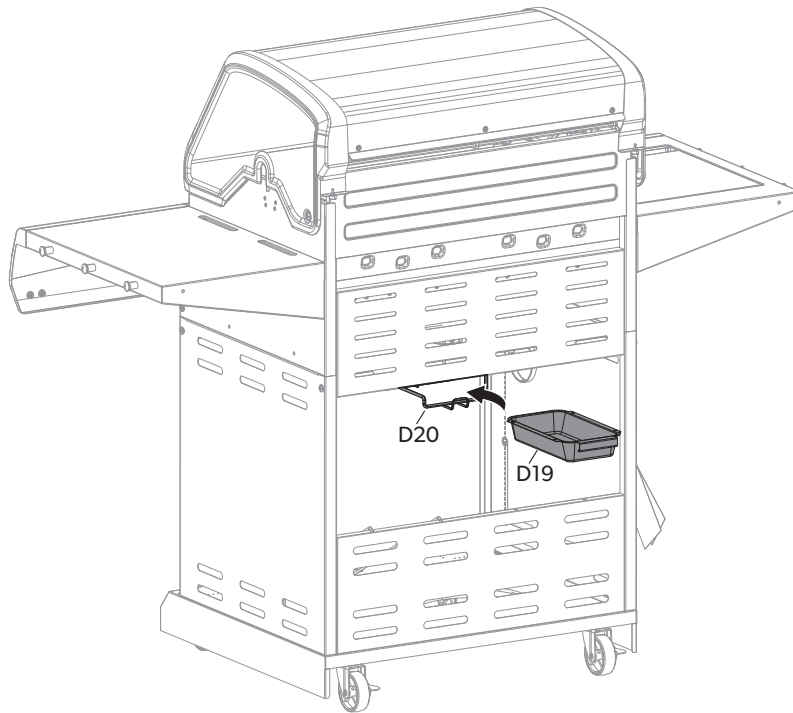


ASSEMBLY INSTRUCTIONS

26



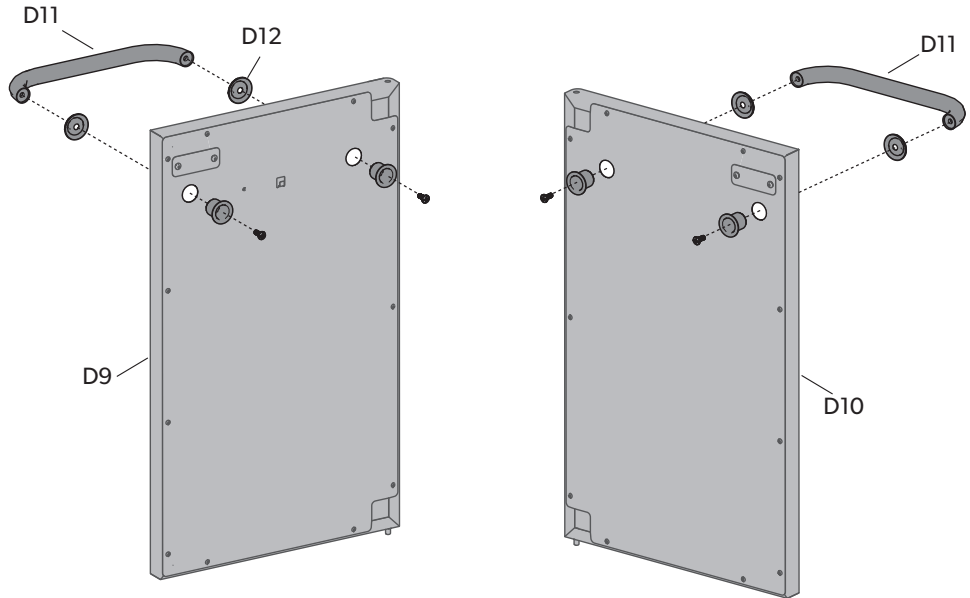
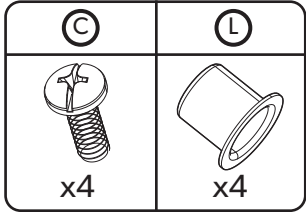



27

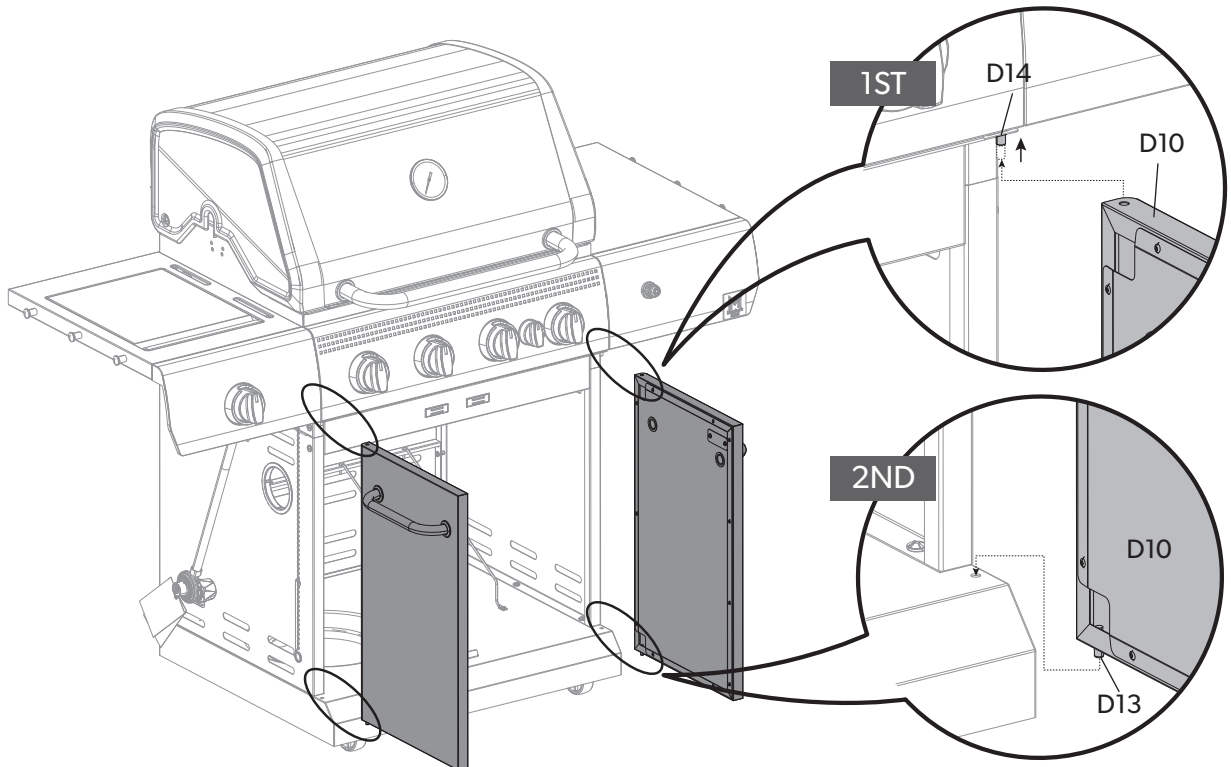



ASSEMBLY INSTRUCTIONS

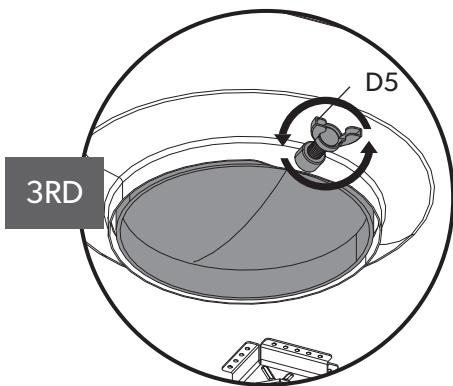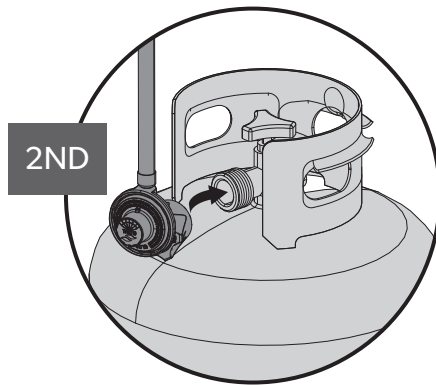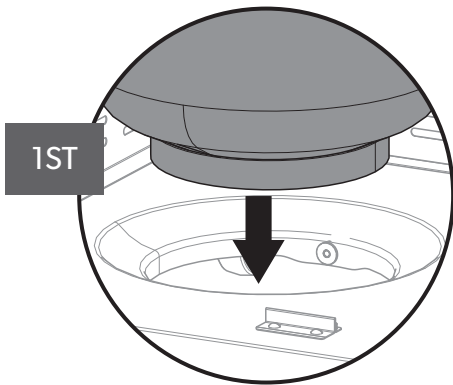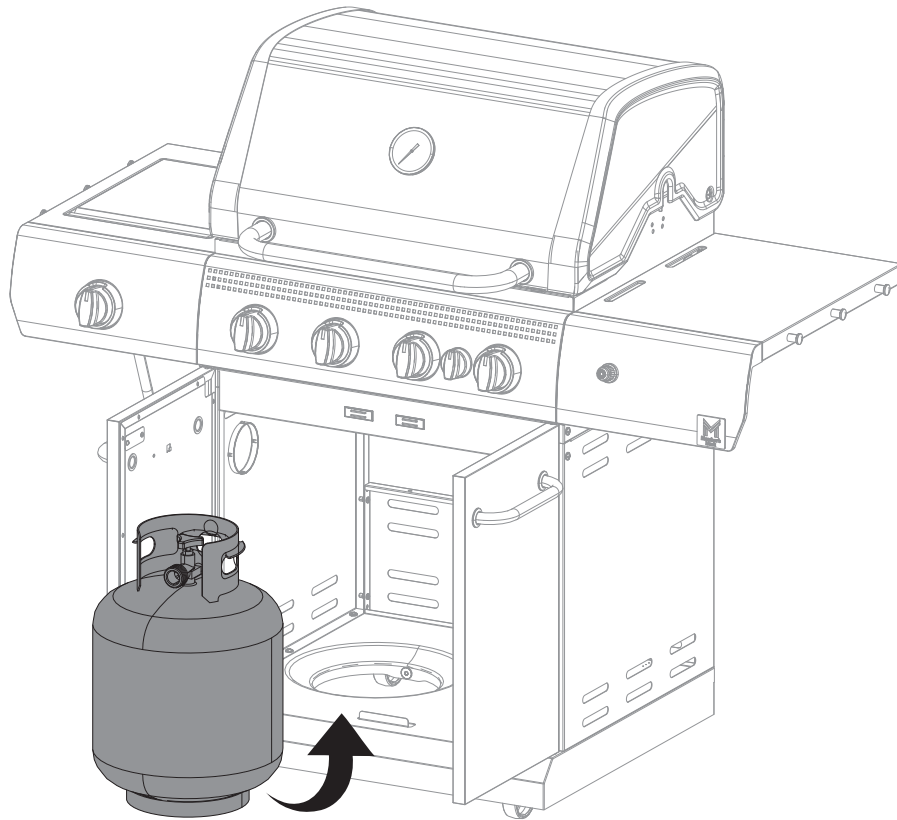28



4TH  **PERFORM A LEAK TEST.**
Proceed to page 9, for instructions

 Leaking Test Video
Scan this QR code.



WARRANTY AND SERVICE

This product is covered by the **Sam's Club Member Satisfaction Guarantee**. Please visit samsclub.com for more information.

BEFORE YOU CALL FOR SERVICE, have the following information available:

1. **Serial Number:** The serial number is located on the front of this manual and on the rating label located inside your grill cart.
2. **Model Number:** The model number is located on the front cover of this manual and on the rating label located inside your grill cart.
3. **Proof Of Purchase:** By the original owner.

Call Customer Care Hotline: 1-833-454-0864

IF YOUR PRODUCT IS DAMAGED:

1. Call the Member's Mark Customer Care Hotline: **1-833-454-0864**.
2. **DO NOT return to the store for replacement of damaged or defective parts:** Member's Mark Customer Care will ensure that all in-stock replacement parts arrive at your home within 3-10 business days.
3. **Concealed Damage:** If damage is unnoticed until merchandise is unpackaged, resolve issue by contacting Member's Mark Customer Care immediately.

LIMITED WARRANTY:

Winners Products, hereby warrants to the Original Grill Purchaser of this Member's Mark 5 Burner Gas Grill that will be free of defects in workmanship, from the date of purchase, for the period of the warranty, as outlined below. Please see Limitations and Exclusions section on the following page.

Member's Mark warrants that components in your new Member's Mark 5 Burner Gas Grill will be free of defects in material and workmanship from the date of purchase, for the following period:

All parts.....1 year

CAUTION:

Some parts may contain sharp edges – Especially as noted in the manual! Wear protective gloves if necessary. **FOR RESIDENTIAL USE ONLY. DO NOT USE FOR COMMERCIAL COOKING.**

WARNING:

Do not attempt to repair or alter the hose/valve/regulator for any assumed defect or for any type of retro fit or conversion. Any modifications to this assembly will void your warranty and create the risk of a gas leak and fire. Use only authorized replacement parts supplied by the manufacturer, for your model.

WARRANTY AND SERVICE

LIMITATION AND EXCLUSIONS

Winners Products has the following limitations to its warranty:

1. This limited warranty is non-transferable and becomes void if used for commercial or rental purposes. Which includes (but not limited to): Restaurants, hotels, resorts, time shares or rental properties.
2. This warranty applies only when grill is used in the United States.
3. Warranty is in lieu of all warranties, expressed or implied, and all other obligations or liabilities related to the sale or use of its grill products.
4. Winners Products Engineering Ltd. Is not responsible for any misuse outside of the directions listed in the manual.
5. Winners Products Engineering Ltd. will repair or replace parts, at its option, proven defective under normal use and service and which on examination during the applicable warranty period (See exclusions to warranty coverage below).
6. Shipping and handling charges are the responsibility of the original consumer-purchaser for all in/out of warranty part orders.
7. This limited warranty will not reimburse for the cost of any consequential losses, including (but not limited to) inconvenience, food, personal injury, expenses for travel, transportation or property damage.
8. Winners Products Engineering Ltd. does not authorize any person or company to assume for it any other obligation or liability in connection with the sale, installation, use, removal, return, or replacement of its equipment; and no such representations are binding on Winners Products Engineering Ltd.
9. The purchaser shall retain a copy of the purchase invoice for future claims.
10. Winners Products Engineering Ltd. does not provide warranty whatsoever in respect to accessories, or parts not supplied with original purchase.
11. Claims must be made within the duration of the period of coverage. Winners Products Engineering Ltd will not retroactively cover claims outside of the coverage period, even if the issue arose within the said period. It is the responsibility of the purchaser to establish warranty period with the date from the original sales receipt.
12. Winners Products Engineering Ltd. reserves the right to make changes or improvements to products it produces in the future without imposing on itself any obligations to install the same improvements in the products it has previously manufactured.


EXCLUSIONS

Winners Products Engineering Ltd. excludes from its warranty, the following:

- a. Failure to perform regular maintenance, safety checks and service, including (but not limited to) removal of insects from venturi tubes, resulting in a flashback fire, damage caused by grease fires, flare-up fires or fires resulting from improper connection of hose to gas source.
- b. Part failure due to lack of cleaning and maintenance, part failure due to use of improper cleaning products, such as indoor stainless-steel cleaners, abrasive and chemical cleaners, porcelain oven cleaner and other chemical cleaners which can cause damage to surfaces.
- c. Normal wear and tear, chipping and scratching on painted, porcelain enamel or stainless-steel surfaces, dents, discoloration caused by environment or heat, surface corrosion, rust or rust perforation, chemical exposure in the atmosphere and other damages which result with normal use.
- d. Accidental damage, abuse, tampering or misuse, misapplication, vandalism, careless handling, modifications, neglect, improper assembly or installation, environmental such as severe weather conditions or situations otherwise uncontrollable by the manufacturer.
- e. Damages caused by failure to follow proper usage, safety and maintenance instructions presented throughout this manual.

There are no other express warranties except as set forth herein and any applicable implied warranties of merchantability and fitness are limited in duration to the period of coverage of this express written limited warranty.

NOTE

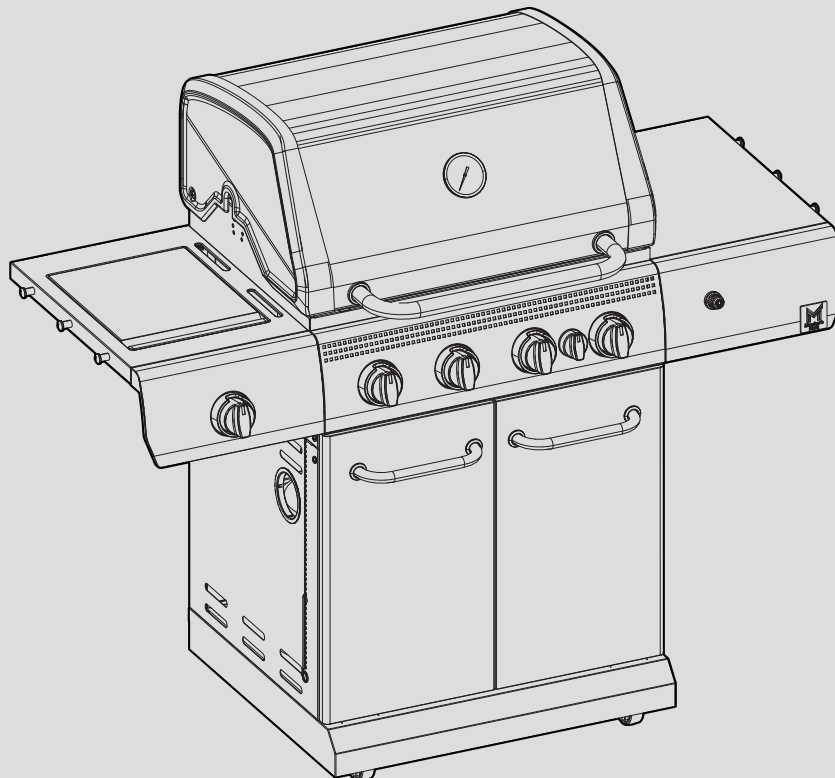

sam's club 

Distributed by Sam's West Inc.

2101 SE Simple Savings Dr. Bentonville,
Arkansas 72716-0745

Made In China

Winners Products Engineering Ltd

27/F, Cofco Tower, 262 Gloucester Road,
Causeway Bay, Hong Kong

QUESTIONS OR COMMENTS?

We would love to hear about your Member's
Mark experience! Visit us at:
samsclub.com/membersmarkhelp

linktr.ee/member's.mark



CONTACT US: 1-833-454-0864