

Ορτιχ PLUS WIPER BLADE INSTALLATION INSTRUCTIONS

WARNING: Failure to properly install wiper blades may cause the blades to not work properly or detach. Follow all instructions carefully and use only the correct adapter for your vehicle. After installation, check to ensure the blades are securely attached.



Scan for PEAK® wiper blade product information and installation videos or visit PEAKauto.com

Identify your vehicle's wiper arm and follow the instructions. Remember to remove the plastic rubber protector before installation.



HOOK



1. Position the wiper blade into the wiper parallel to the arm hook. wiper arm.



3. Continue to pull pass the front adapter tabs until you hear the blade lock into place. After installation, tug firmly on the blade to ensure it is securely attached.

3/16

PEAK[®] Optix[®] Plus features an EZCHECK[™] Wear Indicator that tells you when to change your blades.





When the wear indicator turns yellow, it's time to replace your wiper blades.



SIDE LOCK 1/4" 8 3/16"



1. Lift up the back of the pre-attached adapter.



3. Alian the "F3" adapter with the corresponding hole size on the coupler.



4. Snap down the "F3" adapter onto the plastic pin in the blade.



5. Insert wiper arm into the correct size hole in wiper frame until it locks in place.

5. Attach the "A"

adapter onto the

"M" adapter.





PINCH TAB



2. Pull out

adapter to

discard.

2. Pull out

adapter to

discard.

remove and

remove and

1. Lift up the back of the pre-attached adapter.



3. Install the "M" adapter by aligning the arrow on the adapter with the arrow on the base of the wiper blade.



base.

4. Snap the adapter down in the back to engage onto the



6. Insert the tip

of the wiper arm

into the front of

the adapter.

CLICK!

7. Rotate the blade into the wiper arm until the tabs in the back of the adapter lock into the wiper arm.

To determine the size of your Push Button wiper arm, use a penny or ruler below to measure. A penny will fit firmly into the end of the 22mm wiper arm but will not fit into the end of the 19mm wiper arm.



PUSH BUTTON (22mm)



1. Lift up the back of the pre-attached adapter.



adapter to

discard.

remove and

2. Pull out



3. Install the "M" adapter by aligning the arrow on the adapter with the arrow on the base of the wiper blade.



4. Snap the adapter down in the back to engage onto the base.



5. Attach the "A" adapter onto the "M" adapter.



6. Insert the

wiper arm

opening.

back end of the

adapter into the



7. The button in the middle of the adapter must lock into the hole in the top of the wiper arm.





WIPER BLADE INSTALLATION INSTRUCTIONS

WARNING: Failure to properly install wiper blades may cause the blades to not work properly or detach. Follow all instructions carefully and use only the correct adapter for your vehicle. After installation, check to ensure the blades are securely attached.



Scan for PEAK® wiper blade product information and installation videos or visit PEAKauto.com

Identify your vehicle's wiper arm and follow the instructions. Remember to remove the plastic rubber protector before installation.

To determine the size of your Push Button wiper arm, use a penny or ruler below to measure. A penny will fit firmly into the end of the 22mm wiper arm but will not fit into the end of the 19mm wiper arm.



PUSH BUTTON (19mm)

19 mm 10

1. Lift up the 2. Pull out

back of the pre-attached adapter.



adapter to

discard.

remove and

3. Install the "M" adapter by aligning the arrow on the adapter with the arrow on the base of the wiper blade.



4. Snap the adapter down in the back to engage onto the base.



5. Attach the "B" adapter onto the "M" adapter.

6



6. Insert the

wiper arm

opening.

back end of the

adapter into the

CLICK!

7. The button in the middle of the adapter must lock into the hole in the top of the wiper arm.

To determine the size of your Side Pin wiper arm, use a penny or ruler below to measure. A penny will fit firmly into the end of the 22mm wiper arm but will not fit into the end of the 17mm wiper arm.



SIDE PIN (22mm)

22 mm 10 20



discard.

1. Lift up the back of the pre-attached adapter.



3. Install the "M" adapter to adapter by aligning the arrow remove and on the adapter with the arrow on the base of the wiper blade.



4. Snap the adapter down in the back to engage onto the base.



5. Attach the "B" adapter onto the "M" adapter.



upside down,

hole in the

adapter.

center of the

arm pin into the





blade up until the bent end of the metal tab of the wiper arm straddles the adapter, locking it in place.

To determine the size of your Side Pin wiper arm, use a penny or ruler below to measure. A penny will fit firmly into the end of the 22mm wiper arm but will not fit into the end of the 17mm wiper arm.



SIDE PIN (17mm)





1. Lift up the back of the pre-attached adapter.







remove and





3. Install the "M" adapter by aligning the arrow on the adapter with the arrow on the base of the wiper blade.



4. Snap the adapter down in the back to engage onto the base.



"M" adapter.



6. With the blade upside down, insert the wiper arm pin into the hole in the center of the adapter.



7. Rotate the blade up until the bent end of the metal tab of the wiper arm straddles the adapter, locking it in place.



PINCH TAB BUTTON



1. Lift up the back of the pre-attached adapter.



adapter to

discard.

remove and

discard.

2. Pull out



3. Install the "M" adapter by aligning the arrow on the adapter with the arrow on the base of the wiper blade.



4. Snap the adapter down in the back to engage onto the base.



5. Attach the "A" adapter onto the "M" adapter.



6. Insert the tip of the wiper arm into the front of the adapter.



7. Rotate the blade up into the wiper arm until the tabs in the back of the adapter and the button in the middle of the adapter lock into the wiper arm.

5. Attach the "A" adapter onto the

