



Assembly Instructions & User's Manual

for


Member's Mark Outdoor Gas Griddle

Item Number: 980167856 / 980169672 / 980014462

Model Number: GR2298901-MM-02 / GR2298906-MM-01



Customer Assistance (spare/replacement parts): 1-888-837-1380

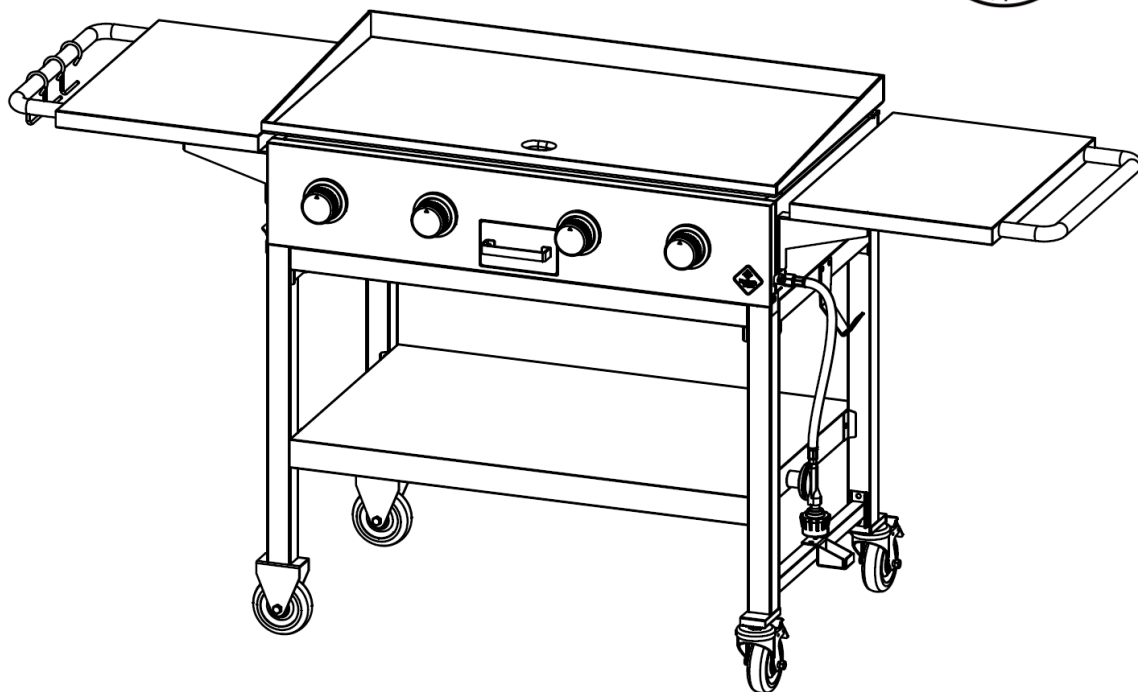or Email: customerservice@rankam.com





THIS ASSEMBLY MANUAL CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Table of Contents

Quality Statement	3
Important Safety Information	3
Before Assembly	3
Care & Use	3-6
Package Contents	7-8
Product Information	8
Components	9-11
Hardware	12
Tools	12
Step 1 – Step 16	13-20
 Warning	21-24
 Danger	25
Troubleshooting	26-27
Care & Use Instructions	27-32
Technical Data	32
Warranty Information	33

	WARNING	
<ol style="list-style-type: none">1. Do not store or use gasoline or other flammable liquids or vapors in the vicinity of this or any other appliance.2. An LP cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.		

	DANGER	
<p>If you smell gas:</p> <ol style="list-style-type: none">1. Shut off gas to the appliance.2. Extinguish any open flame.3. Open lid.4. If odor continues, keep away from the appliance and immediately call your fire department.		
<p>Failure to follow these instructions could result in fire or explosion which could cause property damage, personal injury or death.</p>		

Quality Statement

Questions or Comments?

We would love to hear about your Member's Mark experience! Visit us at: samsclub.com/membersmarkhelp

Important Safety Information

- *Please read all instructions carefully before assembling this product.*
- *Where applicable, and for your safety, assembly by an adult is strongly recommended.*
- *Use only vendor-supplied hardware to assemble this item. Using unauthorized hardware could jeopardize the structural integrity of the item.*
- *Hardware may loosen overtime. Periodically check that all connections are tight.*
- *Follow all warnings and instructions when using the appliance.*
- *Failure to follow these instructions and warnings could result in serious product or personal damage.*

Before Assembly

- *Remove all parts and hardware from the box. Place all items on a carpeted or scratch-free work surface, as this will avoid damaging parts during assembly.*
- *The shipping box can provide an ideal work surface if none is available.*
- *Use the components and hardware lists below to identify, inventory and separate each of the hardware and components included.*
- *To avoid accidentally discarding small components or hardware, do not dispose of any packaging or contents of the shipping carton until assembly is complete.*
- **DO NOT USE** *power tools unless it is explicitly identified in this manual as required for use during assembly. Power tools can damage the fasteners, hardware and/or components.*
- *Do not fully tighten all fasteners / screws until all parts are in place. Failure to follow these instructions may cause the fasteners / screws to misalign during assembly.*

Care & Use

- *Use a soft, clean cloth that will not scratch the surface when cleaning.*
- *Gloves are recommended while assembling the grill.*

USE AND INSTALLATION OF LP GAS CYLINDER (PROPANE TANK)

BEFORE INSTALLING:

The installation must conform with local codes or (in the absence of local codes) with either the *National Fuel Gas Code, ANSI Z223.1/NFPA 54, Natural Gas and Propane Installation Code, CSA B149.1, or Propane Storage and Handling Code, B149.2, or the Standard for Recreational Vehicles, ANSI A 119.2/NFPA 1192, and CSA Z240 RV Series, Recreational Vehicle Code, as applicable.*

BEFORE EVERY USE:


Be sure to inspect the hose for leaks, cuts, wear, abrasion, or damage of any sort before using this appliance. If any the hose shows any damage, it must be replaced with a new hose specified by the manufacturer before further use.

LP GAS CYLINDER

The LP (liquid propane) cylinder specifically designed to be used with this unit **MUST** have a 20 lb. (9.1kg) capacity with a Type 1 cylinder valve and an overfilling protection device (OPD). Only use LP cylinders with this type of valve.



LP Tank Valve Requirements:

- Purchase LP tanks only with these required measurements: 12" (30.5cm) (diameter) x 18" (45.7cm) (tall) with 20lb. (9kg) capacity maximum.
- Type 1 outlet compatible with regulator or appliance.
- Safety relief valve.
- UL-listed Overfill Protection Device (OPD). This OPD safety feature is identified by a unique triangular hand wheel. Use only tanks equipped with this type of valve.
- LP tank must be arranged for vapor withdrawal.
- The LP cylinder must be constructed and marked in accordance with the Specifications for LP-Gas Cylinders of the U.S. Department of Transportation (D.O.T.) or the National Standard of Canada CAN/CSA – B339, Cylinder, Spheres, Tubes for Transportation of Dangerous Goods; and Commission of Dangerous Goods; and Commission, as applicable.
- The LP cylinder must include a collar to protect the cylinder valve.
- If the outdoor cooking gas appliance is not in use, the gas must be turned off at the supply cylinder(s).
- The LP cylinder must be stored outdoors out of the reach of children and **MUST NOT** be stored in a building, garage, shed, breezeway, or any other enclosed space.
- Storage of an outdoor cooking gas appliance indoors is permissible **ONLY** if the cylinder is disconnected and removed from the appliance.
- The cylinder should **ALWAYS** sit in an upright position.

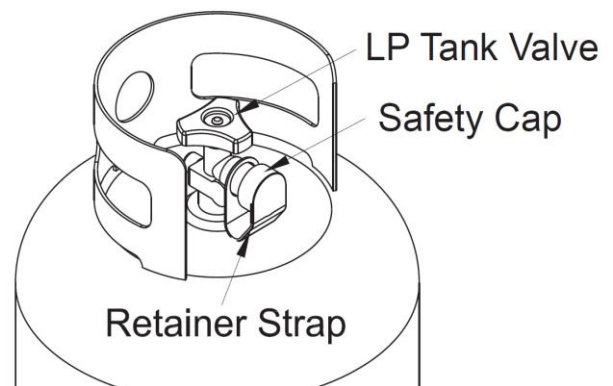

INSTALLING GAS CYLINDER

1. Check that the cylinder valve is closed by turning the knob in clockwise.
2. Place cylinder into tank holder in bottom cabinet.
3. Place cylinder such that the valve opening faces the right side table in such a way that the hose is not kinked/damaged.
4. Attach or detach the regulator to the LP gas cylinder only when the cylinder is placed on the cylinder holder.

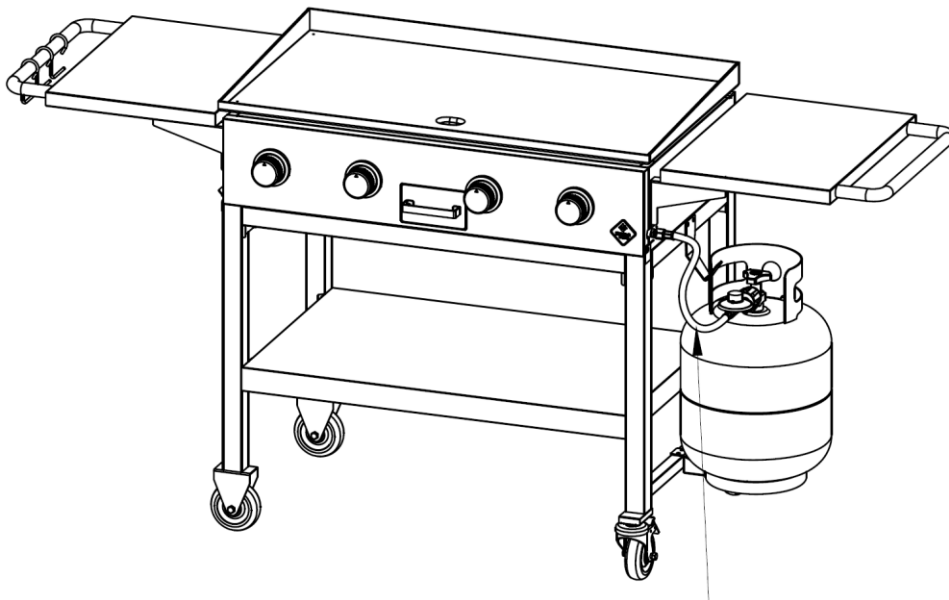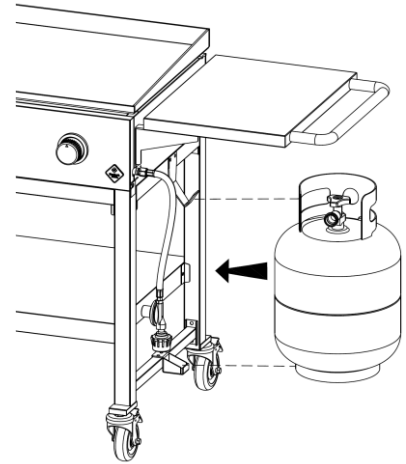

WARNING: Keep the fuel supply hose away from any heated surfaces.




CAUTION



- When installing LP cylinders, the pressure regulator and hose supplied by the manufacturer **MUST** be used with the appropriate cylinder. Replacement regulators and hoses need to be specified by the manufacturer of this appliance.
- Place the dust cap on the cylinder valve outlet whenever the cylinder is not in use. Only install the type of dust cap on the cylinder valve outlet that is provided with the cylinder. Other types of caps or plugs may result in a propane leak.

CONNECTION PROCEDURES

1. Make sure the tank valve is closed (turn valve clockwise until tight).
2. Check the tank valve to ensure it has the proper external male threads.
3. Make sure all burner valves are turned **OFF**.
4. Inspect valve connections, port, and regulator assembly. Look for any damage or debris. Remove any debris. Inspect the hose for damage. Never attempt to use damaged or obstructed equipment. Contact your local LP gas dealer for repair.
5. When connecting the regulator assembly to the valve, hand tighten the quick coupling nut clockwise to a complete stop. Do not use a wrench to tighten. Use of a wrench may damage the quick coupling nut and result in a hazardous condition.
6. Open the tank valve fully (counterclockwise). Use a soapy water solution to check all connections for leaks (leak test) before attempting to light the grill (see P.23-24). If a leak is found, turn the tank valve off and do not use the grill until your LP gas dealer can make repairs.

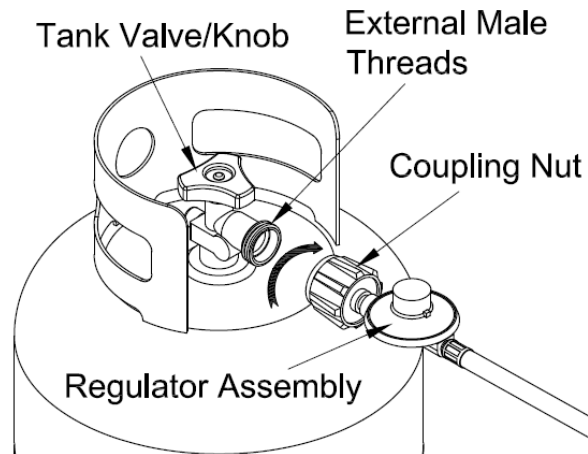


TO DISCONNECT LP CYLINDER:

1. Turn the burner valves off.
2. Turn the tank valve off fully (turn clockwise to stop).
3. Detach the regulator assembly from the tank valve by turning the quick coupling nut counterclockwise.


FLAME CHARACTERISTICS

This procedure outlines how to check for proper burner flame characteristics.

Burner flames should be blue and stable with little yellow tips, with no excessive noise, or lifting. If the flame is yellow, it indicates too much air. If any of these conditions exist, call our customer service. Visually check the burner flames prior to each use. The flames should look like this picture. If not, refer to the burner maintenance part of this manual.

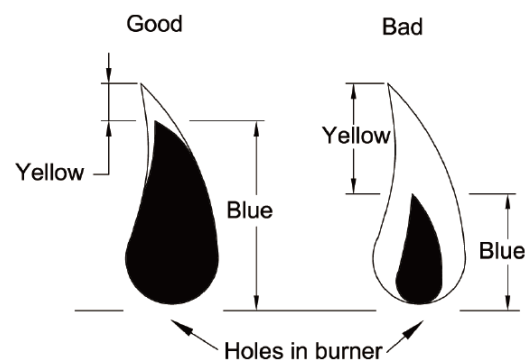

Package Contents

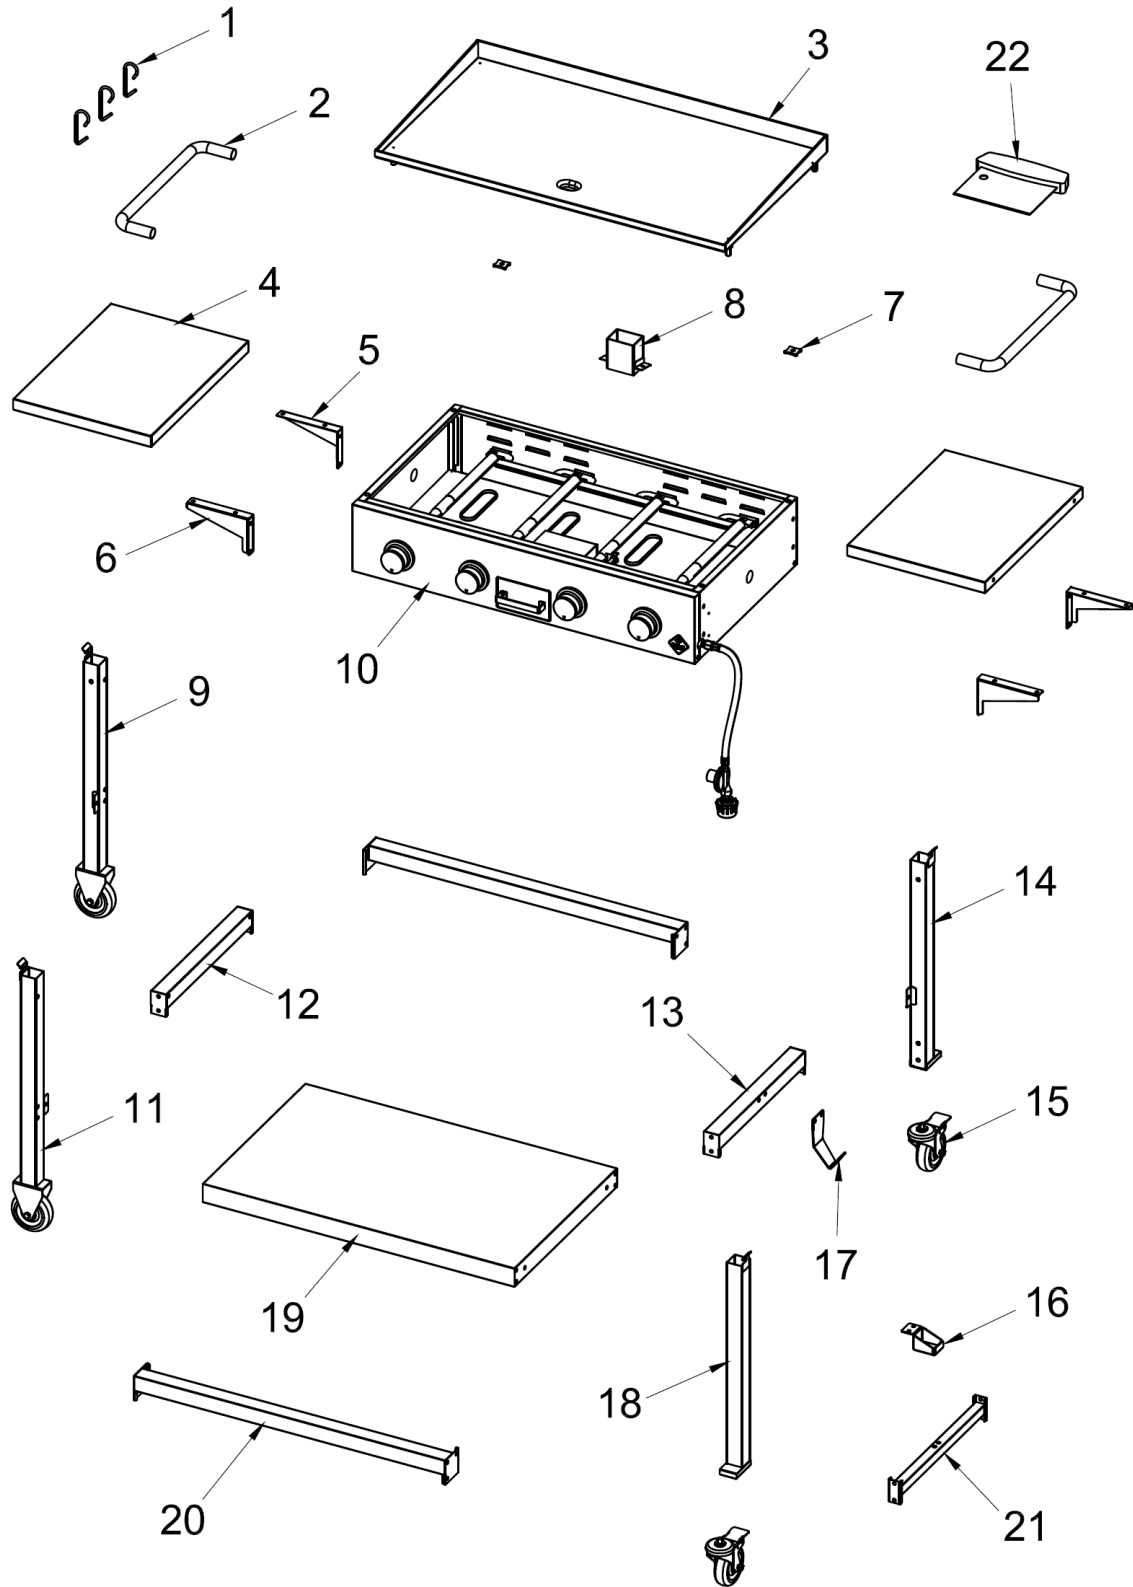

Component	Description	Quantity	Component	Description	Quantity
1	Hook	3	12	Left Cart Beam	1
2	Side Table Handle	2	13	Right Cart Beam	1
3	Griddle	1	14	Right Rear Leg	1
4	Side Table	2	15	Locking Caster	2
5	Side Table Left Bracket	2	16	Tank Holder	1
6	Side Table Right Bracket	2	17	Tank Hook	1
7	Griddle Adjustor	2	18	Right Front Leg	1
8	Grease Drip Tube	1	19	Cart Base	1
9	Left Rear Leg	1	20	Front/Rear Cart Beam	2
10	Grill Body Assembly	1	21	Tank Holder Supporting Beam	1
11	Left Front Leg	1	22	Scraper	1










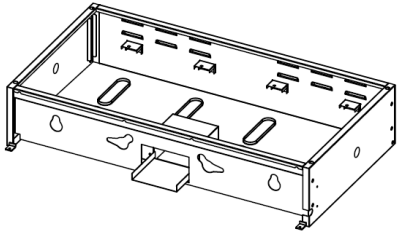
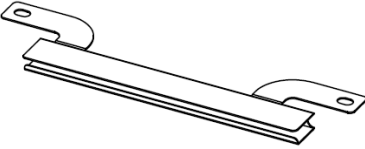
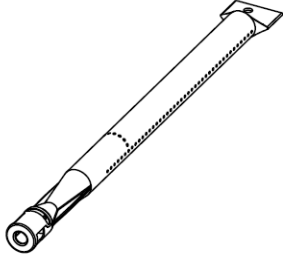
Product Information




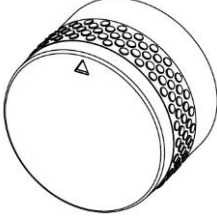
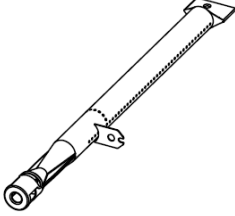
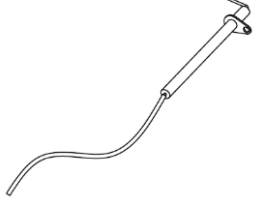

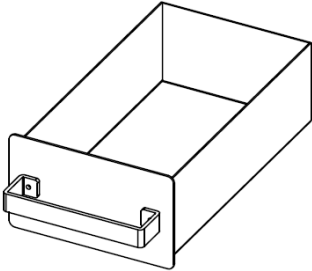
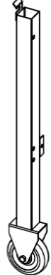
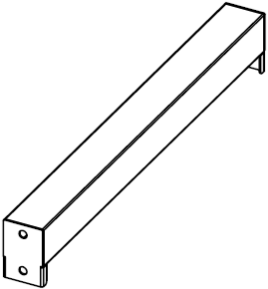
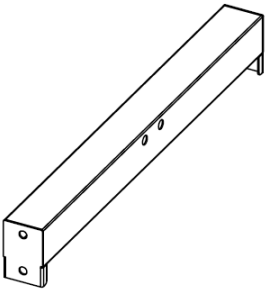
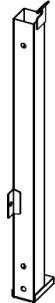
Product Dimensions – **73.3" x 26.4" x 36.7" (186.2cm x 67.1cm x 93.2cm)**





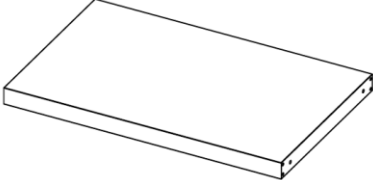
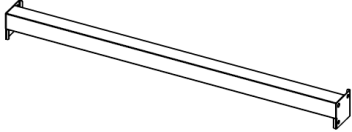
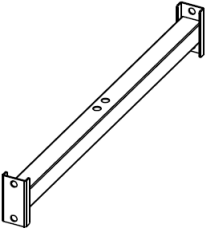
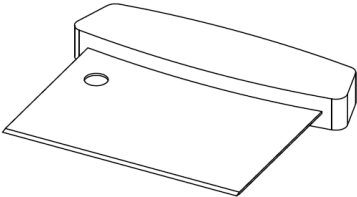
Product Weight Capacity – **Supports up to 110 lbs. (50 kg.)**

Need Assistance? Visit us at: samsclub.com/membersmarkhelp


Components
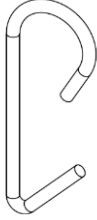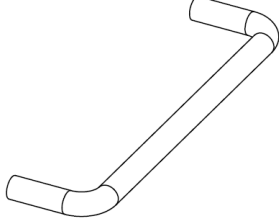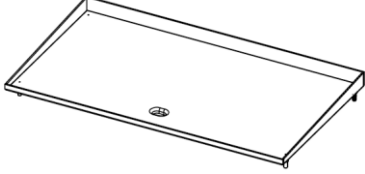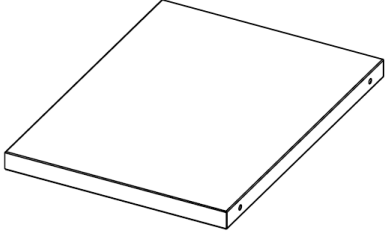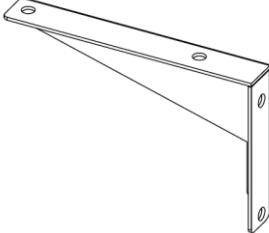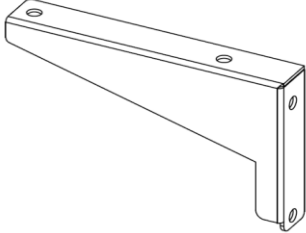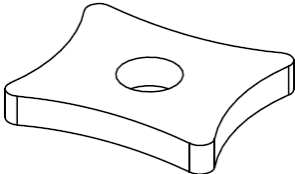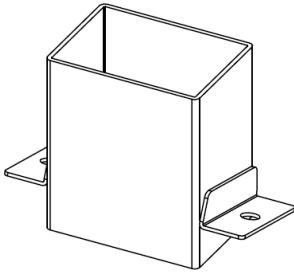
<p>Component 1 Hook Part No. MET-4B0014 Qty 3</p>	<p>Component 2 Side Table Handle Part No. MET-4B0015 Qty 2</p>	<p>Component 3 Griddle Part No. MET-4B0016 Qty 1</p>
		
<p>Component 4 Side Table Part No. MET-4B0017 Qty 2</p>	<p>Component 5 Side Table Left Bracket Part No. MET-4B0018 Qty 2</p>	<p>Component 6 Side Table Right Bracket Part No. MET-4B0019 Qty 2</p>
		
<p>Component 7 Griddle Adjustor Part No. MET-4B0020 Qty 2</p>	<p>Component 8 Griddle Drip Tube Part No. MET-4B0021 Qty 1</p>	<p>Component 9 Left Rear Leg Part No. MET-4B0022 Qty 1</p>
		
<p>Component 10a Grill Body – Body Part No. MET-4B0023 Qty 1</p>	<p>Component 10b Grill Body – Carry Over Part No. MET-4B0024 Qty 3</p>	<p>Component 10c Grill Body – Burner Part No. GAS-4B0002 Qty 3</p>
		

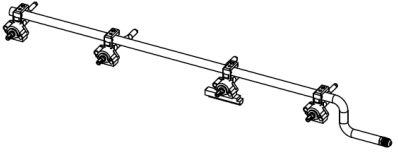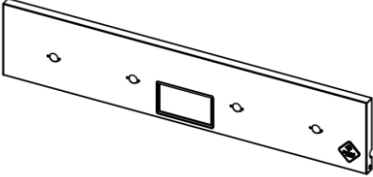

<p>Component 10d Grill Body – Valve & Manifold Assembly Part No. GAS-4B0003 Qty 1</p>	<p>Component 10e Grill Body – Control Panel Part No. MET-4B0025 Qty 1</p>	<p>Component 10f Grill Body – Control Knob Bezel Part No. PLA-4B0002 Qty 4</p>
		
<p>Component 10g Grill Body – Control Knob Part No. PLA-4B0003 Qty 4</p>	<p>Component 10h Grill Body – Ignition Burner Part No. GAS-4B0004 Qty 1</p>	<p>Component 10i Grill Body – Ignition Electrode & Wire Part No. ELE-4B0001 Qty 1</p>
		
<p>Component 10j Grill Body – Hose & Regulator Assembly Part No. GAS-4B0005 Qty 1</p>	<p>Component 10k Grill Body – Grease Cup Part No. MET-4B0026 Qty 1</p>	<p>Component 11 Left Front Leg Part No. MET-4B0027 Qty 1</p>
		
<p>Component 12 Left Cart Beam Part No. MET-4B0028 Qty 1</p>	<p>Component 13 Right Cart Beam Part No. MET-4B0029 Qty 1</p>	<p>Component 14 Right Rear Leg Part No. MET-4B0030 Qty 1</p>
		
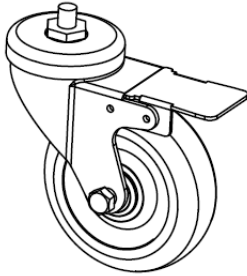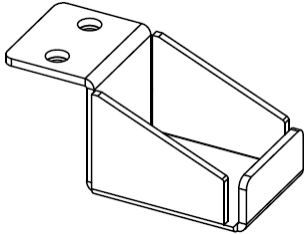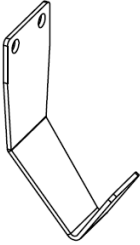
<p>Component 15 Locking Caster Part No. HAR-4B0001 Qty 2</p>	<p>Component 16 Tank Holder Part No. MET-4B0031 Qty 1</p>	<p>Component 17 Tank Hook Part No. MET-4B0032 Qty 1</p>
		
<p>Component 18 Right Front Leg Part No. MET-4B0033 Qty 1</p>	<p>Component 19 Cart Base Part No. MET-4B0034 Qty 1</p>	<p>Component 20 Front/Rear Cart Beam Part No. MET-4B0035 Qty 2</p>
		
<p>Component 21 Tank Holder Supporting Beam Part No. MET-4B0036 Qty 1</p>	<p>Component 22 Scraper Part No. MET-4B0037 Qty 1</p>	
		


Hardware

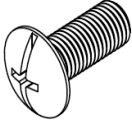Phillips Head Bolt, M6x12mm, Item No. A Qty: 58 		
--	--	--

Tools

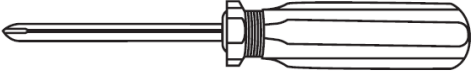Phillips Head Screwdriver (Not included)	Adjustable Wrench (Not included)	
		

Symbol: The following symbols will be shown in each procedure for indication of tightening the bolt and nut if necessary.

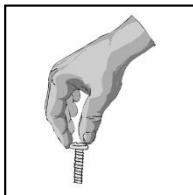

Hand tighten or use the tools but not fully tighten at this time




Tighten with tools at this time

Need Assistance? Visit us at: samsclub.com/membersmarkhelp


Step 1 – Step 16

Step 1. Attach the **Right Front & Rear Legs (18 & 14)** to the **Right Cart Beam (13)** and the **Tank Holder Supporting Beam (21)** using 6pcs **M6x12 Bolts (A)**.


Remark: Please remind the holes position of the beams (13 & 21) as shown below.

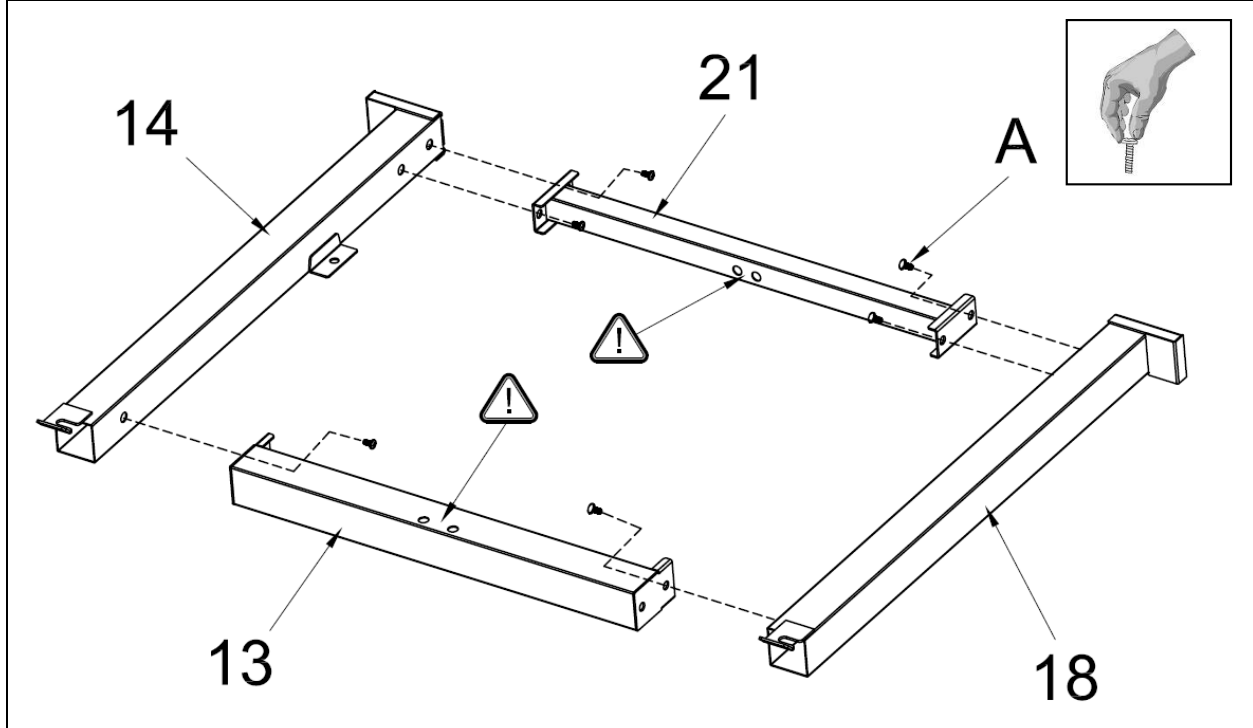


Step 2. Attach the **Left Front & Rear Legs (11 & 9)** to the **Left Cart Beam (12)** using 2pcs **M6x12 Bolts (A)**.

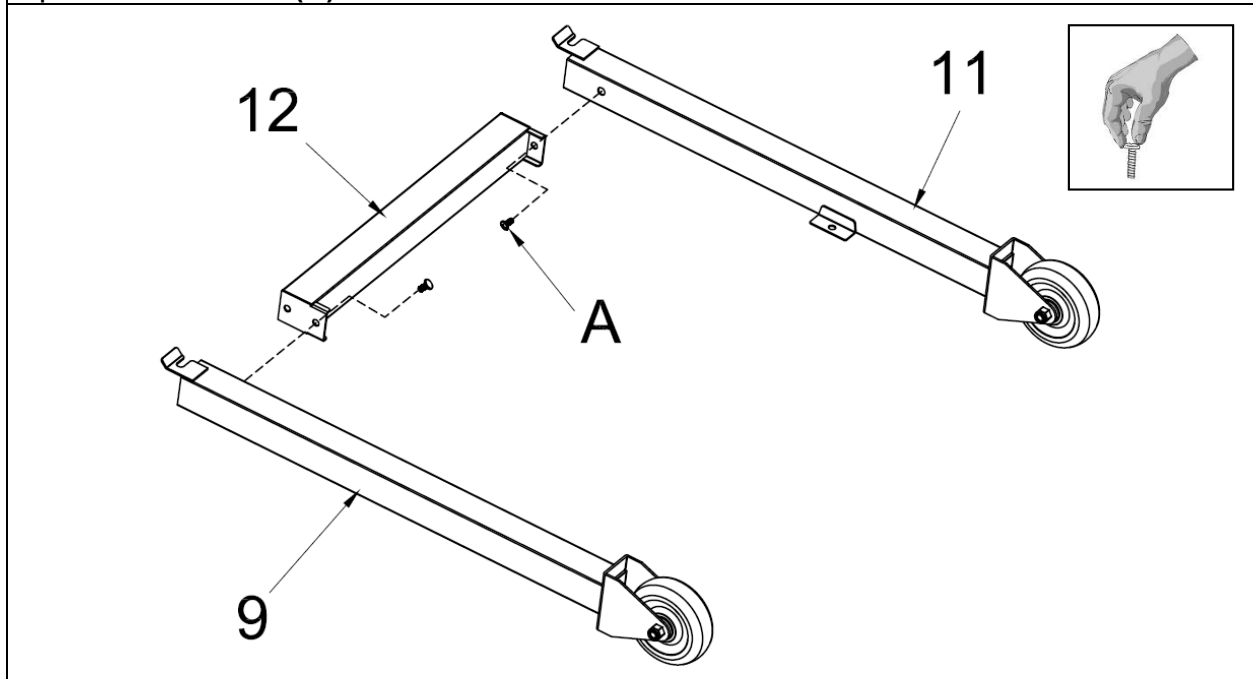


Step 3. Attach the left and right leg assemblies to the **Front / Rear Cart Beam (20)** using 8pcs **M6x12 Bolts (A)**.

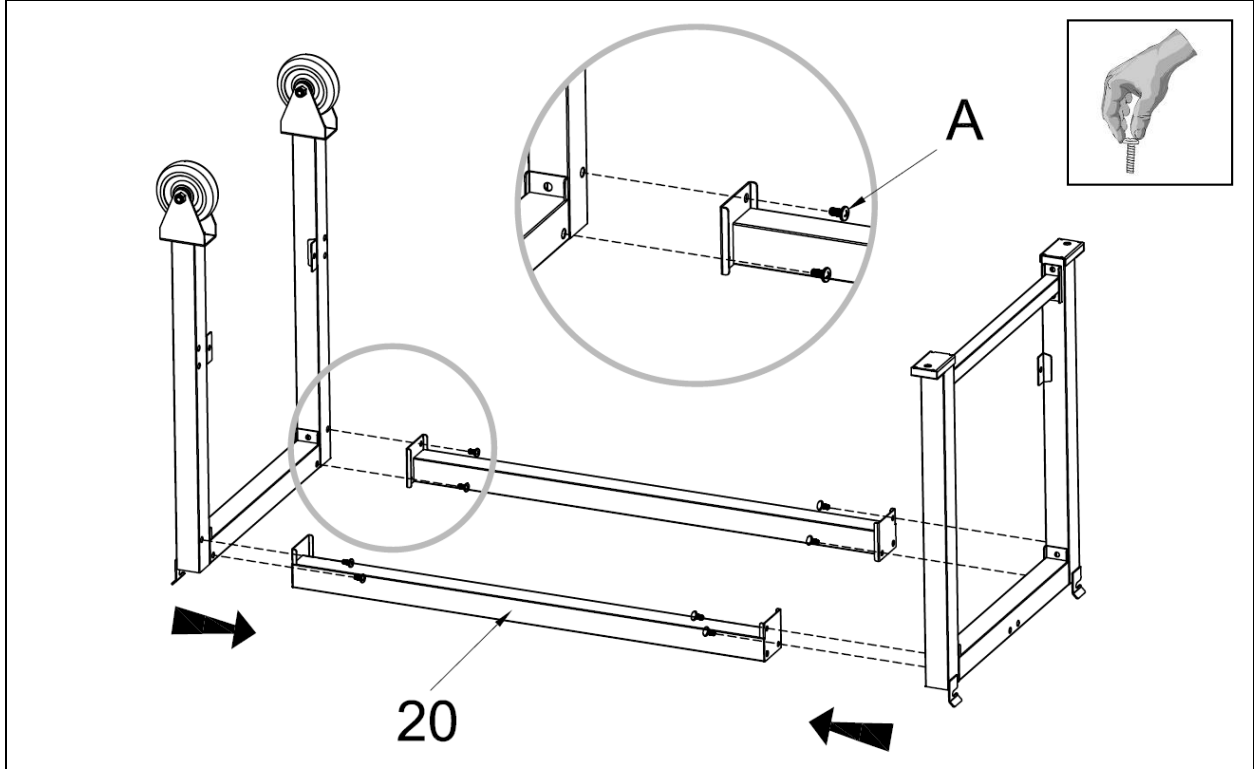


Step 4. Attach the **Cart Base (19)** to the cart assembly using 12pcs **M6x12 Bolts (A)**.

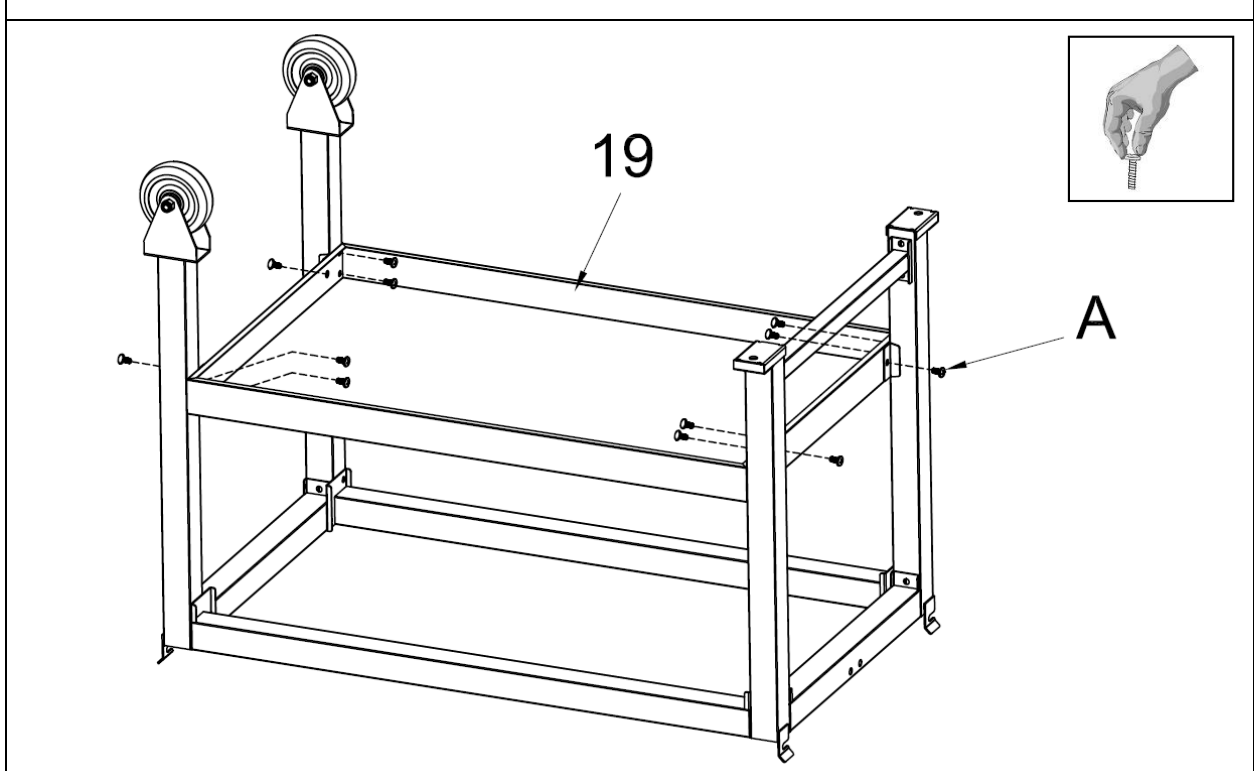


Step 5. Attach the **Locking Casters (15)** and tighten them to the right legs as shown.

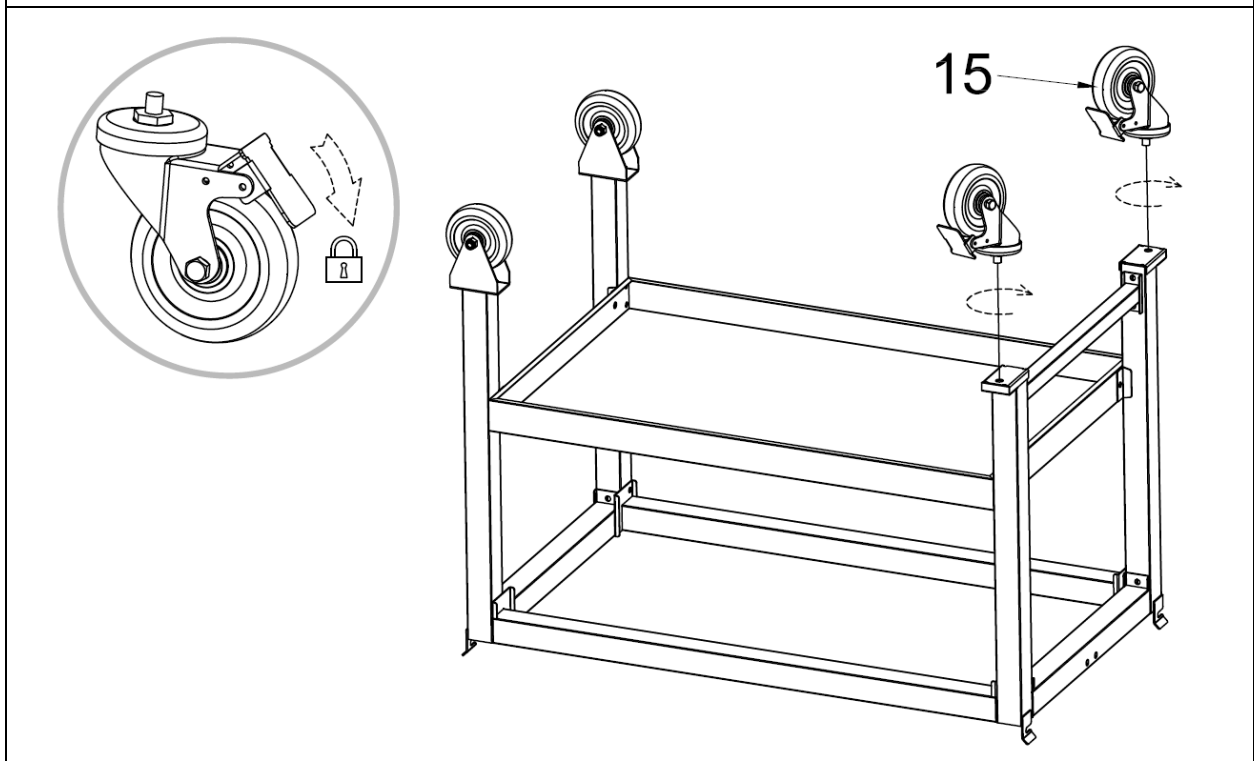


Step 6. Make sure that all the legs, beams and cart base are aligned then fully tighten all the bolts on the cart assembly.

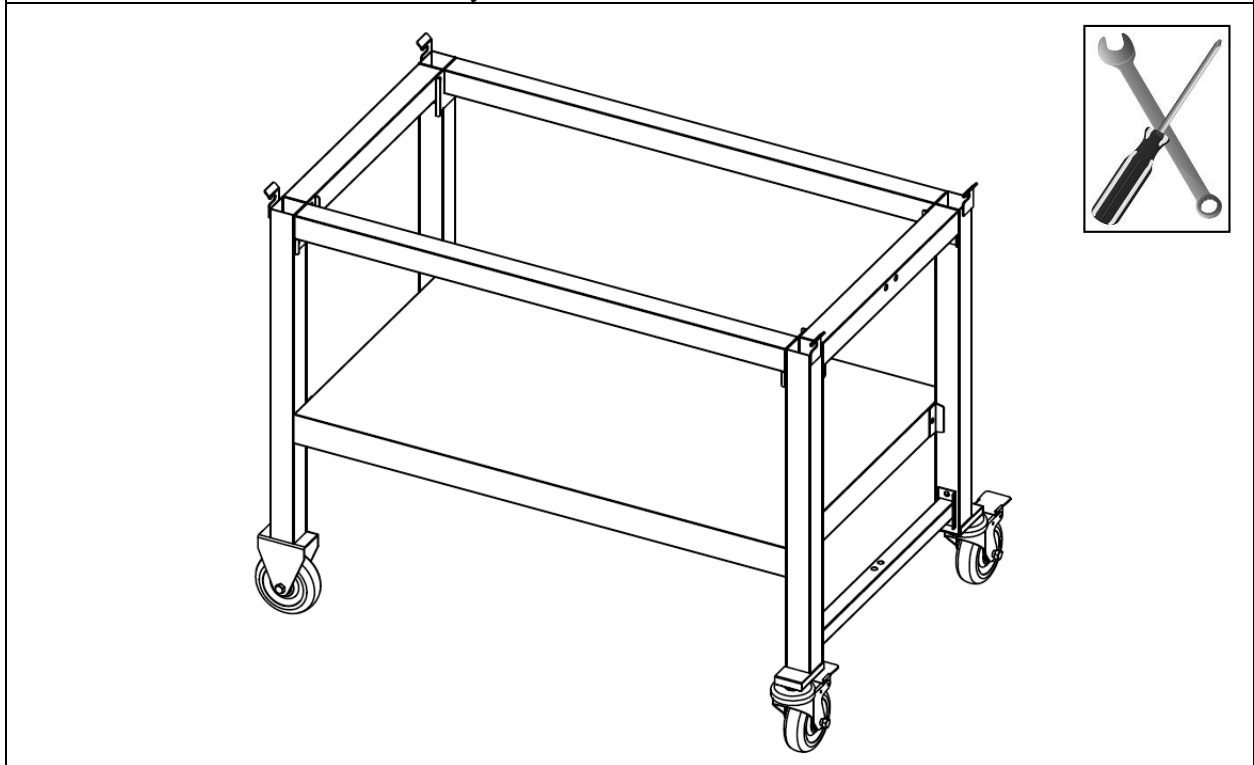


Step 7. Attach the **Tank Holder (16)** and the **Tank Hook (17)** to the cart assembly using 4pcs **M6x12 Bolts (A)**. Fully tighten the bolts.

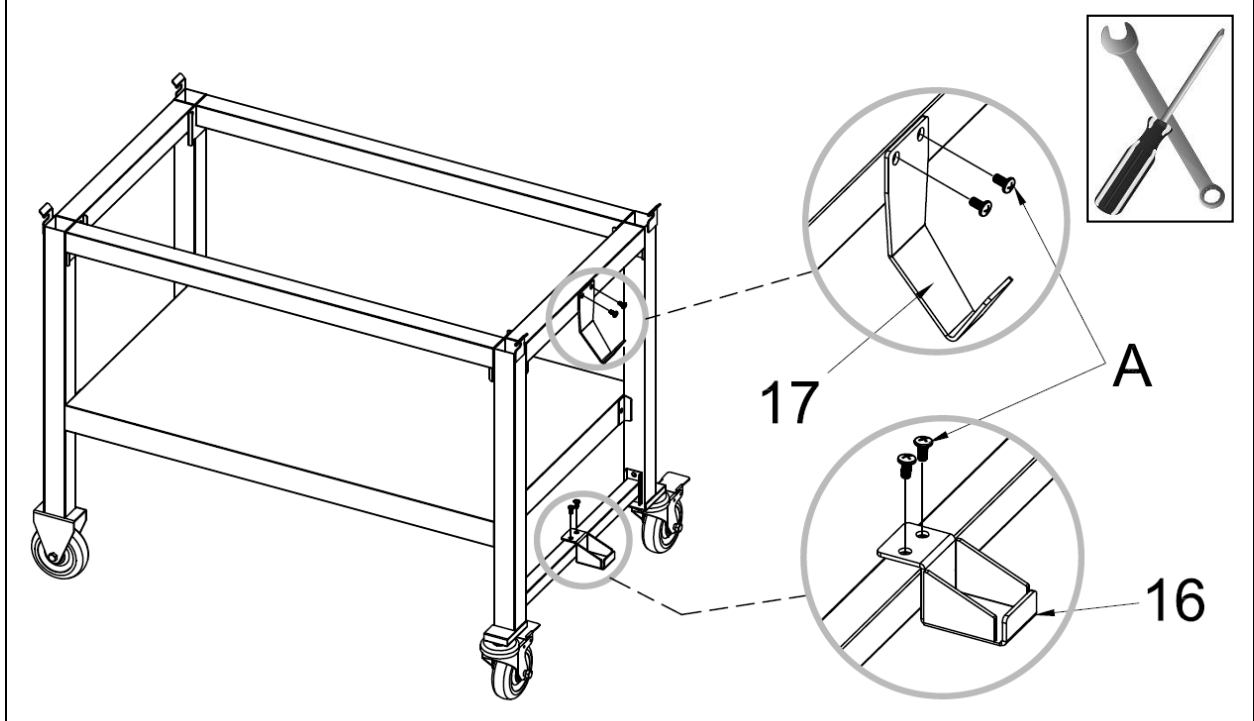


Step 8. This step needs two people to complete! Attach the **Grill Body Assembly (10)** to the cart assembly using 4pcs **M6x12 Bolts (A)** and fully tighten the bolts.

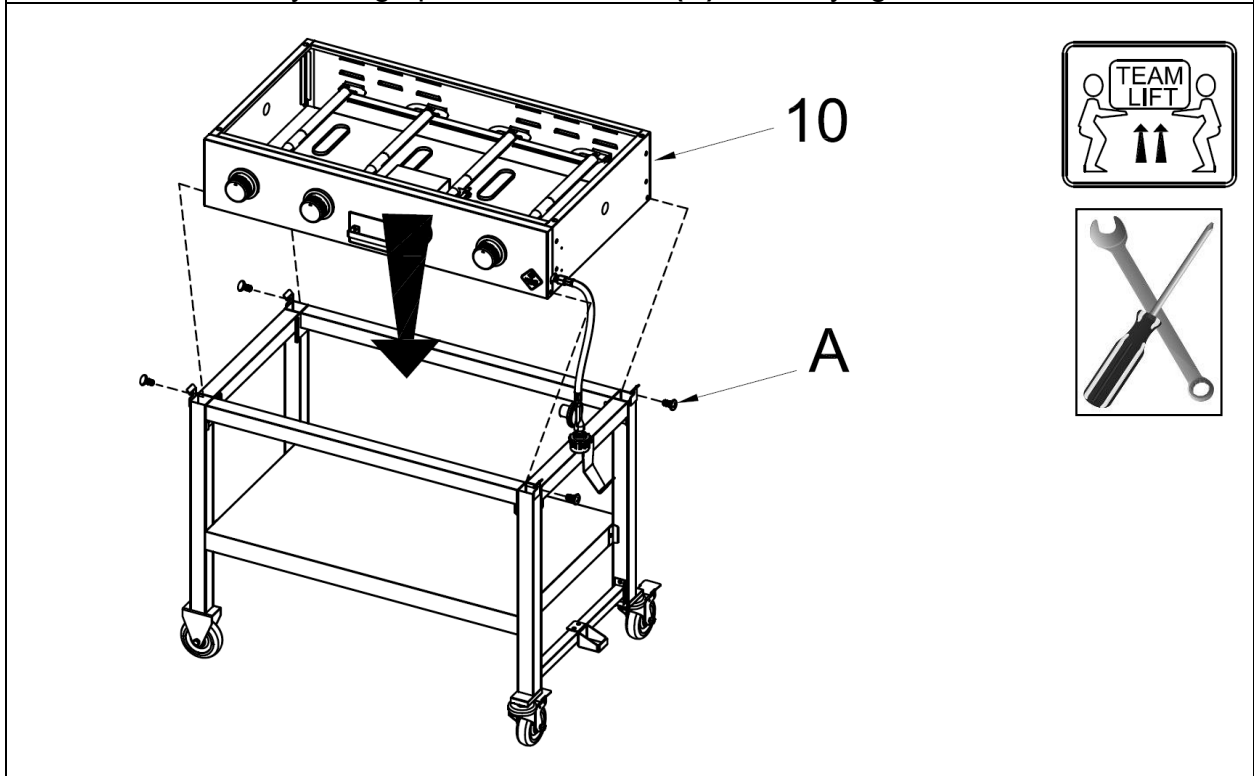


Step 9. Attach the **Side Table Left & Right Brackets (5 & 6)** to the **Side Table (4)** using 4pcs **M6x12 Bolts (A)** as shown below. Attach the **Side Table Handle (2)** and the **Hooks (1)** to the **Side Table (4)** using 2pcs **M6x12 Bolts (A)**. Tighten all the bolts.

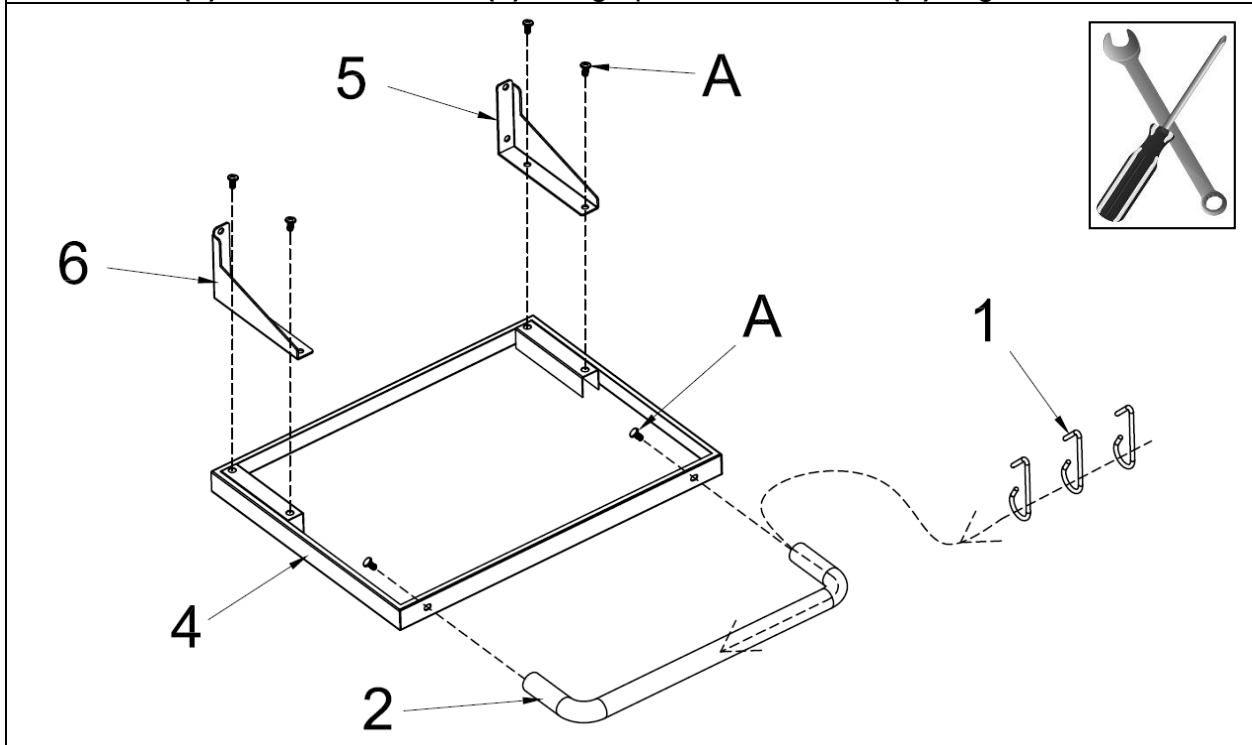


Step 10. Attach the left side table assembly to the grill body using 4pcs **M6x12 Bolts (A)** and tighten all the bolts.

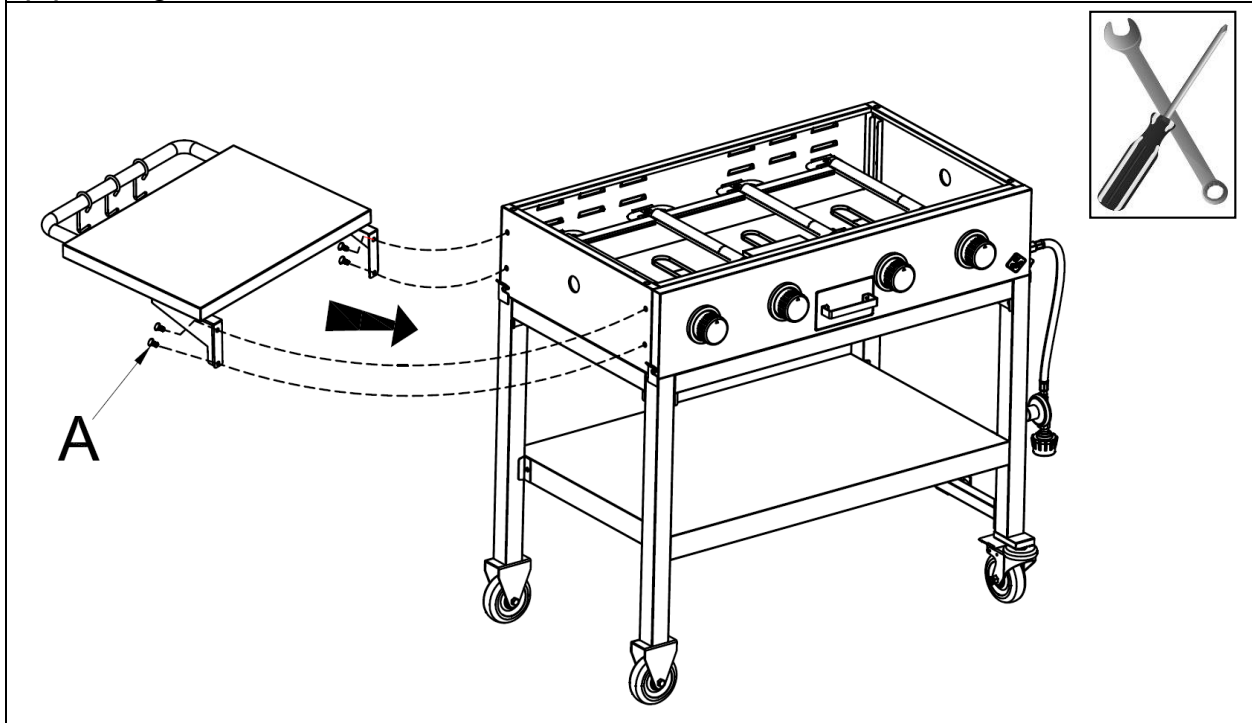


Step 11. Attach the **Side Table Left & Right Brackets (5 & 6)** and the **Side Table Handle (2)** to the **Side Table (4)** using 6pcs **M6x12 Bolts (A)**. Tighten all the bolts.

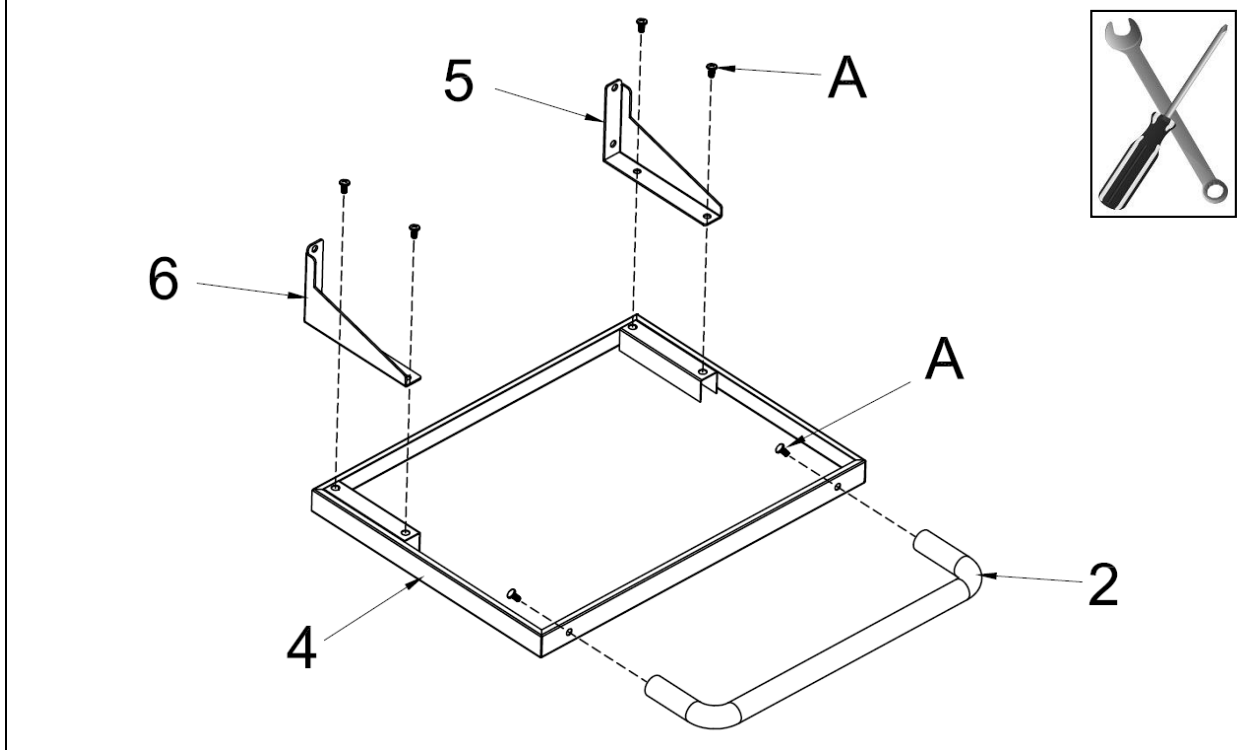


Step 12. Attach the right side table assembly to the grill body using 4pcs **M6x12 Bolts (A)** and tighten all the bolts.

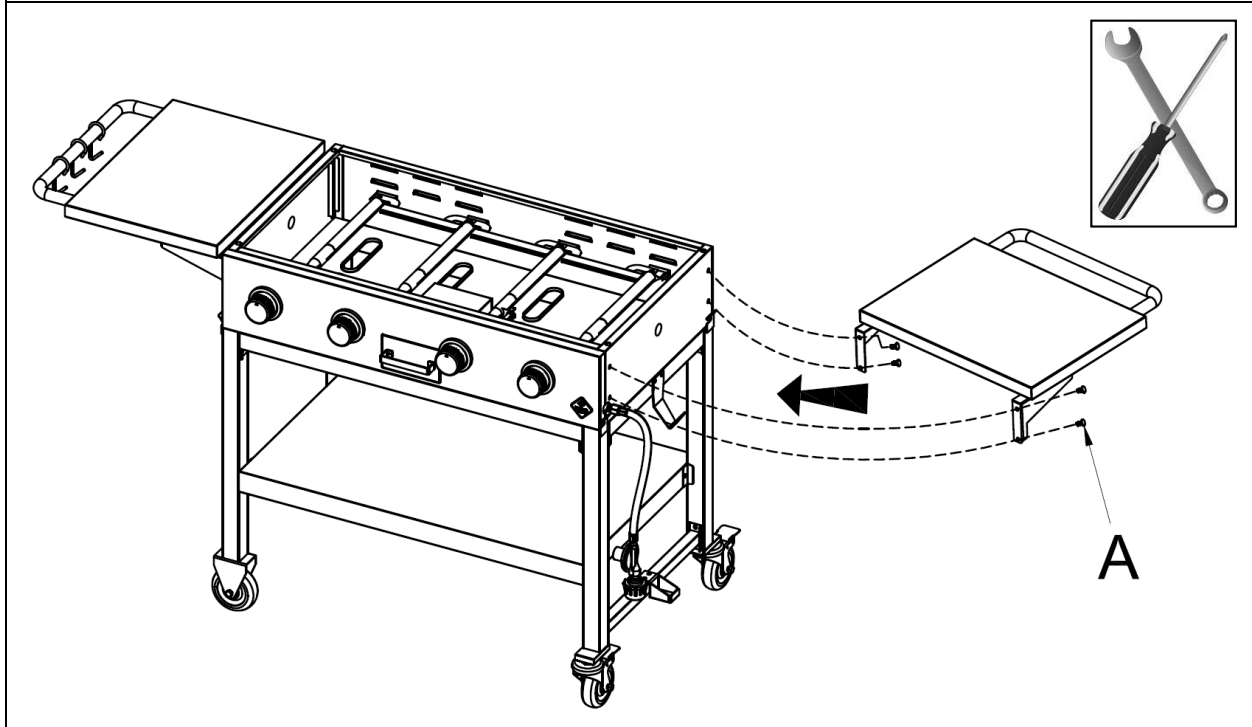


Step 13. Attach the **Grease Drip Tube (8)** to the grill body using 2pcs **M6x12 Bolts (A)** and tighten all the bolts.

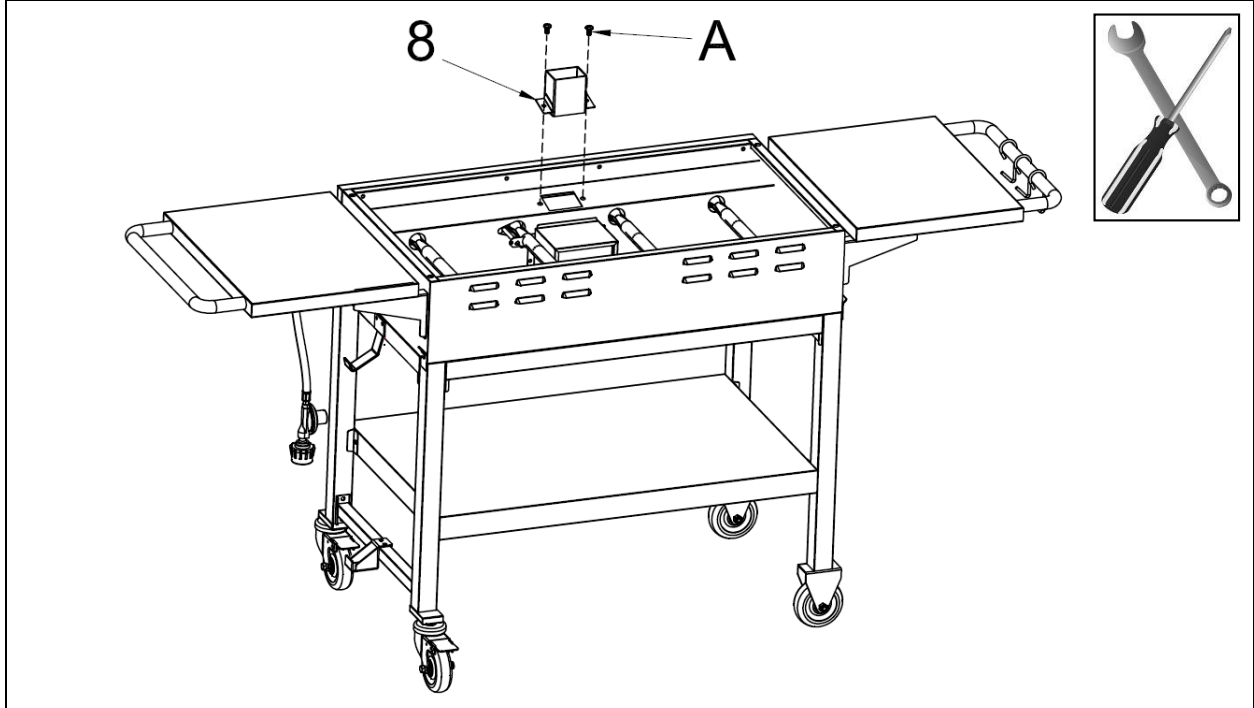


Step 14. Attach the **Griddle Adjustor (7)** to the **Griddle (3)** as shown.

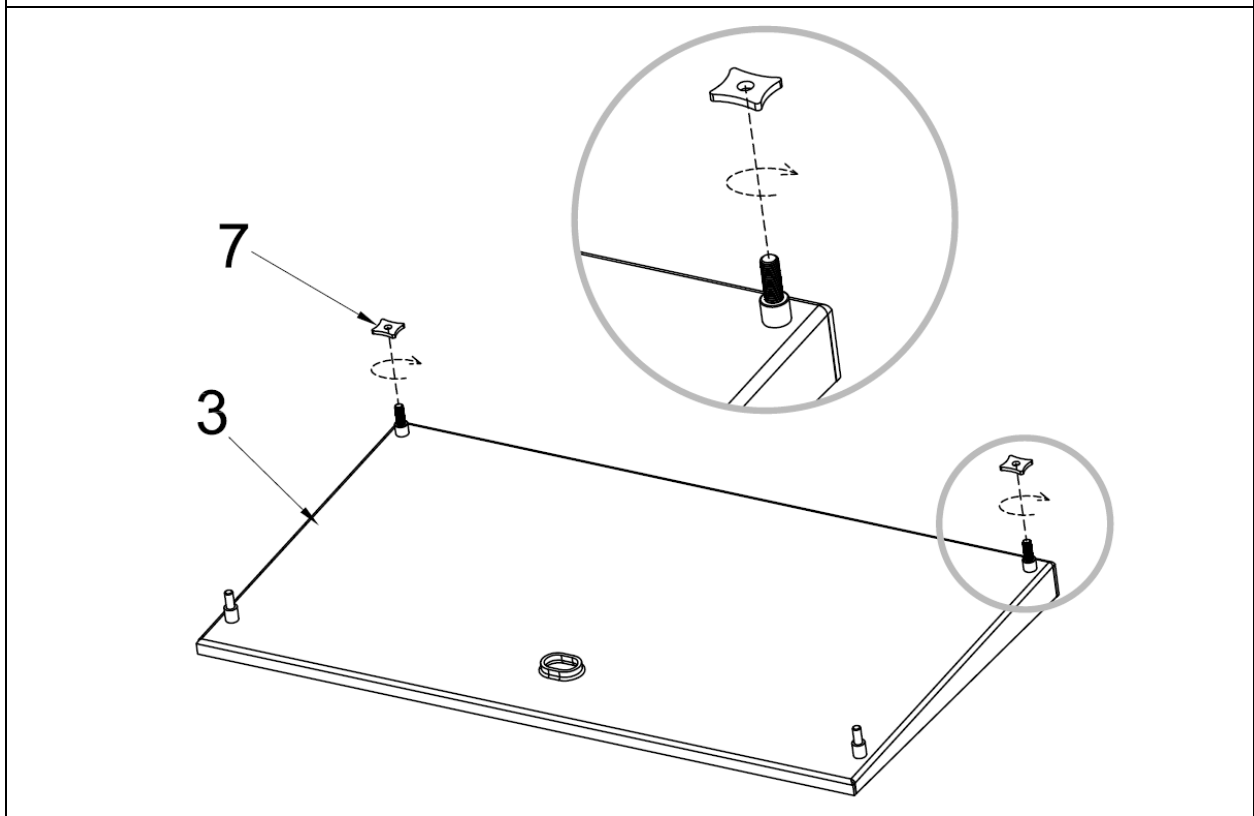

Step 15. This step needs two people to complete! Place the griddle on the grill as shown. You can adjust the height of griddle by rotating the griddle adjuster.

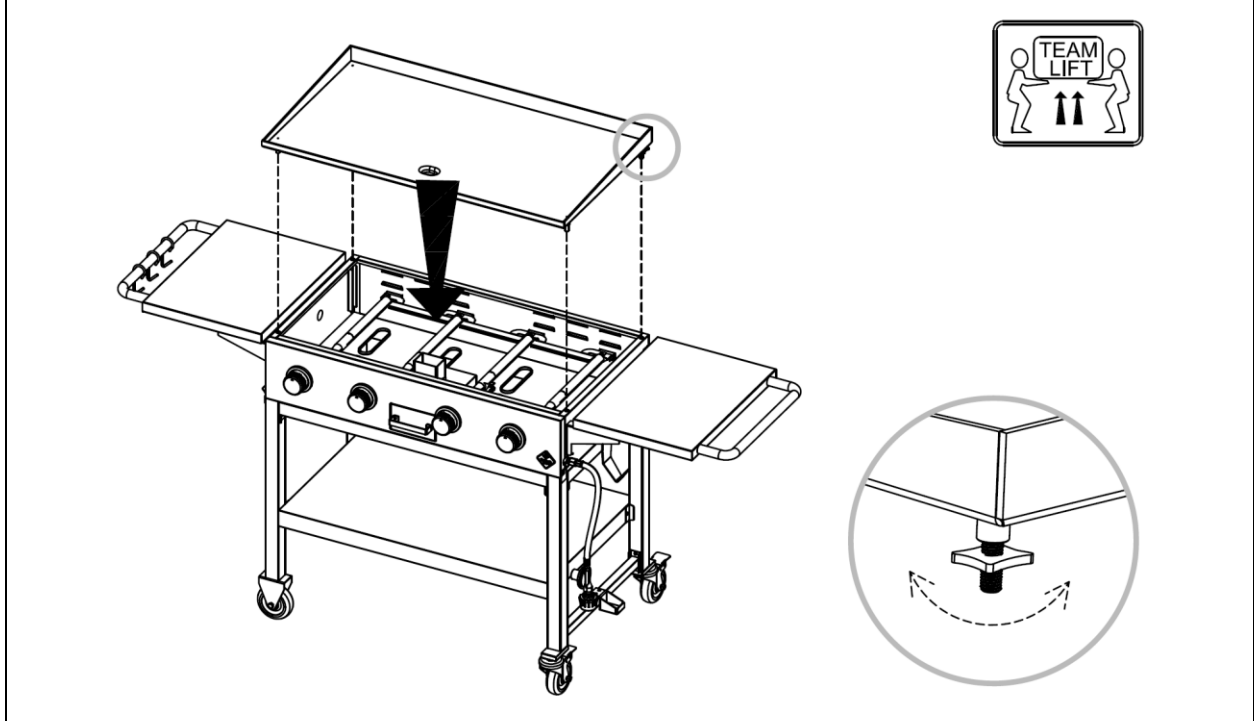

Step 16. Your unit is fully assembled! Make sure to read and follow the Instruction Manual before operating this appliance.

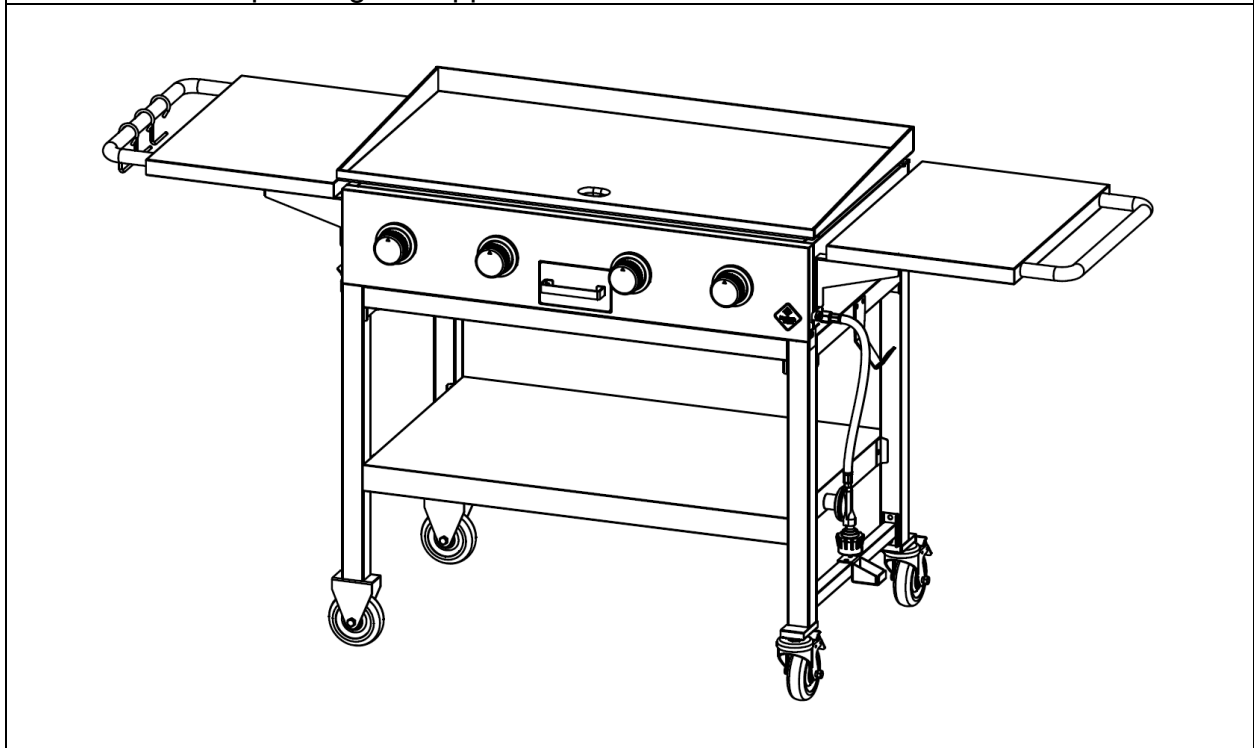


Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://www.samsclub.com/membersmarkhelp)

Warning



PROP 65 WARNING




 **WARNING:** This product can expose you to chemicals including benzene, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.



WARNING



- This outdoor cooking gas appliance shall be used only outdoors and shall not be used in a building, garage or any other enclosed area.
- This outdoor cooking gas appliance is not intended to be installed in or on boats. This appliance is not intended to be installed in or on recreational vehicles.
- This outdoor cooking gas appliance shall be used only on a level, stable non-combustible surface like bricks, concrete or dirt. **DO NOT** use this appliance on any surface that will burn or melt like wood, asphalt, vinyl, or plastic.
- Use your grill **OUTDOORS** in a well ventilated space away from dwellings or other buildings to prevent dangers associated with gas accumulation and toxic vapors. The grill should be situated at least 60 inches (152.4 cm) from buildings. Not adhering to these clearances will prevent proper ventilation and may increase the risk of a fire and/or property damage, which could also result in personal injury.
- Maintain a minimum clearance of 60 inches (152.4 cm) between all sides of grill, deck railings, walls or other combustible material. **DO NOT** use grill under any overhead combustible construction.
- **DO NOT** obstruct the flow of combustion/ventilation air.
- **DO NOT** leave the grill unattended while in use.
- **DO NOT** use while under the influence of drugs or alcohol.
- Keep the fuel supply hose away from heated surfaces.
- **DO NOT** put the grill in storage or move it after use. Allow the grill to be cool to the touch before moving/storing. Failure to do so could result in a fire causing property damage, personal injury or death.

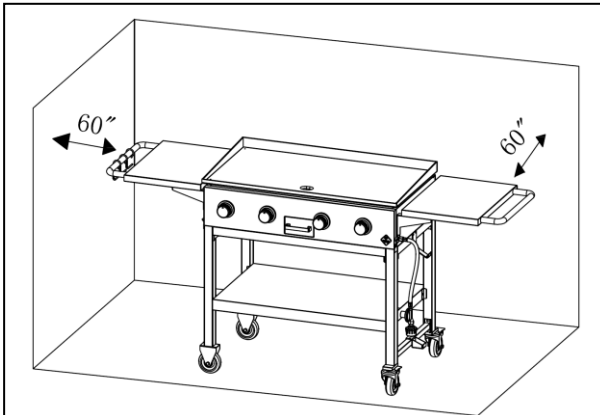

Maintain a minimum clearance of 60 inches from combustible material

- The appliance is for household use only. **DO NOT** use this grill for other than its intended purpose.
- Never use natural gas in a unit designed for liquid propane gas.
- Never use charcoal or wood briquettes in a gas grill. Flavoring chips must be contained in a metal smoking box to contain ash and prevent fires.
- A Leak Test must be conducted prior to each use.
- Keep a fire extinguisher on hand acceptable for use with gas products. Refer to your local authority to determine proper size and type.
- Grill is hot when in use. To avoid burns:
 - **DO NOT** attempt to move the grill.
 - Lock the wheels so the unit does not accidentally move.
 - Wear protective gloves or oven mitts.
 - **DO NOT** touch any hot grill surfaces.
 - **DO NOT** wear loose clothing or allow hair to come in contact with grill.
- After cooking, allow grill and grease cup to cool off completely before removing grease cup.
- Gloves are recommended while assembling the grill.
- Turn off gas supply and the knobs **BEFORE** cleaning the burners.



WARNING



FOR FILLING THE LP GAS CYLINDER

- Allow only qualified LP gas dealers to properly fill or repair your LP cylinder.
- **DO NOT** allow the cylinder to be filled beyond 80% capacity. Over-filled tanks can create a dangerous condition. Over-filled tanks can build up pressure and cause the relief valve to expel propane gas vapors. The vapor is combustible and if it comes in contact with a spark source or flame an explosion causing severe burns, bodily harm, or death could occur.
- Always use a safety cap when the grill is not connected to a cylinder.
- If you exchange a cylinder with a qualified exchange program, be sure the cylinder has a Type 1 valve and an over-fill prevention device (OPD).

LEAK TEST

Although all gas connections on the grill are leak tested at the factory prior to shipment, a complete gas tightness check must be performed after assembly to ensure fittings were not damaged after leaving the factory. Periodically check the entire system for leaks following the procedures listed below.

BEFORE TESTING

Make sure that all packing material is removed from the grill including tie-down straps. Make a soap solution of one part liquid detergent and one part water. You will need a spray bottle, brush, or rag to apply the solution to the fittings. For the initial leak test, make sure the LP cylinder is full.

	<h1>WARNING</h1>	
<ul style="list-style-type: none">● NEVER PERFORM LEAK TEST WITH AN OPEN FLAME OR WHILE SMOKING.● If there is excessive abrasion, wear, or damage to the hose, parts must be replaced prior to operation. The replacement hose must be specified by the manufacturer.		

TO TEST

1. Make sure the control valves are in the **OFF** position then turn on the gas supply.

2. Check all connections from the gas cylinder, LP gas regulator, and supply valve, including all connections to the pipe for the burners.

Points where the soap-water mixture should be applied

(soap bubbles will appear if a leak is present):

A Supply tank (cylinder) weld.

B Connection nut to tank valve.

C Back side of connection nut to brass nipple.



D Brass nipple connections to gas supply hoses.

E Regulator connections to gas supply hose.

F Tank valve to cylinder

G Hose connection to gas manifold.

H The full length of gas supply hose.

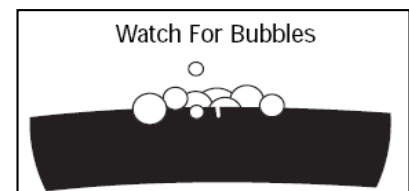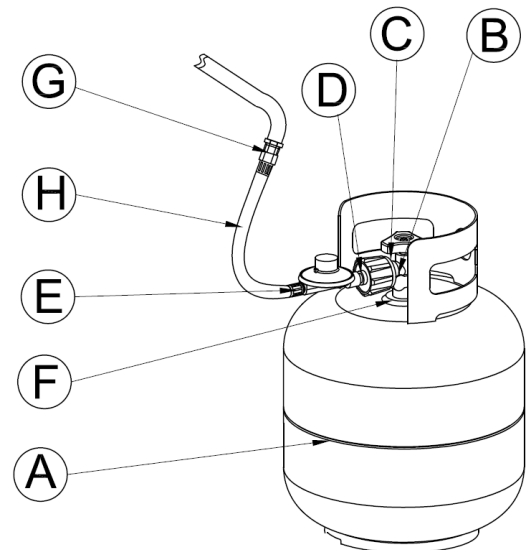

3. If a leak is present, immediately turn off the gas supply and tighten the leaky fittings.

4. Turn the gas back on and recheck.

5. Should gas continue to leak from any of the fittings, turn off the gas supply and contact customer service department at 1-888-837-1380, 8 a.m. - 5 p.m., Pacific Standard Time, Monday - Friday.

BEFORE LIGHTING



WARNING



- Inspect the gas supply hose prior to turning the gas **ON**.
- If there are cuts or abrasion on the hose, it must be replaced before further use.
- Do **NOT** use the grill if the odor of gas is present.
- Only the pressure regulator and hose assembly supplied with the unit should be used.
- Perform the “**LEAK TEST**” according to the instructions before operating the grill
- **ALWAYS** keep your face and body away from the burner while lighting.



WARNING



- **ENSURE** that the gas supply and the knobs are in the **OFF** position **BEFORE** cleaning the burners.

Danger



DANGER



- (a) Do not store a spare LP gas cylinder under or near this appliance;
- (b) Never fill the cylinder beyond 80 percent full;
- (c) If the information in (a) and (b) is not followed exactly, a fire causing death or serious injury may occur.



DANGER



- DO NOT connect this grill to an existing #510 POL cylinder valve with Left hand threads. The Type 1 valve can be identified with the large external threads on the valve outlet.
- DO NOT connect to a propane cylinder exceeding its capacity.
- DO NOT connect to a cylinder that uses any other type of valve connection device.
- Never store a spare LP gas cylinder under or near your grill. This could cause pressure to be expelled through the vapor relief valve resulting in fire, explosion, or severe personal injury, including death.
- Keep the ventilation opening(s) of the LP gas cylinder enclosure free and clear from obstructions and debris.
- DO NOT insert any foreign objects into the valve outlet. Damage to the valve outlet could result. A damaged valve outlet can cause a leak, possibly resulting in explosions, fire, severe bodily harm, or death.



DANGER



- Keep your face and hands as far away from the grill as possible when lighting it.

Troubleshooting


Problem	Possible Cause	Prevention / Solution
Burner Will Not Light	<ol style="list-style-type: none"> 1. LP cylinder fuel is used up. 2. Electrode tip not in proper position. 3. Burner may not be properly seated. 4. Burner may be obstructed. 5. Cylinder valve may be closed. 6. Regulator is not properly seated on cylinder valve. 	<ol style="list-style-type: none"> 1. Change a new, full LP cylinder. 2. Tip of electrode should be pointing toward gas port opening on burner. The distance should be 1/8" to 1/4". Adjust if necessary. 3. Refer to the section of "To Reinstall The Main Burners" on pg. 31 to reinstall the burner properly. 4. Refer to the section of "Burner Cleaning" on pg. 30 to clean the burner. 5. Check then open the cylinder valve. 6. Refer to the section of "Connection Procedures" on pg. 6 to reinstall the regulator properly.
Fire at Control Knob	<ol style="list-style-type: none"> 1. Burner is improperly seated on control valve. 2. Gas connections may be loose. 3. Burner holes may be obstructed. 	<ol style="list-style-type: none"> 1. Refer to the section of "To Reinstall The Main Burners" on pg. 31 to reinstall burner properly. 2. Refer to the section of "Leak Check" on pg. 23-24 to check and tighten all connections. 3. Refer to the section of "Burner Cleaning" on pg. 30 to clean the burner.
Yellow Flame at Burner	<ol style="list-style-type: none"> 1. Burner is obstructed. 	<ol style="list-style-type: none"> 1. Refer to the section of "Burner Cleaning" on pg. 30 to clean the burner.
Flame Blows Out on "LOW"	<ol style="list-style-type: none"> 1. Burner holes may be obstructed. 2. Grill is not sufficiently preheated. 3. Burner is improperly seated on control valve. 	<ol style="list-style-type: none"> 1. Refer to the section of "Burner Cleaning" on pg. 30 to clean the burner. 2. Preheat the grill for sufficient time. 3. Refer to the section of "To Reinstall The Main Burners" on pg. 31 to reinstall burner properly.
Burner Does not Get Hot Enough	<ol style="list-style-type: none"> 1. Flow control device has been activated in regulator. 	<ol style="list-style-type: none"> 1. Reset the regulator. Turn off all burners and close the LP tank valve. Disconnect the regulator from the LP tank and wait for one minute. Reconnect the regulator to the LP tank and slowly open the LP tank valve until the valve is

		fully open. Light all burners and observe the temperature.
Grill is Too Hot	<ol style="list-style-type: none"> 1. Excess grease build-up causing grease fires. 2. Damaged or faulty regulator. 	<ol style="list-style-type: none"> 1. Refer to the section of "Maintenance and Cleaning instructions" on pg. 29-32 to clean the grill properly. 2. Replace the damaged parts with factory authorized component.


Care & Use Instructions

LIGHTING INSTRUCTION: MAIN BURNER OF THE GRILL


1. Read instructions before lighting.
2. Make sure all control knobs are in the "OFF" position.

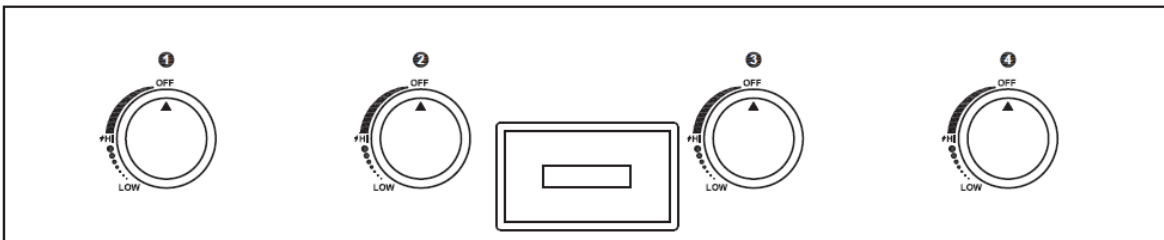


3. Turn ON gas valve from LP tank.
4. The IGNITION BURNER is the 3rd control knob from the left. Light it first. Press and turn the 3rd control knob slowly to "HI". Burner should light immediately.

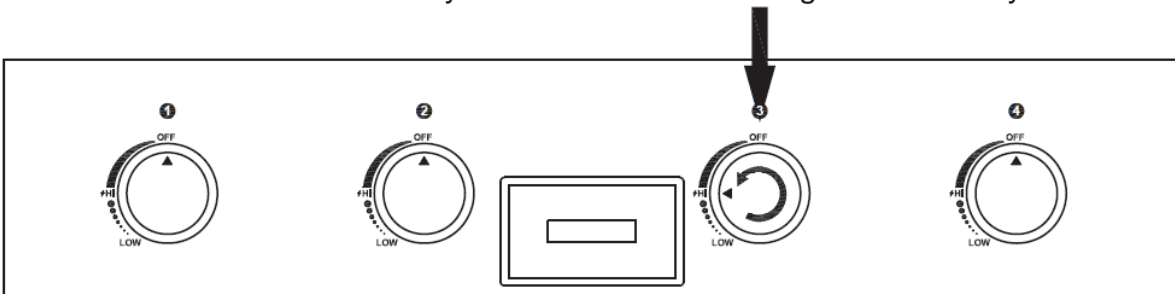

5. If ignition does NOT occur in 5 seconds, turn the burner controls off, wait 5 minutes, and repeat the lighting procedure.
6. Once the IGNITION BURNER is lit, you may light burners 2, 1 and 4 in this order. Just press and turn the control knob to "HI".

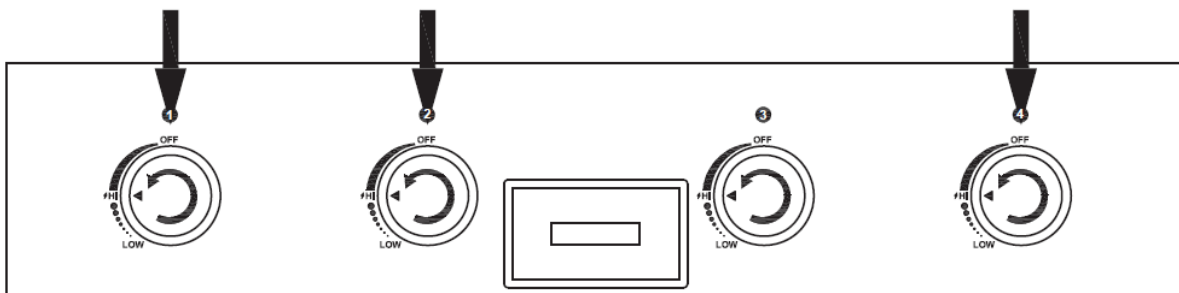


7. To turn burners off, turn the control knobs clockwise until they lock in the **OFF** position.

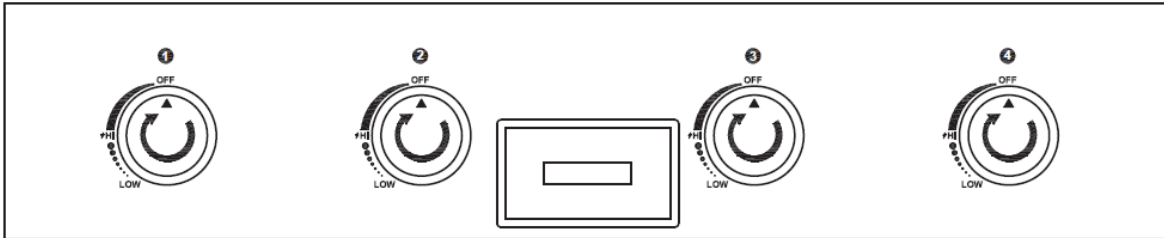

LIGHTING INSTRUCTION: USE MATCH TO LIGHT BURNER

1. Turn **OFF** all burner valves.
2. Place a long lit match through lighting hole in the left hand side of the grill to approximately 1/2" (1 to 2cm) from the burner.
3. Turn the **LEFT Control Knob (1)** to the "HI" position. Burner should light immediately.
4. If ignition does NOT occur in 5 seconds, turn the burner controls off, wait 5 minutes, and repeat the lighting procedure.
5. Once lit, light adjacent burners in sequence by pressing and rotating the control knob to the "HI" position.

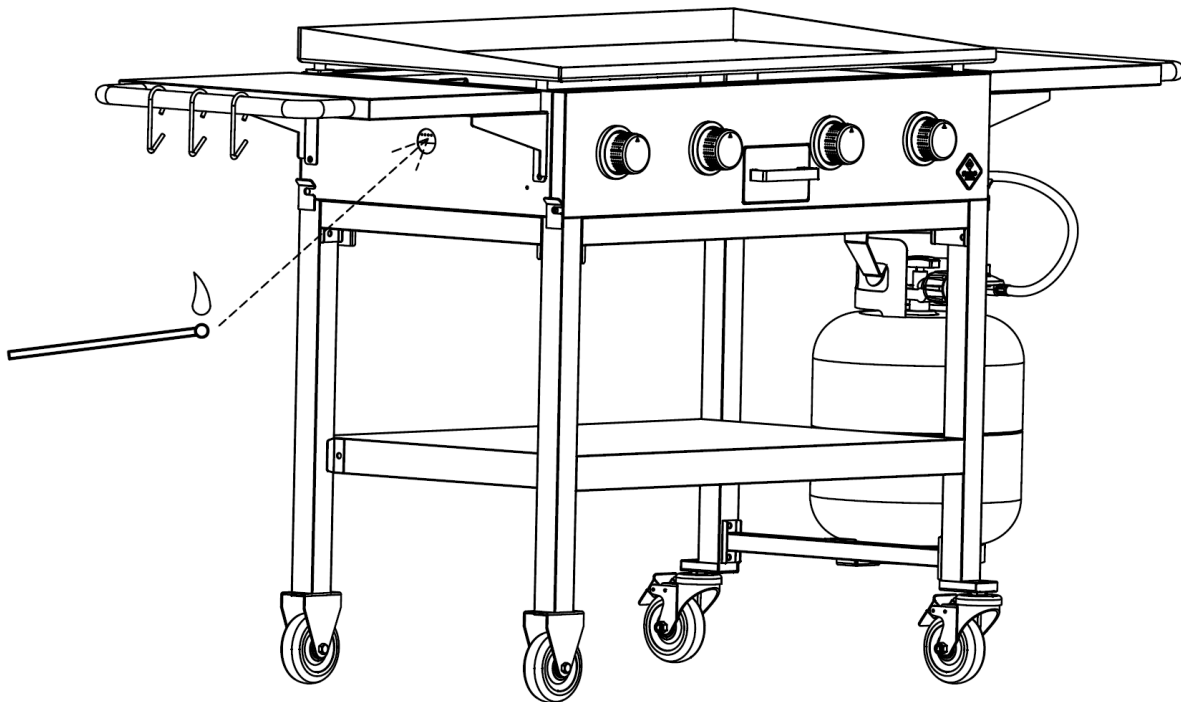

MAINTENANCE & CLEANING INSTRUCTION



CAUTION



- Keep cooking area clear and free from combustible materials, gasoline and other flammable vapors and liquids.
- Do not obstruct combustible and ventilation airflow.
- Keep the ventilation openings of the cylinder enclosure free and clear of debris.
- Check and clean burner/venturi tubes for insects and insect nests. A clogged tube can lead to a fire beneath the grill.

STEEL SURFACES

There are different stainless steel cleaners available. Always use the mildest one for cleaning first and scrub in the direction of the grain. To touch up noticeable scratches in the stainless steel, sand very lightly with dry 100 grit emery paper in the direction of the grain. Specks of grease can gather on the surfaces of the stainless steel and bake on to the surface, giving the appearance of rust. To remove, use a soft abrasive pad in conjunction with a stainless steel cleaner.

GREASE CUP

The grease cup should be emptied, wiped down periodically, then washed with a mild detergent and warm water solution. Check the grease cup frequently. Don't allow excess grease to accumulate and overflow the grease cup.

GRILL BURNERS

Extreme care should be taken when removing a burner, as it must be correctly centered before an attempt is made to relight the grill. Frequency of cleaning will depend on how often you use the grill.


Spiders and small insects occasionally spin webs or make nests in the grill burner tubes during transit and warehousing. These webs can lead to gas flow obstruction that could result in a fire in and around burner tubes. This type of fire is known as flashback and can cause serious damage to your grill and create an unsafe operating condition for the user. Although an obstructed burner tube is not the only cause of flashback, it is the most common cause. To reduce the chance of flashback, you must clean the burner tubes before assembling your grill, and at least once a month in late summer or early fall when spiders are most active. Also, perform this burner tube cleaning procedure if your grill has not been used for an extended period of time.

You should inspect the burners at least once a year or immediately after any of the following conditions occur:

1. **The smell of gas in conjunction with the burner flames appearing yellow.**
2. **The grill does not reach temperature.**
3. **The grill heats unevenly.**
4. **The burners make popping noises.**


BURNER CLEANING:

1. Turn off the gas supply, and make sure all the knobs are in the **OFF** position.
2. Wait for the grill to cool.
3. Remove the griddle.
4. Remove the burner fixing bolt and lift the burner out of the firebox.
5. Clean the exterior of the burner with a brass brush. Use a metal scraper to remove stubborn stains.
6. Clear clogged ports with a straightened paper clip. Never use a wooden toothpick as it may break off and clog the port.
7. If insects or other obstructions are blocking the flow of gas through the burner, call customer service at 1-888-837-1380. Make sure to center the burner over the orifice.

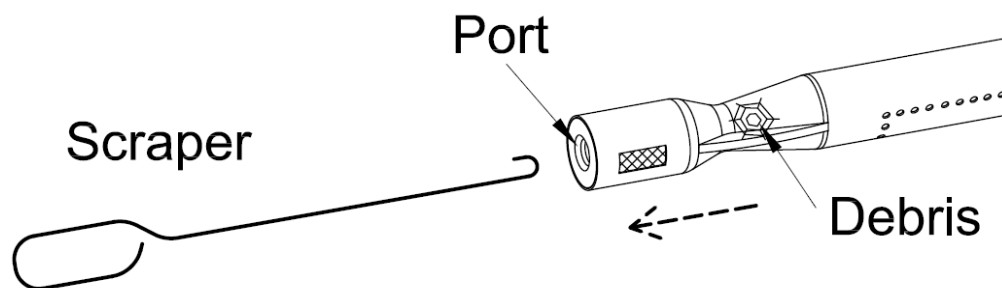


MAIN BURNER REPLACEMENT:

1. Remove the griddle.
2. Remove the burner fixing bolt as shown.
3. Remove the carry over.
4. Remove the burner from the grill body.

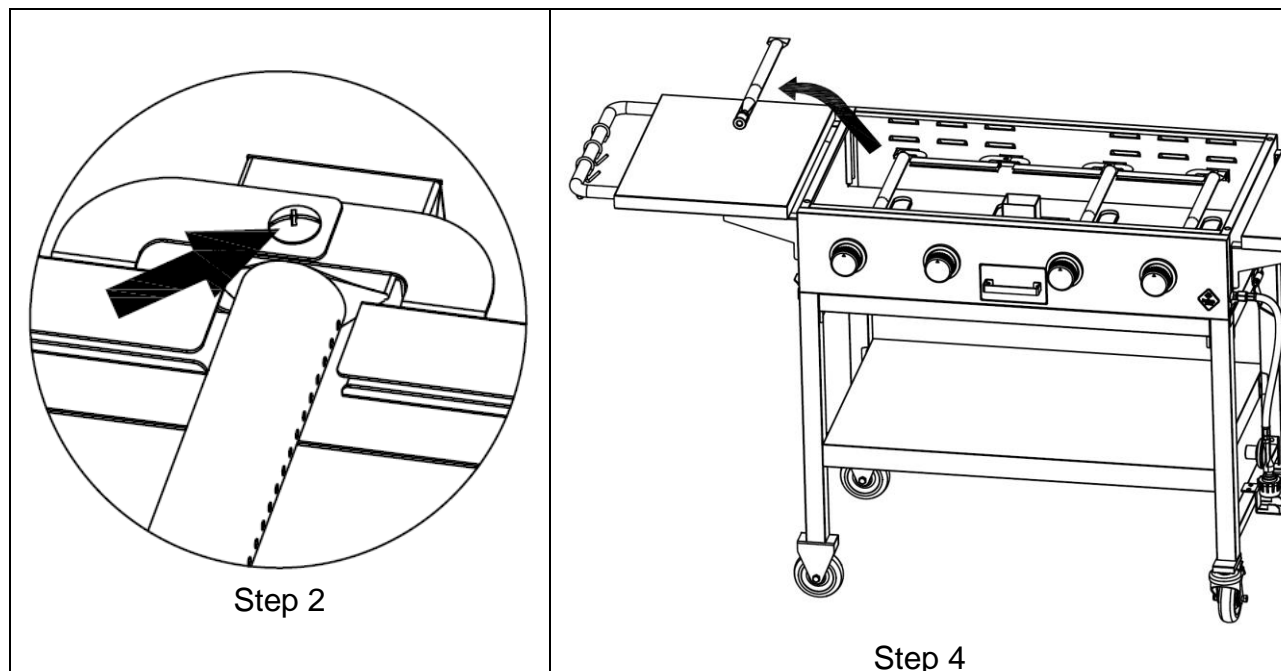

TO REINSTALL THE MAIN BURNERS:


1. Insert the burner into the burner valve.
2. Firmly seat the valve connector into the burner tube. Make sure the valve orifice is inserted **STRAIGHTLY** into the burner tube as per below diagram.
3. Reinstall the carry over and tighten with the burner fixing bolt as shown.

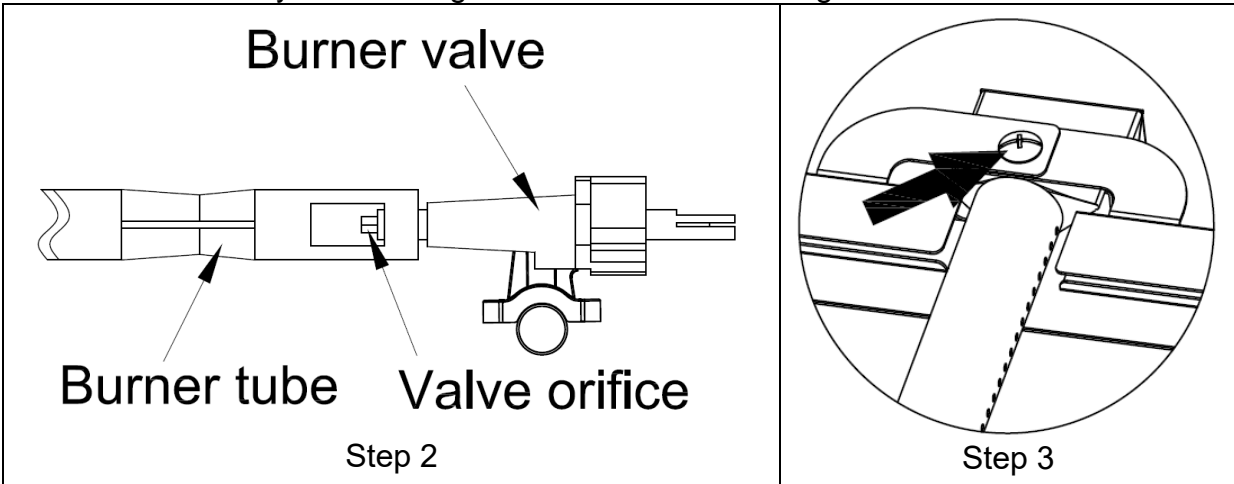

PROPERLY INSTALL THE BURNER

Firmly seat the valve orifice into the burner tube. Make sure the valve orifice is inserted **STRAIGHTLY** into the burner tube.

Burner flames will be yellow, with excessive noise, lifting or flash back if the burner is not installed properly.

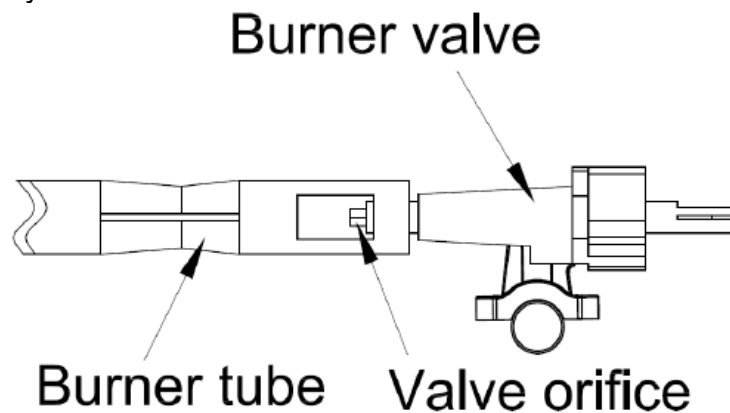

SEASONING THE GRIDDLE

Seasoning is a process by which oil is baked into metal to create a stick-resistance surface and helps to prevent rusting. It can prolong the life of your griddle.

First time use:

Wash your griddle cooking surface with a mild dishwashing detergent. Rinse with hot water and dry completely with a soft cloth or paper towel.

Seasoning:

Vegetable oil or extra virgin olive oil is recommended for initial seasoning.

1, Apply a small amount of oil (about 2-3 Tablespoons) and spread over the entire surface, including all corners, with a paper towel. Do not use salted fats such as butter or margarine.

2, Turn your unit on medium-high heat.

3, Heat the oil to its “smoke point” and let it continue to heat on the griddle top until it stops smoking. Your griddle top will start to discolor. This is normal.

4, When the oil stops smoking (around 20-25 minutes), turn your unit off then cool down to do another oil coating.

5, Repeat steps 1 to 3 a few times until a nice dark surface on the griddle.

CLEANING AND MAINTAINING THE GRIDDLE

To clean the griddle after each use, gently scrape off all food residues with the supplier scraper (22) and wipe down the griddle surface with a cloth or paper towel. For stubborn food residues, pour water onto the hot griddle surface and let it boil the residues off.

After you have used your griddle, you should apply a thin coat of cooking oil to maintain the seasoning bond and protect it from rust. Store your unit in a cool and dry place.

TO PREVENT RUSTING

Re-season your griddle frequently. If rust occurs, rub it off with steel wool or high grit sandpaper and re-season the surface. Remind to always completely dry the griddle before storing and keep away from rain and sprinklers.

Technical Data

Input rating: 4 x 15,000 BTU/HR

Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://www.samsclub.com/membersmarkhelp)

Warranty Information

1. Manufacturer warrants this Product to be free from defects in workmanship and materials for a period of Ninety (90) days from the date of purchase, PROVIDED claims are submitted, in writing, with proof of purchase.
2. If any part of this item fails because of a manufacturing defect within the Limited Warranty Period, Manufacturer offers to replace such part(s) provided that such parts have not been improperly repaired, altered, or tampered with or subject to misuse, abuse or exposed to corrosive conditions. This Limited Warranty is, however, subject to certain limitations, exclusions, time limits and exceptions (Hereinafter "Conditions") as listed below. Read these Conditions carefully.
3. This Limited Warranty shall be limited to the replacement or repair of any part(s) which Manufacturer determines, after reasonable examination, to have been defective at the time of manufacturing and manufacturer's obligation(s) shall be limited to replacement, if any, of defective part(s) which shall be shipped at Original Purchaser's expense to Original Purchaser's designated shipping address.
4. This Limited Warranty is given to and covers the **ORIGINAL PURCHASER ONLY** and such coverage terminates Ninety (90) days from the date of purchase.
5. **DAMAGE LIMITATION WARNING:** IN NO EVENT SHALL MANUFACTURER BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING (BUT NOT LIMITED TO) LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF FOOD, INCONVENIENCE, EXPENSES FOR TRAVEL, TRANSPORTATION LODGING EXPENSES, LOSS BY DAMAGE TO PERSONAL PROPERTY OR LOSS OF INCOME, PROFITS OR REVENUE.
6. **MANUFACTURER'S OBLIGATION:** Manufacturer's liability shall be limited to the delivery of a good, merchantable Product and, if necessary, the repair or replacement, at manufacturer's option, of any defective part or unit.
7. **TRANSFER LIMITATIONS:** This Limited Warranty is not assignable or transferable. It covers only the original purchaser.
8. **RESERVED RIGHT TO CHANGE:** Manufacturer reserves the right to make changes or improvements to products it produces in the future without imposing on itself any obligations to install the same improvements in the products it has previously manufactured.
9. This Limited Warranty gives the Original Purchaser specific legal rights but there may be other rights which vary by jurisdiction.
10. This warranty does not cover the following items:
 - Chips or scratches on porcelain or painted surfaces.
 - Rust or corrosion is not deemed a manufacturing or materials defect.
 - Discoloration or loss of paint due to handling during assembly, heat or cleaning products. Paint may require touch up.
 - Stainless steel discoloration or corrosion.
 - Consumables such as batteries.

IF CUSTOMER SERVICE BECOME NECESSARY:

1. The Original Purchaser is responsible for shipping and handling charges of the returned item(s) and replacement parts, if any.
2. All parts to be replaced will need to be shipped before replacement items will be sent.
3. Follow the Customer Service Representative's instructions exactly. If a return is necessary, it must be packed carefully and shipped prepaid.

Should you encounter any problem,
CALL US FIRST.

Do not return product to the store.
WE CAN HELP.

For assistance, contact customer service at customerservice@rankam.com
or at 1-888-837-1380, Mon to Fri, 8:00am – 5:00pm Pacific Standard time

Manufacturer information

Rankam (China) Manufacturing Company Limited
Address: 18/F, New Lee Wah Centre, 88 Tokwawan Road, Kowloon, Hong Kong.

NOTE: Please consider recycling all applicable packaging material.

Distributed by Sam's West Inc.
2101 SE Simple Savings Dr.
Bentonville, Arkansas 72716-0745

Made in China



Need Assistance? Visit us at: [samsclub.com/membersmarkhelp](https://www.samsclub.com/membersmarkhelp)