

# **SUICK<sub>START</sub> GUIDE**

## INVERTER GENERATOR SUA2300i / SC2300i **1800** RUNNING WATTS **2300** STARTING WATTS VATIOS CONTINUOS



#### ADD OIL:

Place unit on a flat surface, open access panel, remove oil fill cap/dipstick. With provided funnel, add 0.4 Qt / .38 L / 12.8 Oz of SAE 10W-30 oil. Replace fill cap/dipstick.





Once engine starts & stabilizes> rotate MULTI-Switch from 'Choke/Start" position to RUN.

## TO STOP:



Disconnect electrical items from unit. Rotate MULTI-Switch to STOP. Turn fuel cap air vent to "OFF".









#### **ADD GAS:**

Fill with fresh, unleaded fuel. Capacity: 1.1 Gal. / 4.2 L. Min. 87 Octane, 0-10% Ethanol



 


Move inverter to well ventilated area.














### **A** DANGER

 ISING A GENERATOR INDOORS **CAN KILL YOU IN MINUTES**. GENERATOR EXHAUST CONTAINS CARBON MONOXIDE. THIS IS A POISON YOU CANNOT SEE OR SMELL.









ONLY USE **OUTSIDE** AND FAR AWAY FROM WINDOWS. DOORS, AND VENTS.

## **A** PELIGRO

 
**USAR EL GENERATOR EN INTERIORES** LO PUEDE MATAR EN MINUTOS.

 
EL ESCAPE DEL GENERATOR CONTIENE MONÓXIDO DE CARBONO. ESTE GAS ES UN VENENO QUE NO SE PUEDE VER NI OLER.

**NUNCA USE EL GENERADOR DENTRO** DEL HOGAR O EL GARAJE, AÚN SI LAS PUERTAS Y VENTANAS ESTÁN ABIERTAS

SOLO USELO EN EXTERIORES Y LEJOS DE VENTILACIONES, PUERTAS Y VENTANAS ABIERTAS.

## **AWARNING**







Only operate generator outdoors as the engine gives off carbon monoxide, an oderless and colorless gas, Inhaling carbon monoxide will cause nausea, fainting or possible death.

ANYONE using or servicing generator must read and follow all safety and operation instructions provided in product manual. Failure to follow instructions may result in circumstances leading to death, injury and property damage.



CRANKCASE CAPACITY:

0.4 Quart • 0.38 Liter • 12.8 Ounce • SAE 10W-30

