 


details

— by BECKI OWENS

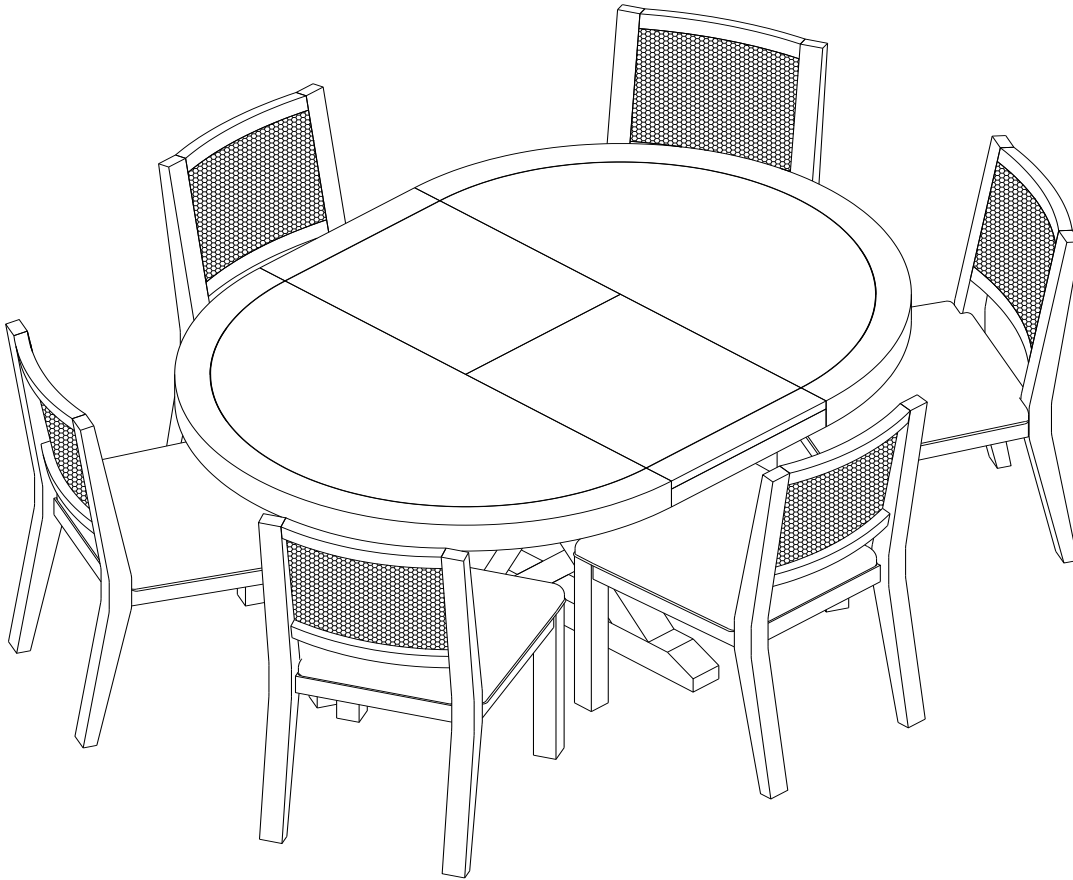

IVY DINING SET

Assembly Instructions

THIS INSTRUCTION BOOKLET CONTAINS
IMPORTANT SAFETY INFORMATION. PLEASE
READ AND KEEP FOR FUTURE REFERENCE

Model# 23-SCD9

 
Customer Service Phone: 1-866-822-8523
9:00 am to 4:00 pm CST, Mon. thru Fri.

EMAIL: MemberSupport@davalonllc.com

Failure to follow these warnings and assembly instructions could result in serious injury or death. Read **all** instructions before assembling the dining set. Keep the assembly instructions for future use. Before each usage or assembly, inspect the item for damaged hardware, or missing parts. **DO NOT** use this dining set if any parts are missing or broken. **DO NOT** substitute parts.


DINING TABLE

Assembly Instructions

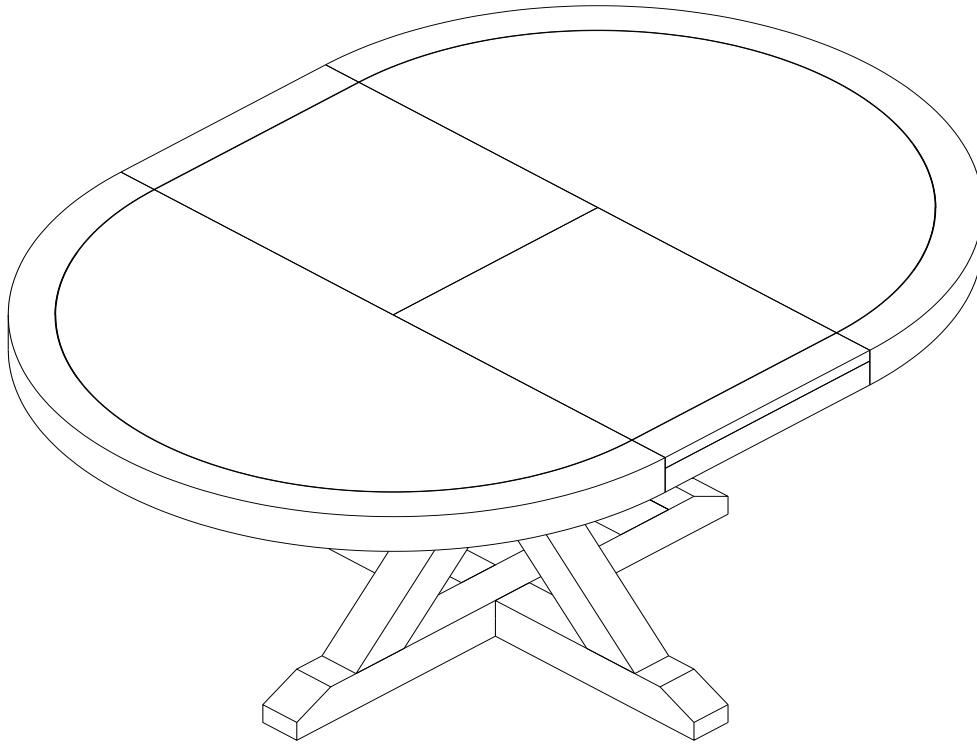


PARTS

 
- Ⓐ Table Top
1 pc
(not replaceable)

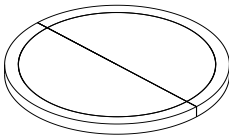


- Ⓑ X Leg Base
1 pc

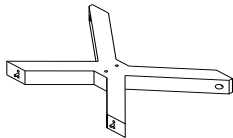 


- Ⓒ Support Leg
2 pcs

 

- Ⓓ Base
1 pc

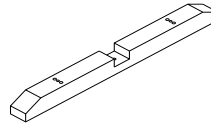 

- Ⓔ Base
1 pc

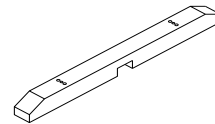 


HARDWARE

- ① Bolt 3"
8 pcs



 - ② Bolt 2"
5 pcs





- ③ Lock Washer
13 pcs



- ④ Flat Washer
13 pcs



  - ⑤ Allen Key
1 pc

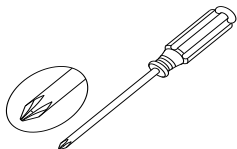


**A Phillips screwdriver is necessary for assembly.
It's not included in hardware list.**

details

by BECKI OWENS


STEP 1

 Place the table top (A) upside down on a non-abrasive surface such as carpet. **Use A Phillips screwdriver to unscrew and remove the 4 leaf holders first before assemble the leg base.**

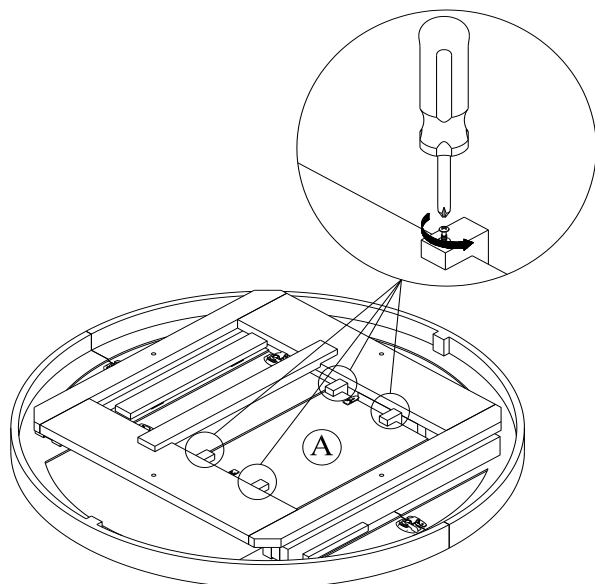


STEP 2

 Place X Leg Base (B) on the table top (A).

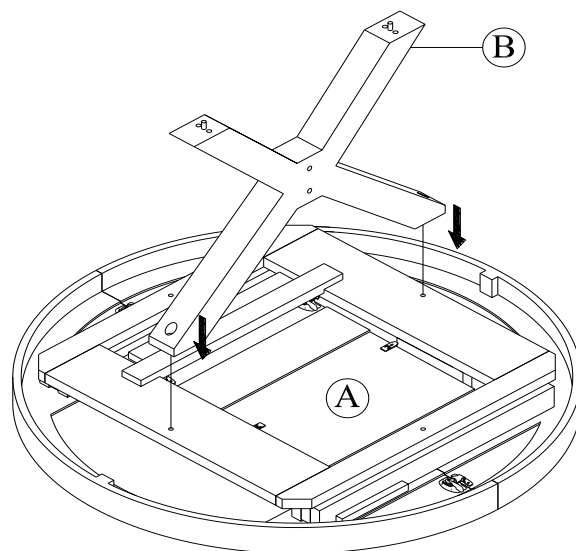


STEP 3

 Assembly using 2" bolts (2), lock washers (3), and flat washers (4). Tighten all bolts fully.

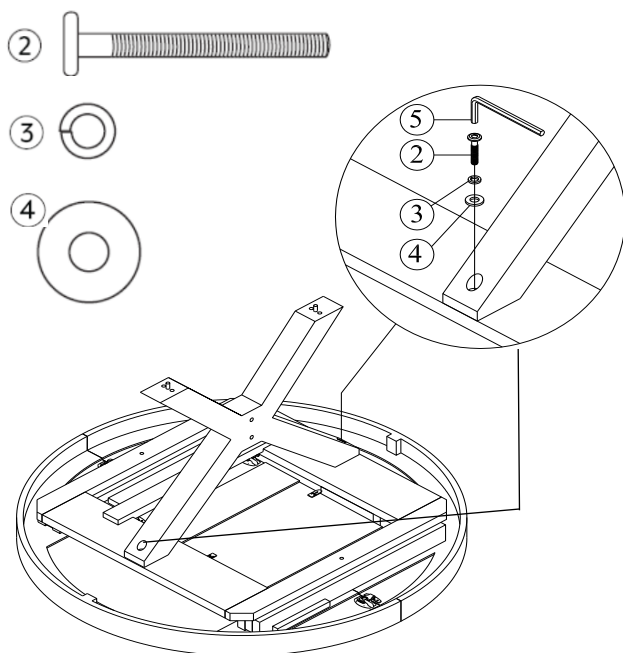

STEP 4

 Align Support Leg (C) to X Leg Base (B).

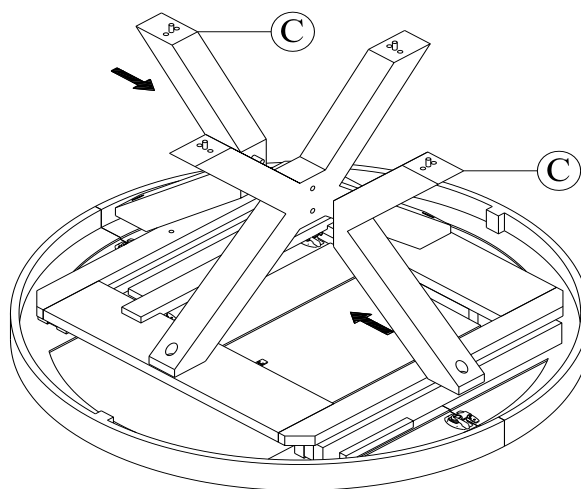


details

by BECKI OWENS


STEP 5

 Assembly using 2" bolts (2), lock washers (3), and flat washers (4). Tighten all bolts fully.

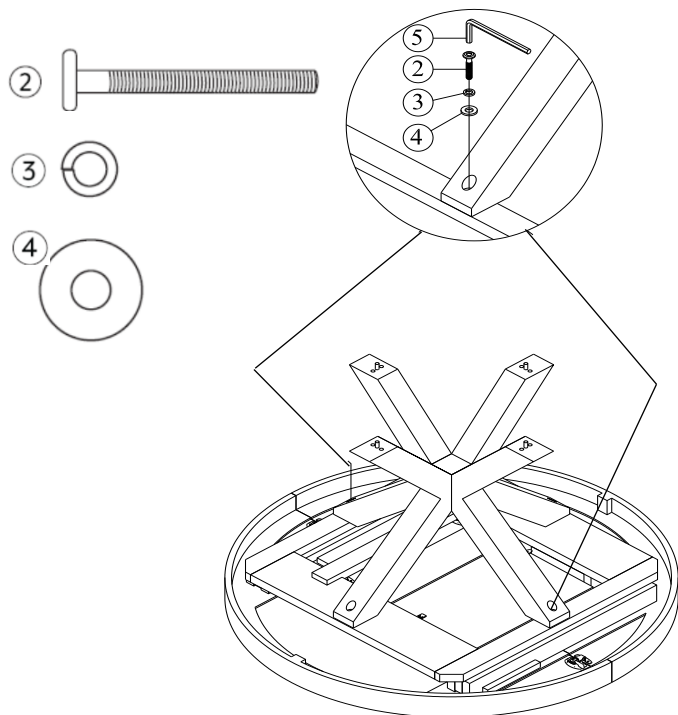


STEP 6

 Align and place base (E) onto the legs corresponding holes. Then align and fit Base (D) onto the Base (E) and the legs corresponding holes.

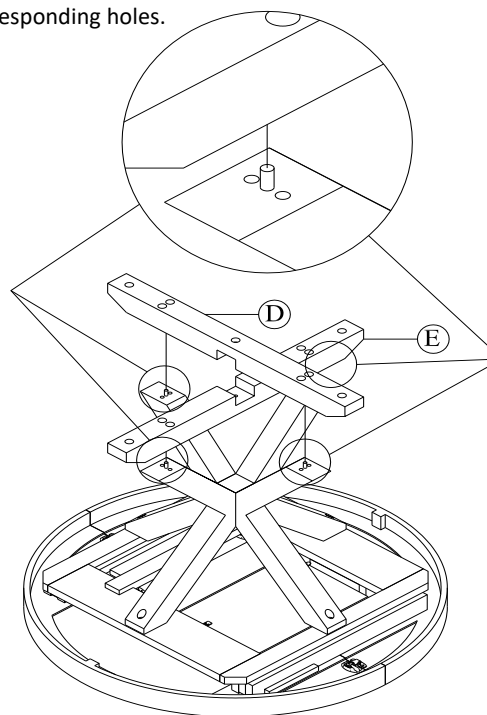


STEP 7

 Assembly Base (E) using 3" bolts (1), lock washers (3), and flat washers (4). Tighten all the bolts fully.

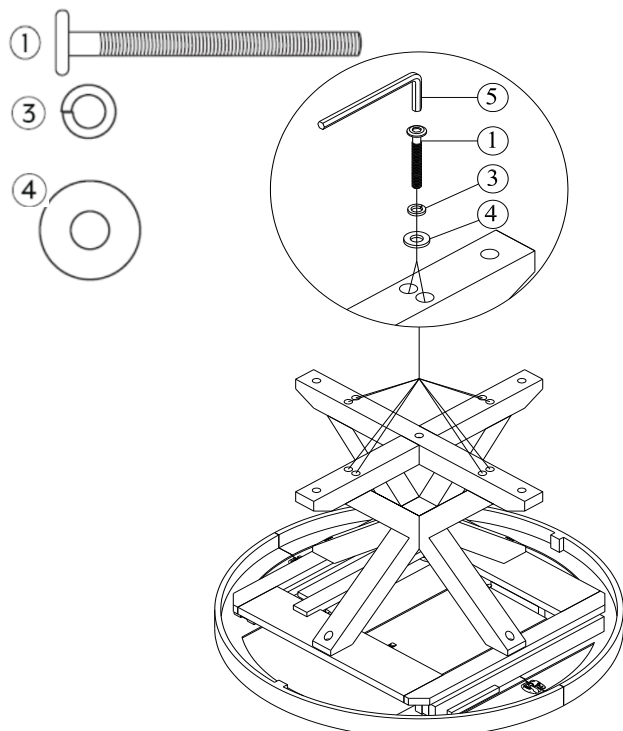

STEP 8

 Assembly using 2" bolt (2), lock washer (3), and flat washer (4). Tighten the bolt fully.

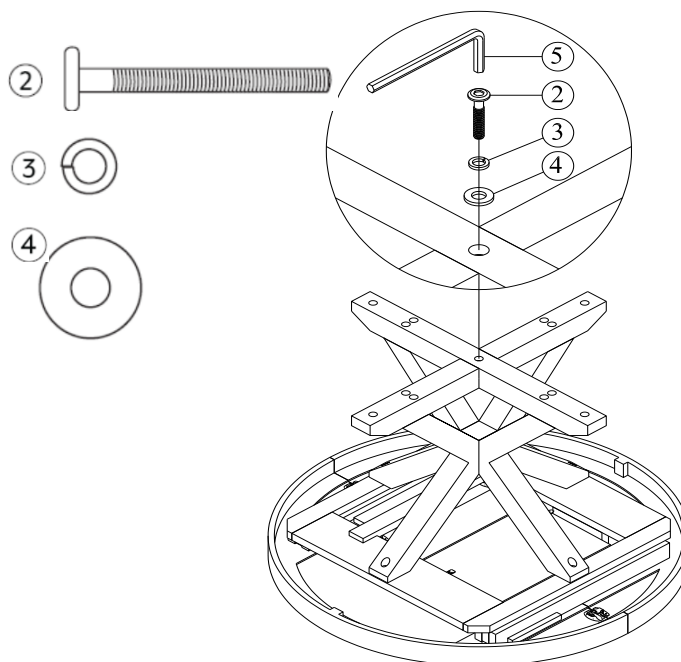


details

by BECKI OWENS


STEP 9

 Adjust feet caps of the table legs.

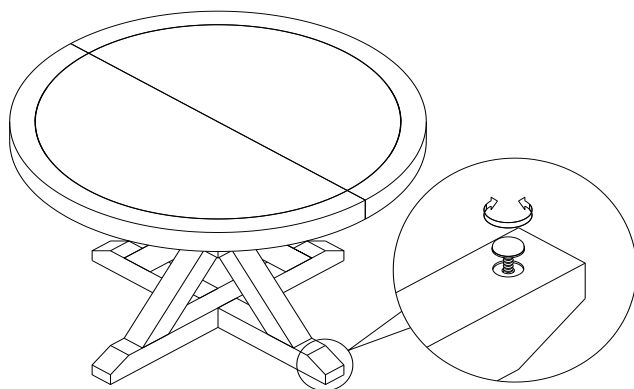


STEP 10

 Unlock latches first, next to stretch out table tops,

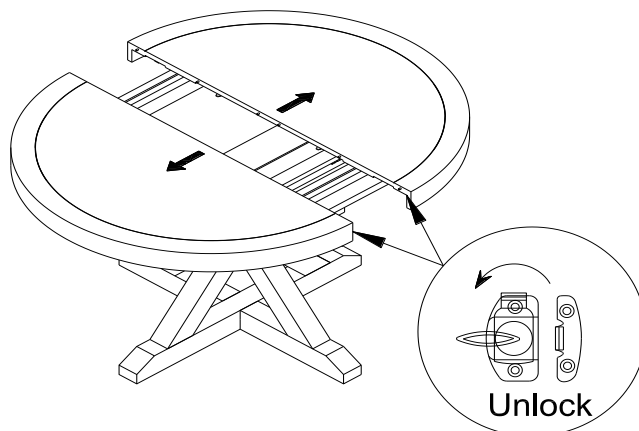



STEP 11

 Pull out concealed butterfly panels and get them flated.

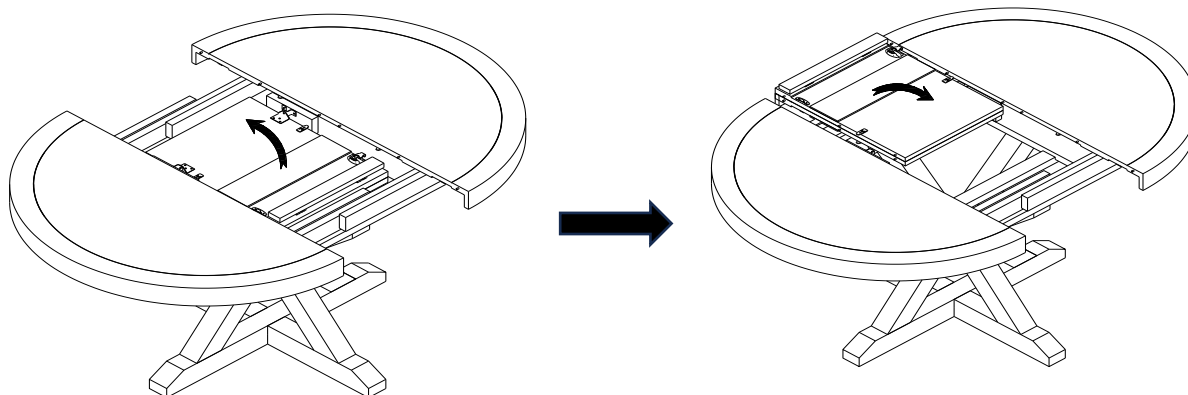

STEP 12

  Fold down both side leaf aprons.

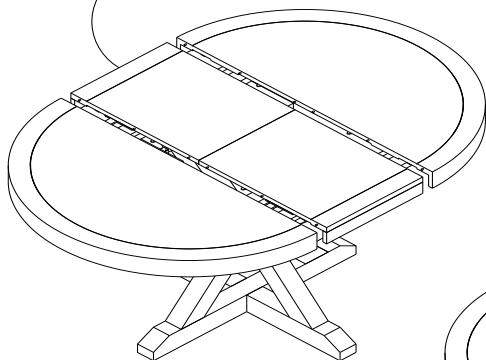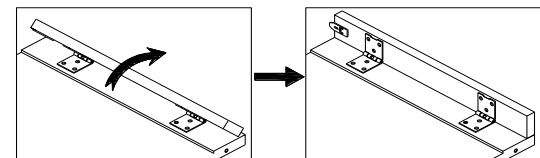

STEP 13

Pinch table tops gently, then lock.

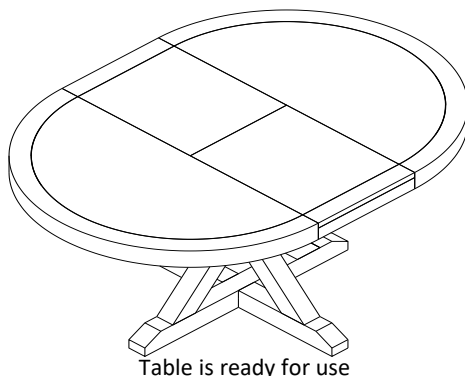 
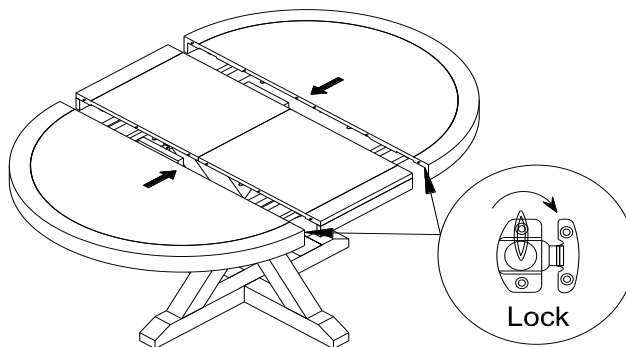 



Table is ready for use

details

by BECKI OWENS

details

 — by BECKI OWENS

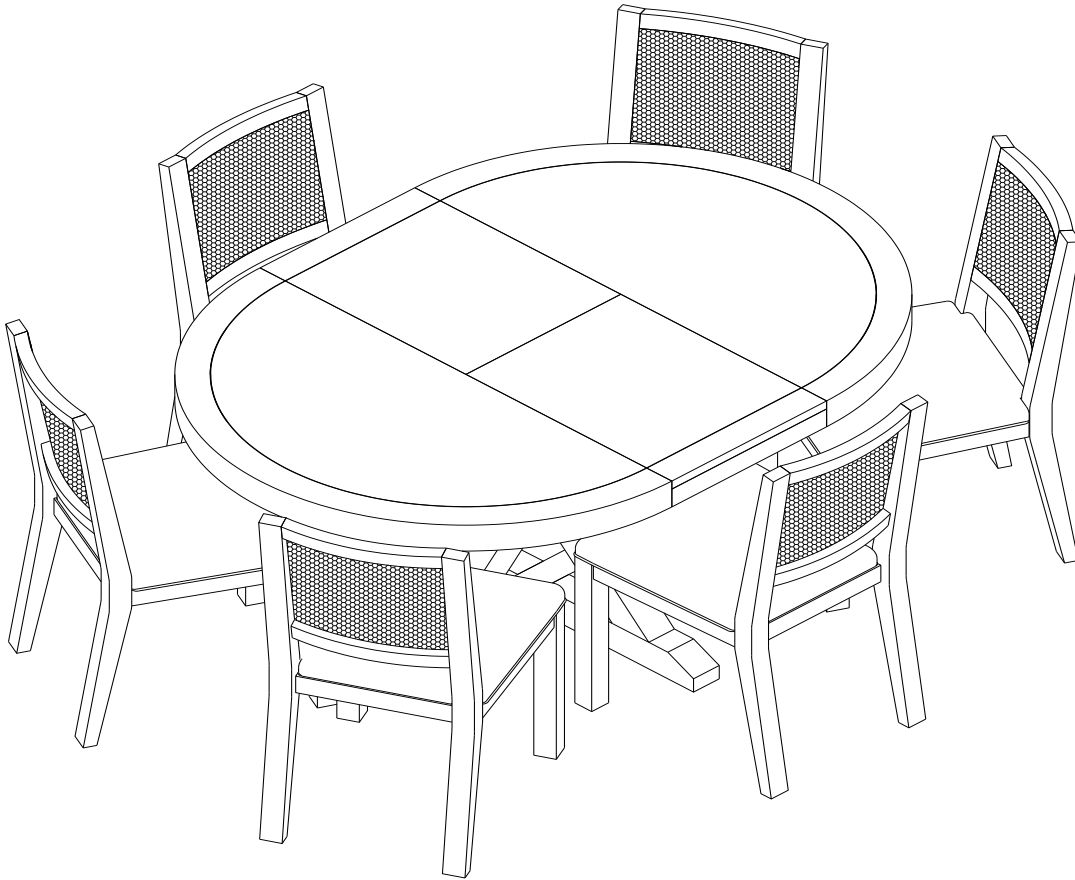

IVY DINING SET

Assembly Instructions

THIS INSTRUCTION BOOKLET CONTAINS
IMPORTANT SAFETY INFORMATION. PLEASE
READ AND KEEP FOR FUTURE REFERENCE

Model# 23-SCD9

Customer Service Phone: 1-866-822-8523

 
9:00 am to 4:00 pm CST, Mon. thru Fri.

EMAIL: MemberSupport@davalonllc.com

Failure to follow these warnings and assembly instructions could result in serious injury or death. Read **all** instructions before assembling the dining set. Keep the assembly instructions for future use. Before each usage or assembly, inspect the item for damaged hardware, or missing parts. **DO NOT** use this dining set if any parts are missing or broken. **DO NOT** substitute parts.


DINING CHAIR

Assembly Instructions

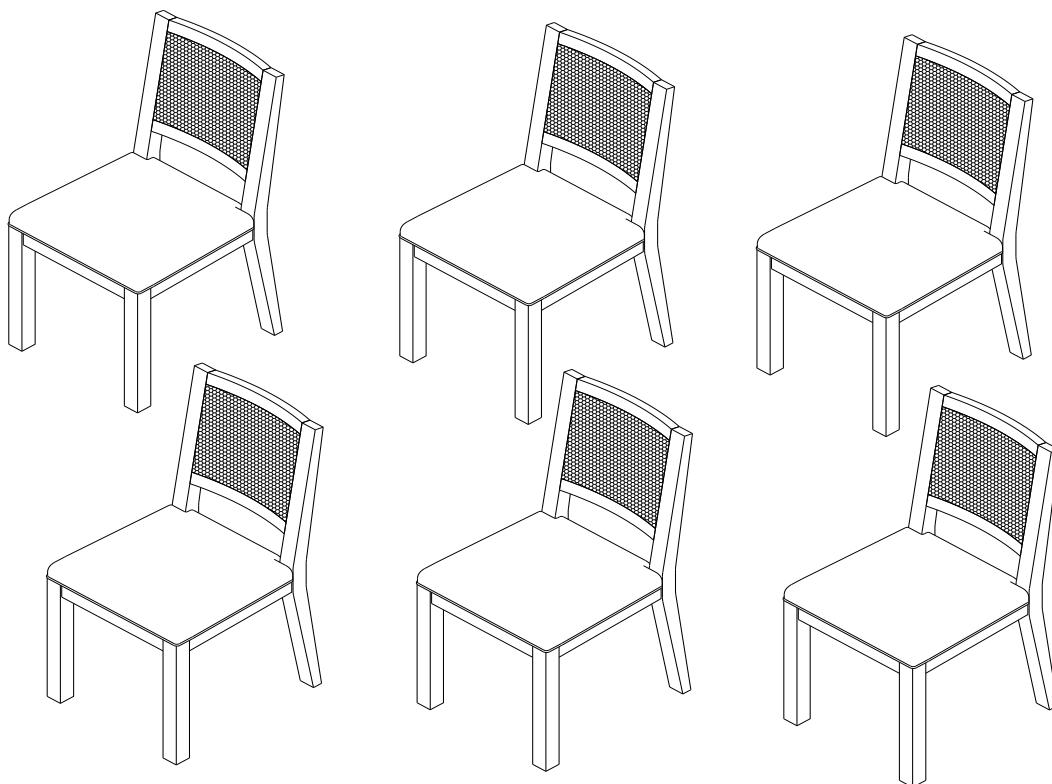


PARTS

 
- Ⓐ Chair Backrest
6 pcs

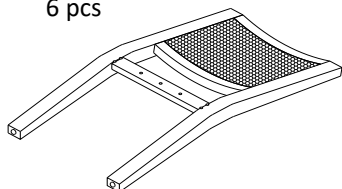

- Ⓑ Seat Frame with Cushion
6 pcs

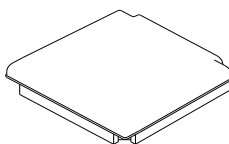 

- Ⓒ Chair Front Leg
12 pcs

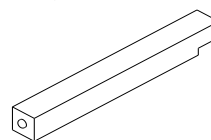 


HARDWARE


- ① Bolt 3"
24 pcs



 - ② Bolt 1.75"
24 pcs



- ③ Bolt 1.5"
12 pcs

 


- ④ Lock Washer
60 pcs



- ⑤ Flat Washer
60 pcs



 - ⑥ Allen Key
1 pc




details

by BECKI OWENS

STEP 1

 Lay chair back (A) on its back, attach Chair seat (B) to chair back.

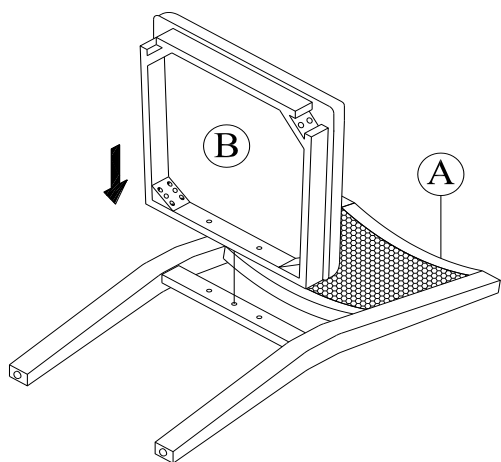


Note:

Do not fully tighten bolts until setup is complete.


STEP 2

 Attach seat frame (B) to chair backrest (A) using 1.5" bolt (3), lock washer (4), and flat washer (5), but do not fully tighten bolts.

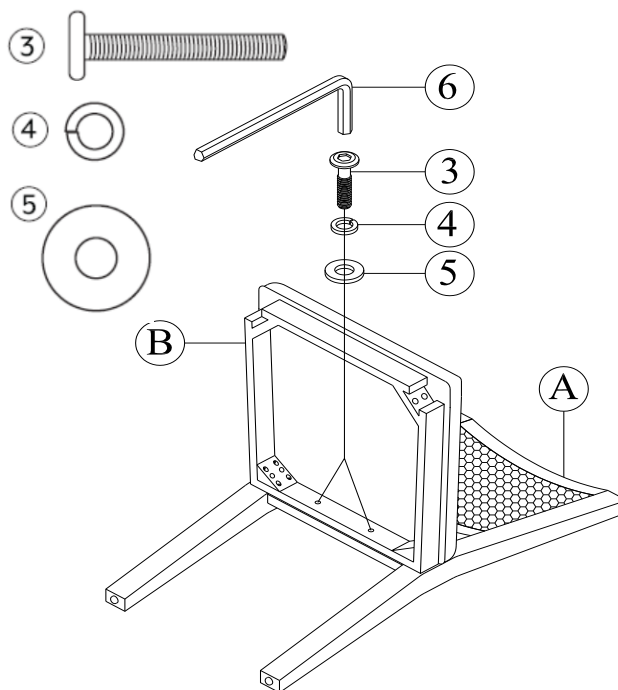


STEP 3

 Insert 3" bolts (1) into rear corner holes using lock washers (4) and flat washers (5), but do not fully tighten bolts.

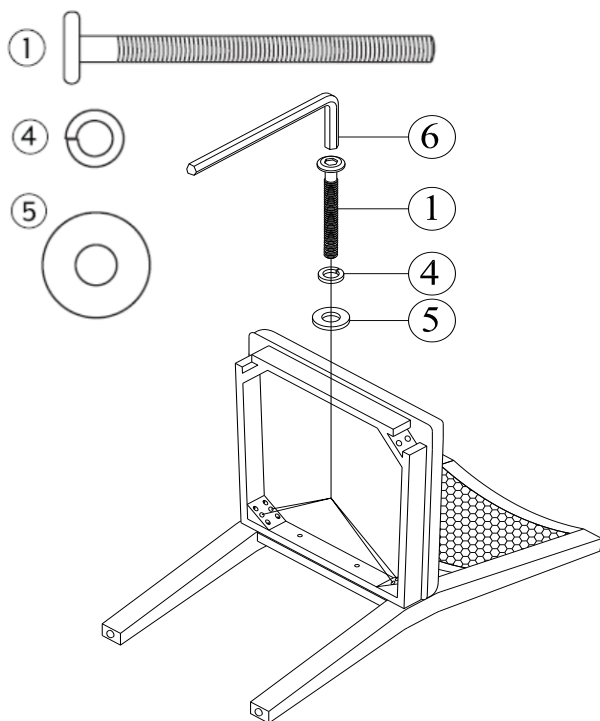

STEP 4

 Attach chair front legs (C) using 1.75" bolt (2) with lock washers (4) and flat washers (5). Turn the assembled chair in upright position, make sure the chair unit is level and square, then tighten all bolts. Repeat for remaining chairs.

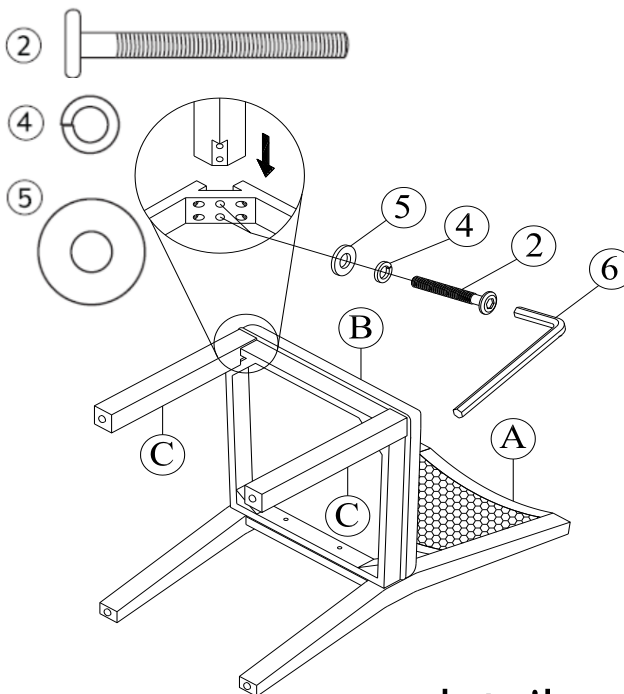

details

by BECKI OWENS