

SUA2000i CONTROL PANEL

INFO CENTER

- OUTPUT READY
- OVERLOAD WARNING
- LOW OIL ALERT

ECO THROTTLE

AUTOMATICALLY
ADJUSTS RPM BASED
ON DEMAND


120V AC POWER

RV READY

- L5-30A, 120V OUTLET
- ADAPTOR INCLUDED

12V MULTI-FUNCTION PORT

12VDC ADAPTOR PLUG / USB READY

USB
READY 

CIRCUIT BREAKER

ENGINE / FUEL CONTROL SWITCH

GROUND

PARALLEL READY

- SIMPLE PLUG & PLAY
TECHNOLOGY
- PARALLEL CORDS INCLUDED



SUA2000i PARALLEL READY



GENERATE MORE POWER BY PAIRING A SECOND SUA2000i INVERTER

- PARALLEL CORDS INCLUDED
- NO COSTLY JUNCTION BOX OR EXTRA CORDS NEEDED
- SIMPLY PLUG & PLAY TECHNOLOGY **1-2-3-4!**

SUA2000i SIMPLE STARTING

Add your fuel & assure oil (included) has been added and is at safe operating level.

STEP 1: OPEN FUEL VENT

STEP 2: TURN MULTI-SWITCH TO START

STEP 3: PULL CORD TO START

STEP 4: TURN MULTI-SWITCH TO RUN



SUA2000i EASY ACCESS; OIL, FILTER, PLUG

Built In Fuel Gauge

Spark Plug Access

Access To
Air Cleaner
& Oil Fill

Remove Screws &
Panel

SPARK PLUG REFERENCE AREA



Recommended Replacement Chart

Champion

L95YC

GAP:

NGK

BP4H

.028"

Torch

E5T

or

.7mm

i POWER


SUA2000i
1600 Starting Watts 2000 Running Watts

**AIR CLEANER
MAINTENANCE**
Clean element every 50 hours (10 hours under
dusty conditions). Rinse in cleansing solvent, dry,
immerse in clean engine oil, squeeze out excess oil.
Air Cleaner
Access Panel


Weight:
10W-30
Capacity:
0.4 Qt • .38 L • 12.8 Oz

AIR CLEANER MAINTENANCE

 Clean element every 50 hours (10 hours under
dusty conditions). Rinse in cleansing solvent, dry,
immerse in clean engine oil, squeeze out excess oil.



**Air Cleaner
Access Panel**

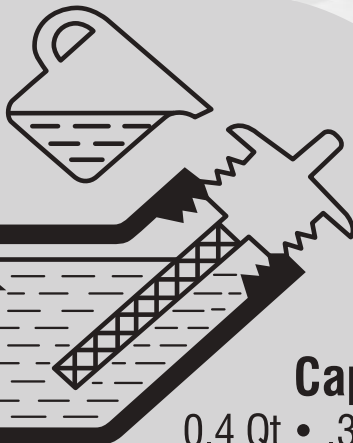


Weight:
10W-30

Capacity:

0.4 Qt • .38 L • 12.8 Oz

SUA2000i ACCESSORIES

Included Items

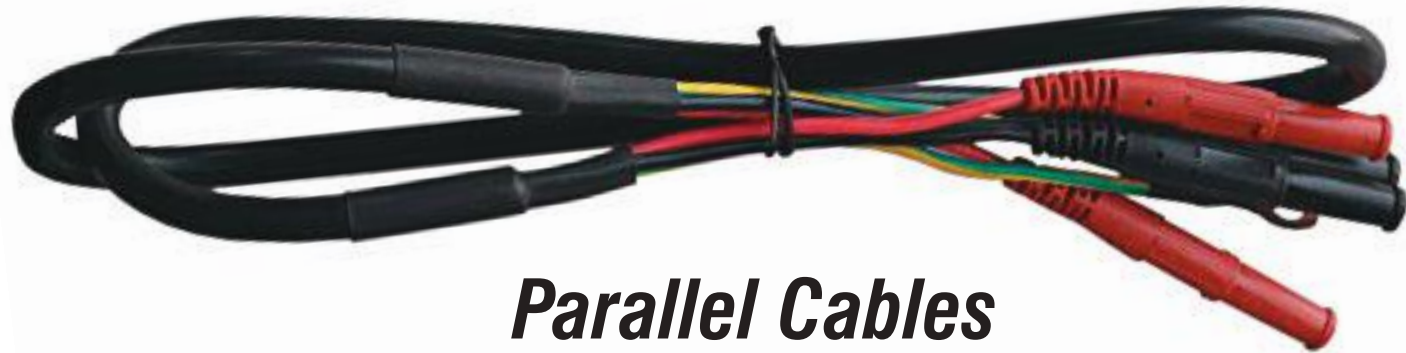

Parallel Cables



12V DC Charging Cables



Tools



30 Amp RV Adapter

